



# Standard Legs for DF version display




1. Remove front cover. Invert unit, resting on the top frame.

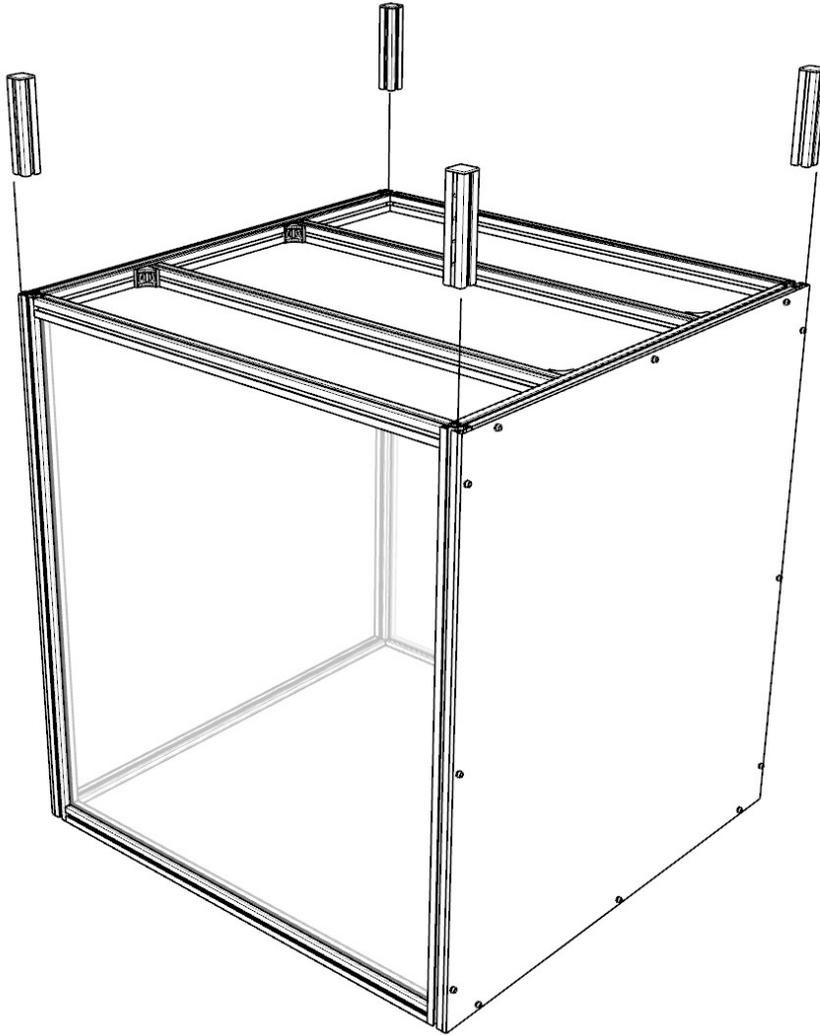

2. Using an allenkey to loosen the bolt

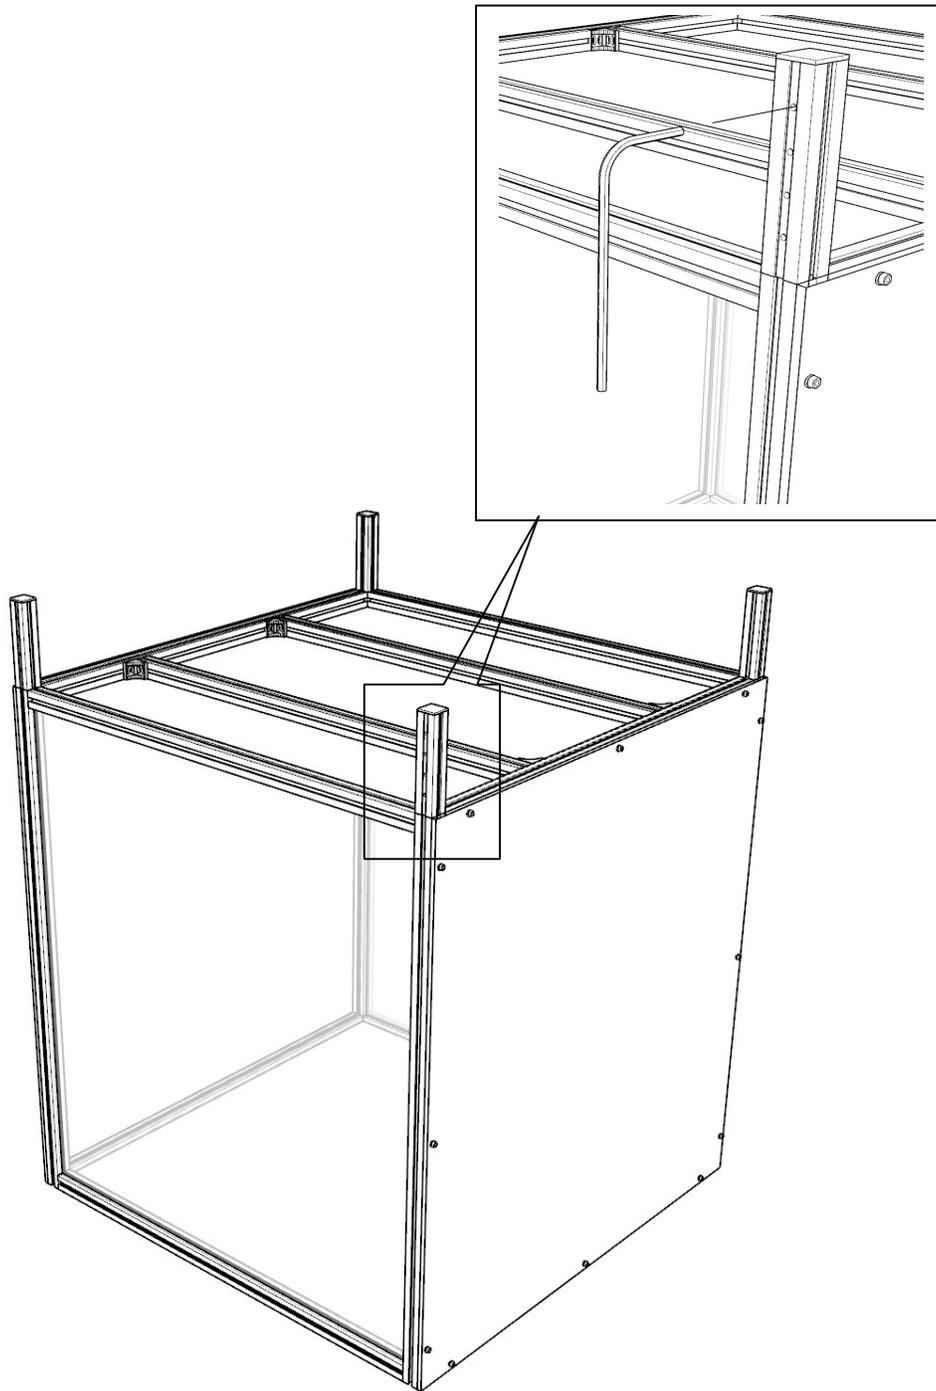

3. Slide the vertical stack bar. One bolt on the leg and the other on the display frame. Tighten the bolts.

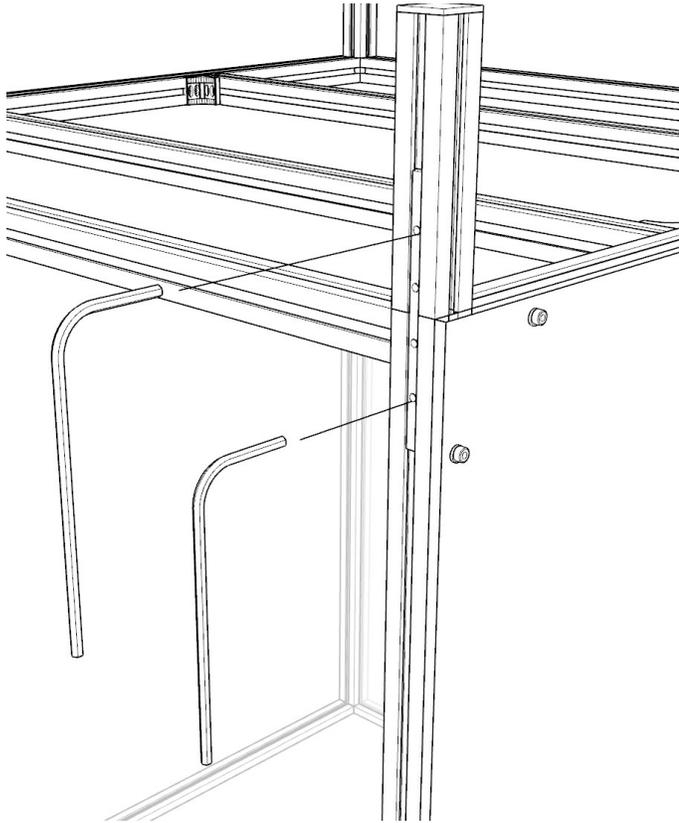

4. Repeat step 3 for the 3 legs.