


**MODU
SPACE**

Bespoke Showcase Engineers

DF120 Assembly Guide


Version 3.0

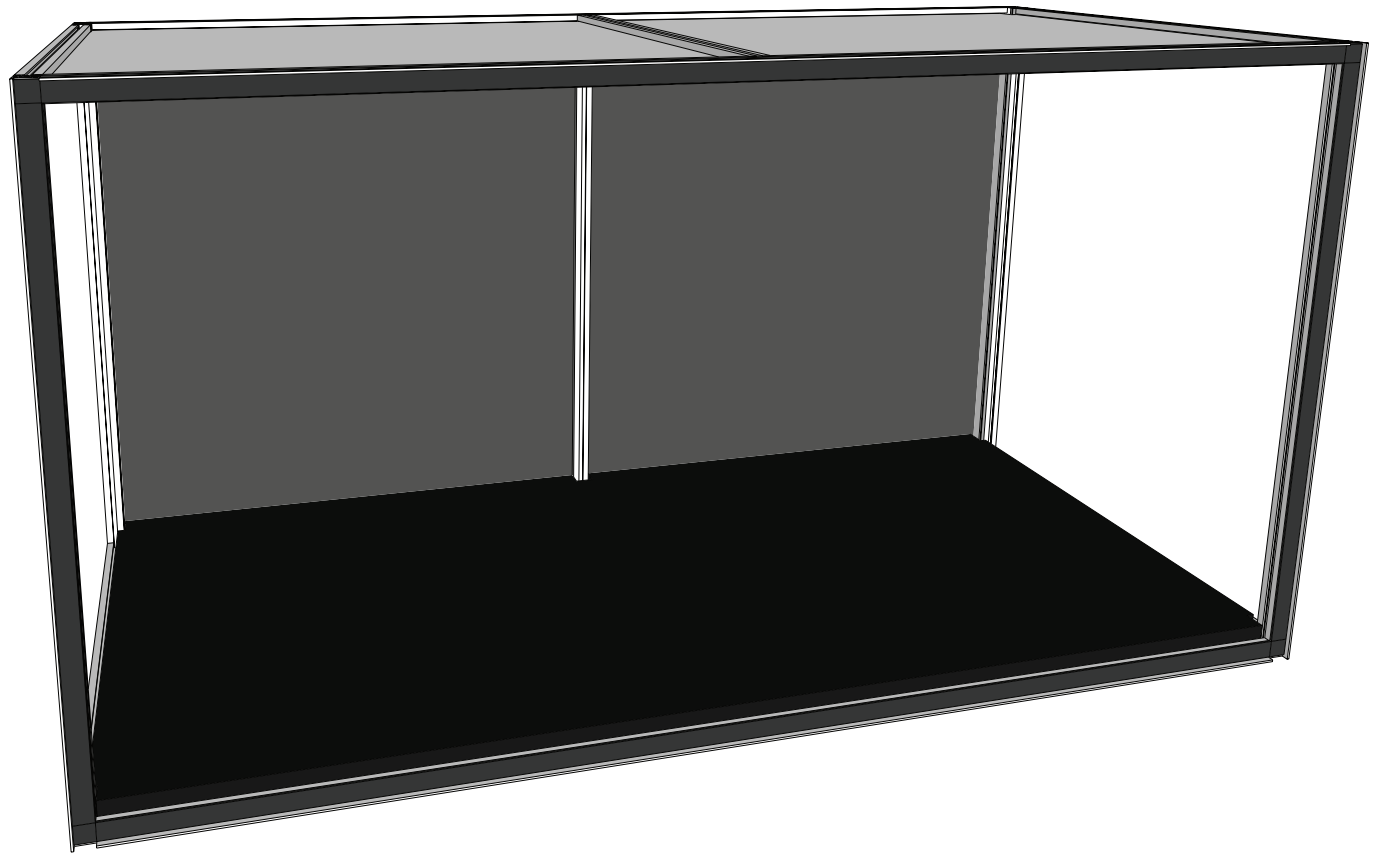


Back Frame
Middle Vertical Bar




Back Frame
Vertical Bar x 2

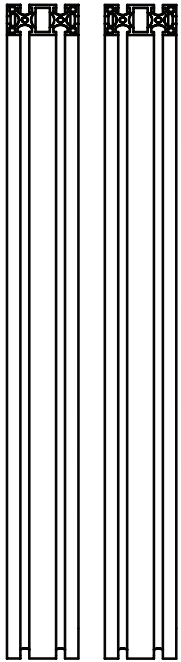


Back Frame
Horizontal Bar x 2

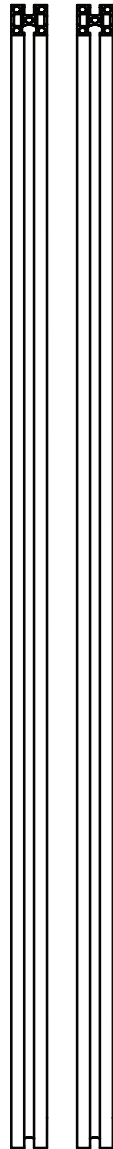


Front Frame
Horizontal Bar x2

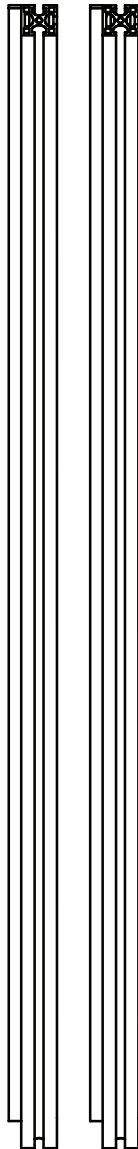


Front Frame
Vertical Bar x 2

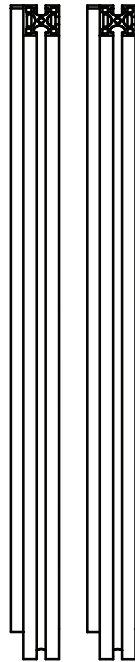

Side Frame
Horizontal Bar x 4

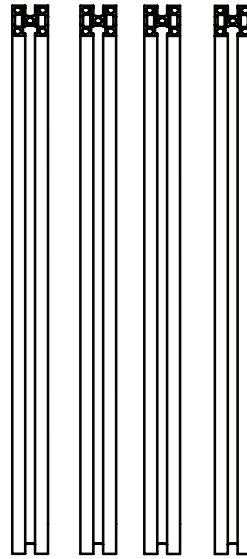

Middle
Horizontal Bar x 2

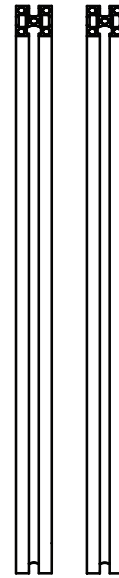

Vertical
C-Channel x 4




Horizontal
C-Channel x 4




Conduits x 2



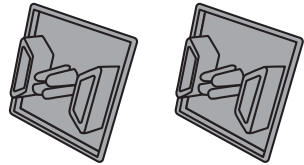

Front Frame Foot Pad x 2

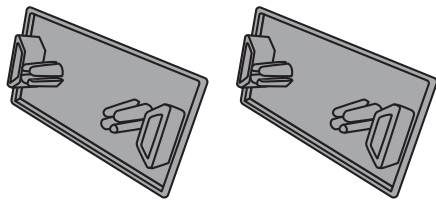

Back Frame Foot Pad x 2



M5-Long Screw x 22




M5 Washer x 22



M4 Allen Key x 1




Front Panel Safety Screw x 1

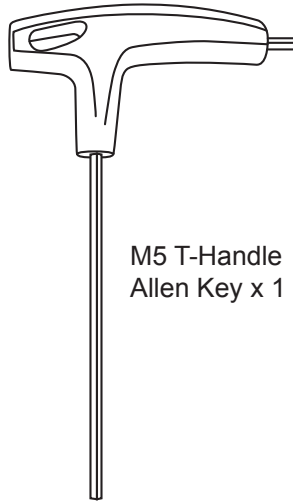


M5 T-Handle Allen Key x 1

Accessories for connecting display cases

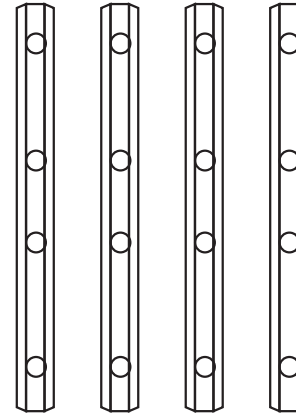

Stacking Bracket x 4

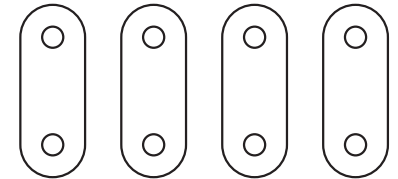

Horizontal Bracket x 4



M5 Nuts x 8



M4 Stacking Screw x 8




M5-Short Screw x 8




Attention: If you are connecting multiple display cases, please refer to "Connecting Display Cases" assembly guide before commencing.

Plexiglass Side Panel x 2

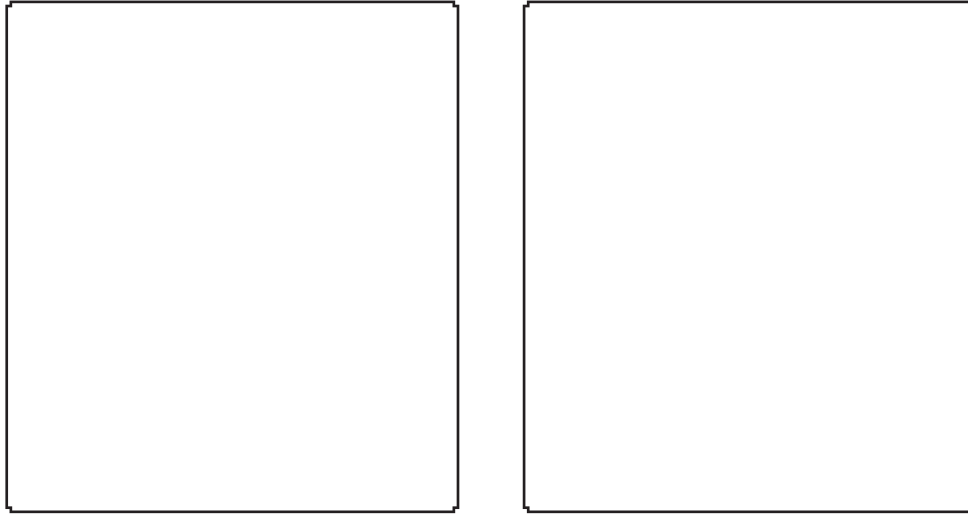

Plexiglass Front Panel x 1




Back Panel x 2




Top Panel x 2



Laminate Base x 1



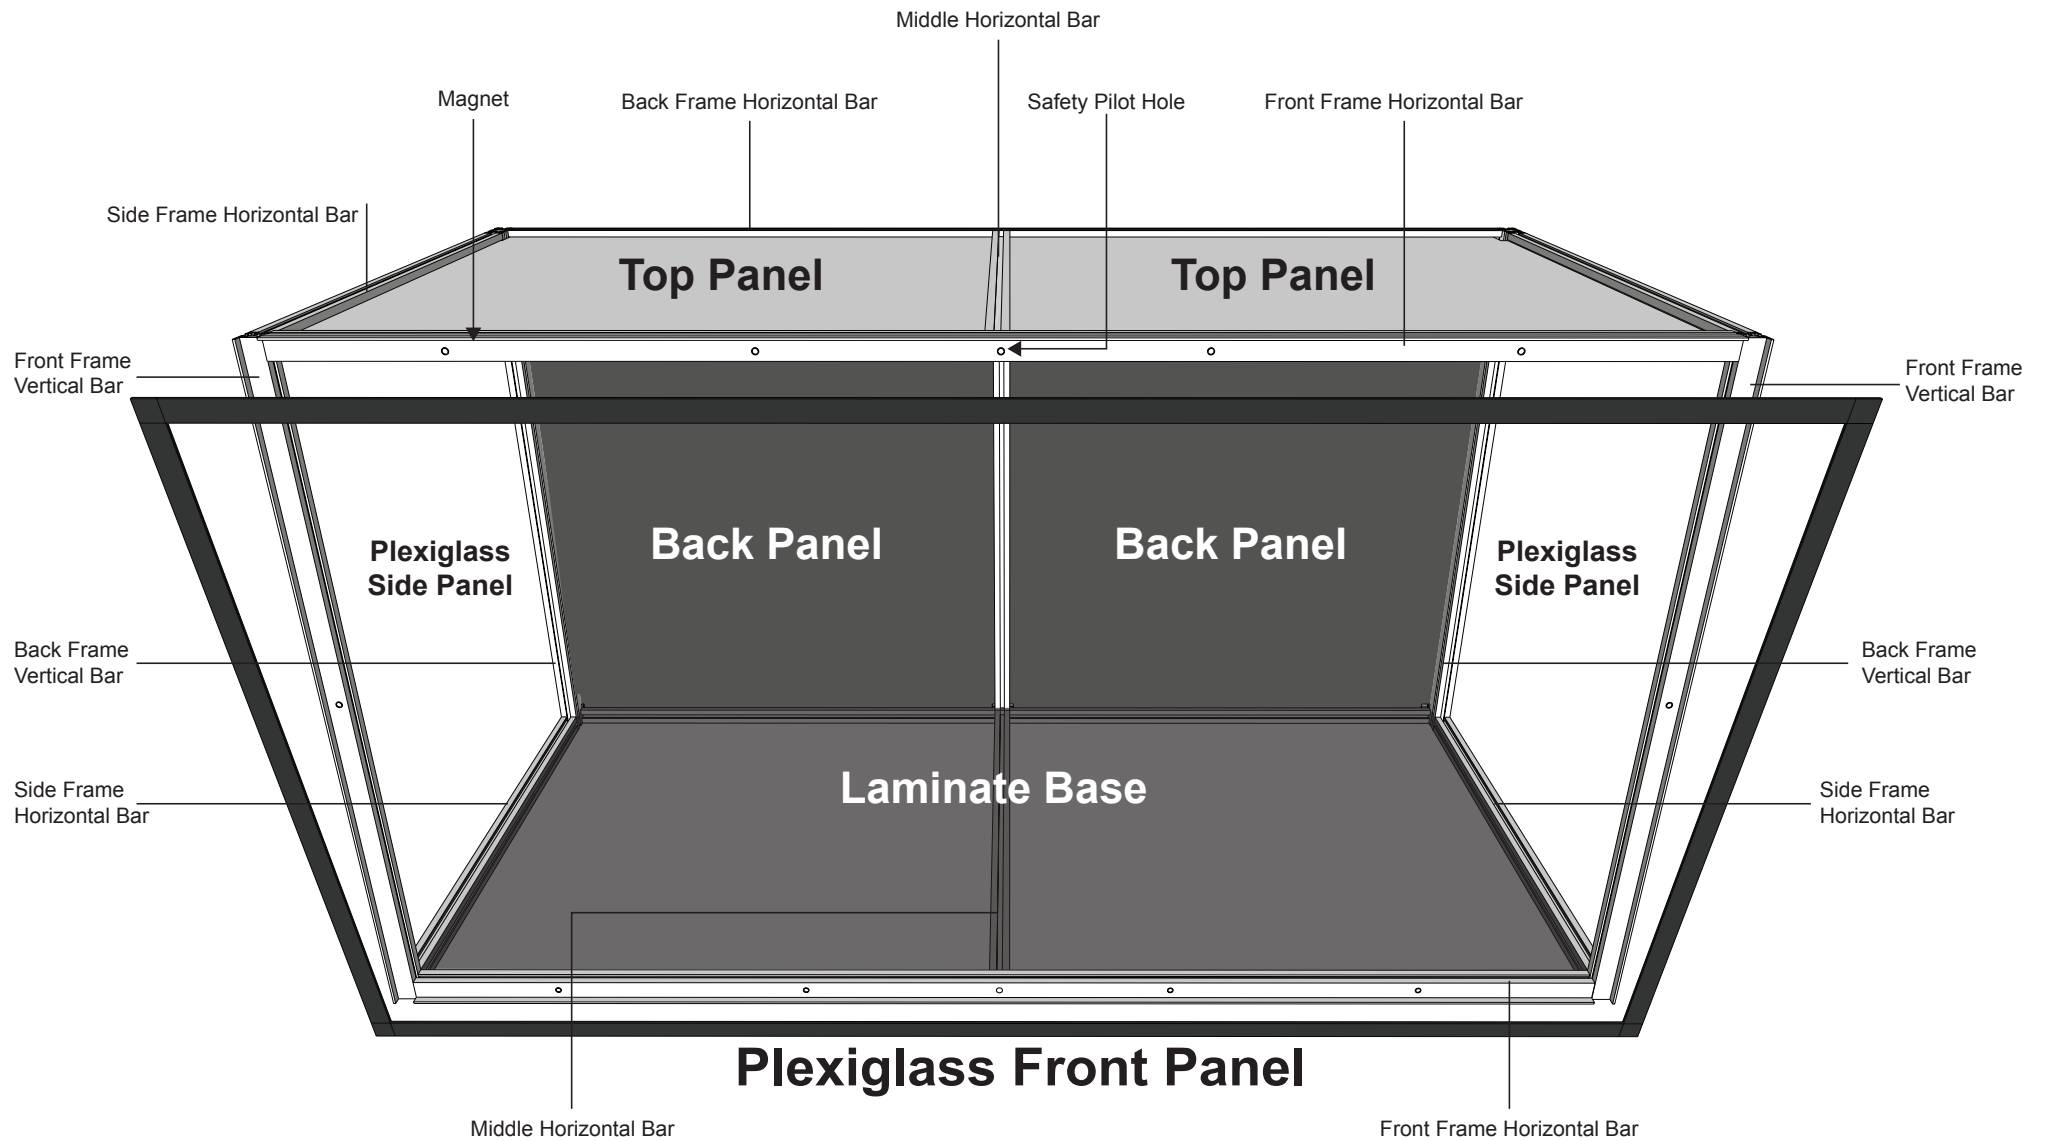

You will need


- Side Frame Horizontal Bar x 4
- Back Frame Vertical Bar x 2
- Front Frame Vertical Bar x 2
- Horizontal C-Channel x 4
- Vertical C-Channel x 4

Steps to install C-Channel

Step 1. Flatten one end of the C-Channel by pressing the open edges together.

Step 2. Push the compressed tip into the slit of the bar.

Step 3. Press down the rest of the C-Channel

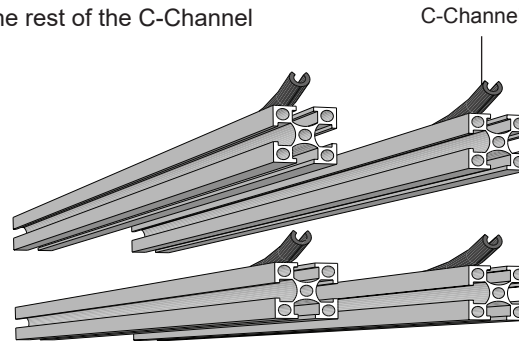


Side Frame Horizontal Bar

Position the bar on any side. Install a Horizontal C-Channel into the top slit of the bar. Repeat for all bars.

Back Frame Vertical Bar

Position the bar with the pilot holes facing the flat surface. Install a Vertical C-Channel into the top slit of the bar. Repeat for all bars.

⚠ Please make sure the C-channel does not cover the pilot hole.

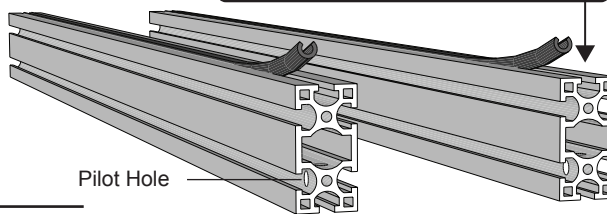


⚠ If you are joining the display cases horizontally, do not insert the C-Channel on the connecting bar.

Front Frame Vertical Bar

Place a bar with the magnets facing down. Install a Vertical C-Channel into the top slit. Repeat for all bars.

⚠ Please make sure the C-channel does not cover the pilot hole.

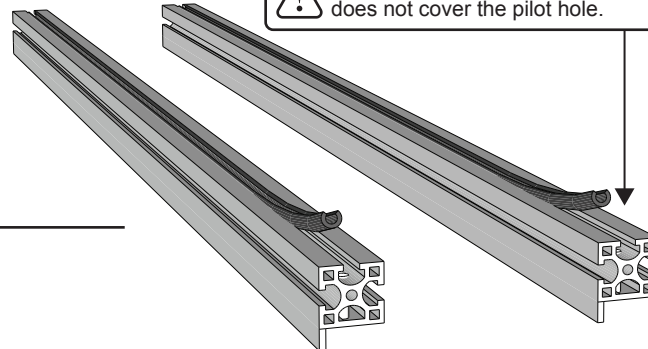

⚠ If you are joining the display cases horizontally, do not insert the C-Channel on the connecting bar.

You will need

- M5-Long Screw x 22
- M5-Washer x 22
- Side Frame Horizontal Bar x 4
- Middle Horizontal Bar x 2
- Back Frame Middle Vertical Bar x 1
- Back Frame Horizontal Bar x 2
- Front Frame Horizontal Bar x 2

Steps to insert M5-Long Screw



Step 1. Insert the M5-Long Screw fully into the M5-Washer.


Step 2. Position the screw with washer into the pilot hole on the left side of the bar. Turn clockwise to tighten the screw. Leave a 15mm gap between the washer and bar.

Step 3. Repeat steps 1-2 for the other side of the bar.



Step 4. Repeat steps 1-3 for

- Side Frame Horizontal Bar x 4
- Middle Horizontal Bar x 2
- Back Frame Middle Vertical Bar x 1
- Back Frame Horizontal Bar x 2
- Front Frame Horizontal Bar x 2

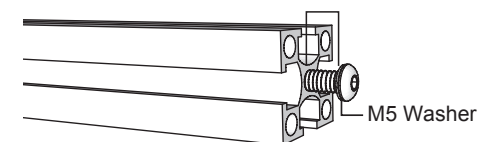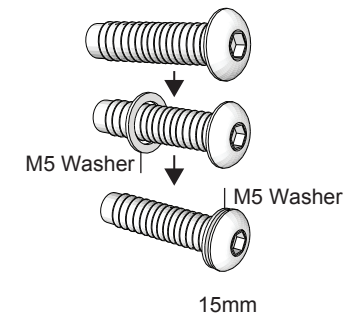


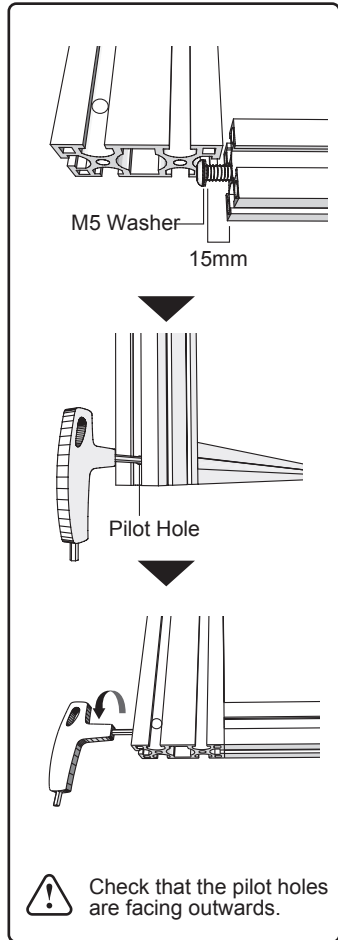

Step 1.
Connect Back Frame Vertical Bar to Side Frame Horizontal Bar. Tighten the connecting screw using the T-Allen Key.

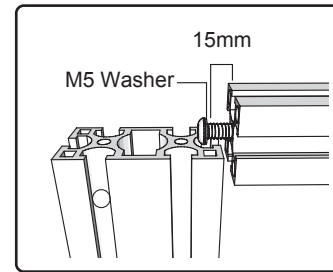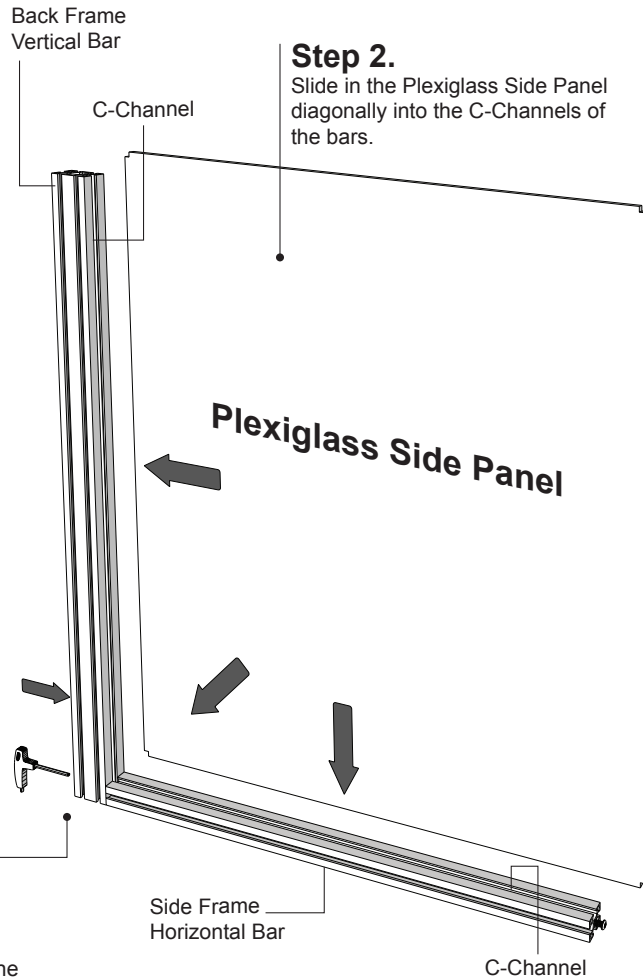


Step 4.
Press down the Side Frame Horizontal Bar into the Plexiglass Side Panel. Tighten the connecting screw using the T-Allen Key.

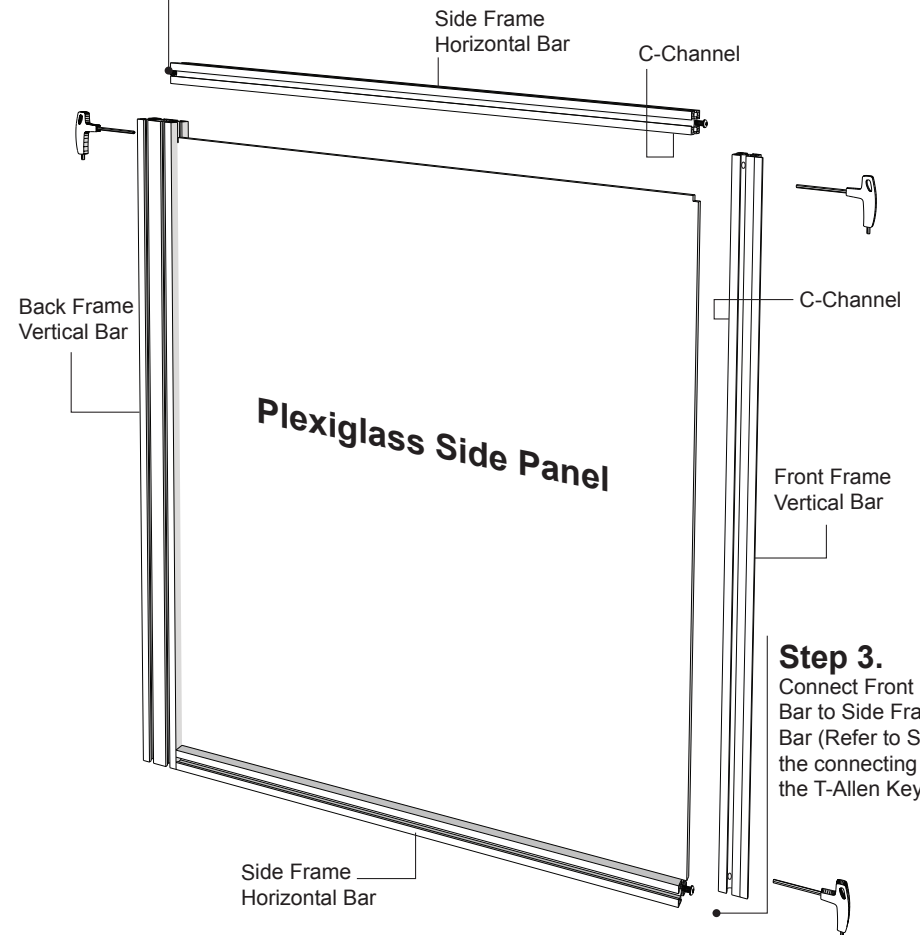

Step 3.
Connect Front Frame Vertical Bar to Side Frame Horizontal Bar (Refer to Step 1). Tighten the connecting screw using the T-Allen Key.

Step 6.

Slide in the Plexiglass Side Panel diagonally into the C-Channels of the bars.


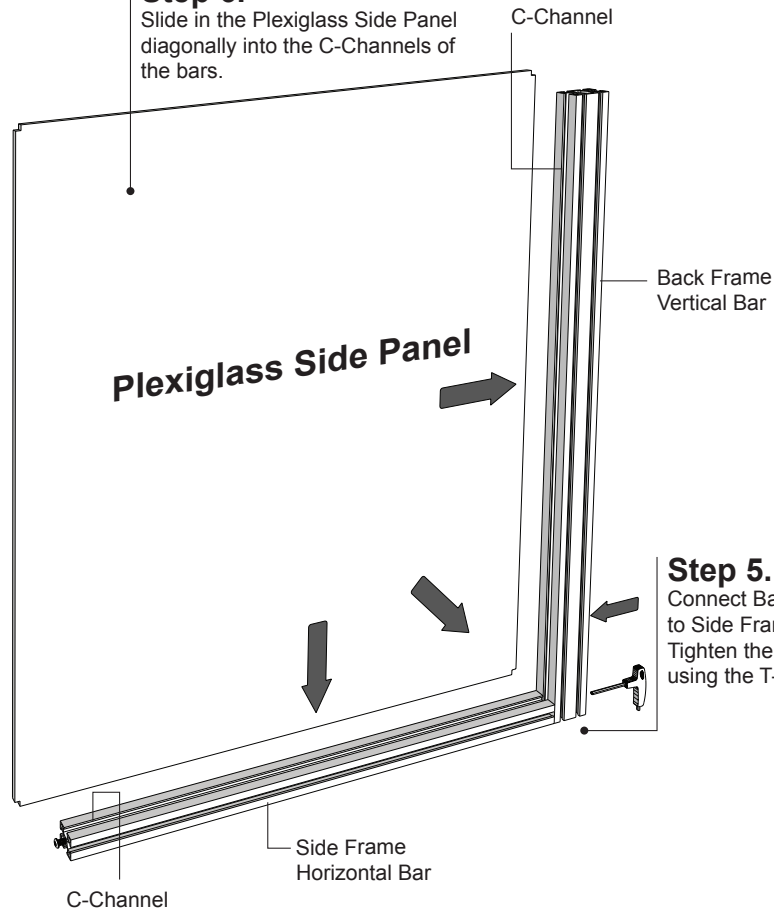


Step 5.

Connect Back Frame Vertical Bar to Side Frame Horizontal Bar. Tighten the connecting screw using the T-Allen Key.


Step 8.


Press down the Side Frame Horizontal Bar into the Plexiglass Side Panel. Tighten the connecting screw using the T-Allen Key.

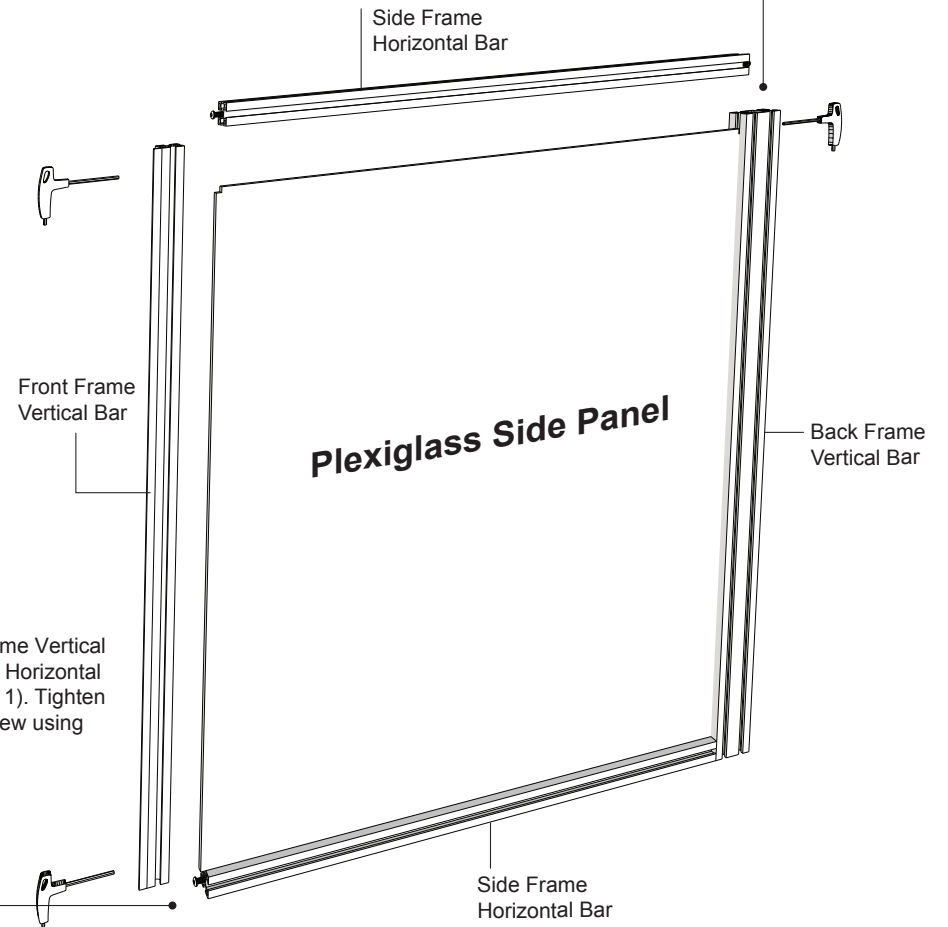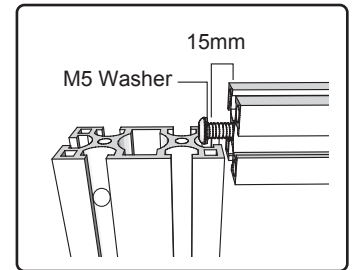


Step 7.

Connect Front Frame Vertical Bar to Side Frame Horizontal Bar (Refer to Step 1). Tighten the connecting screw using the T-Allen Key.

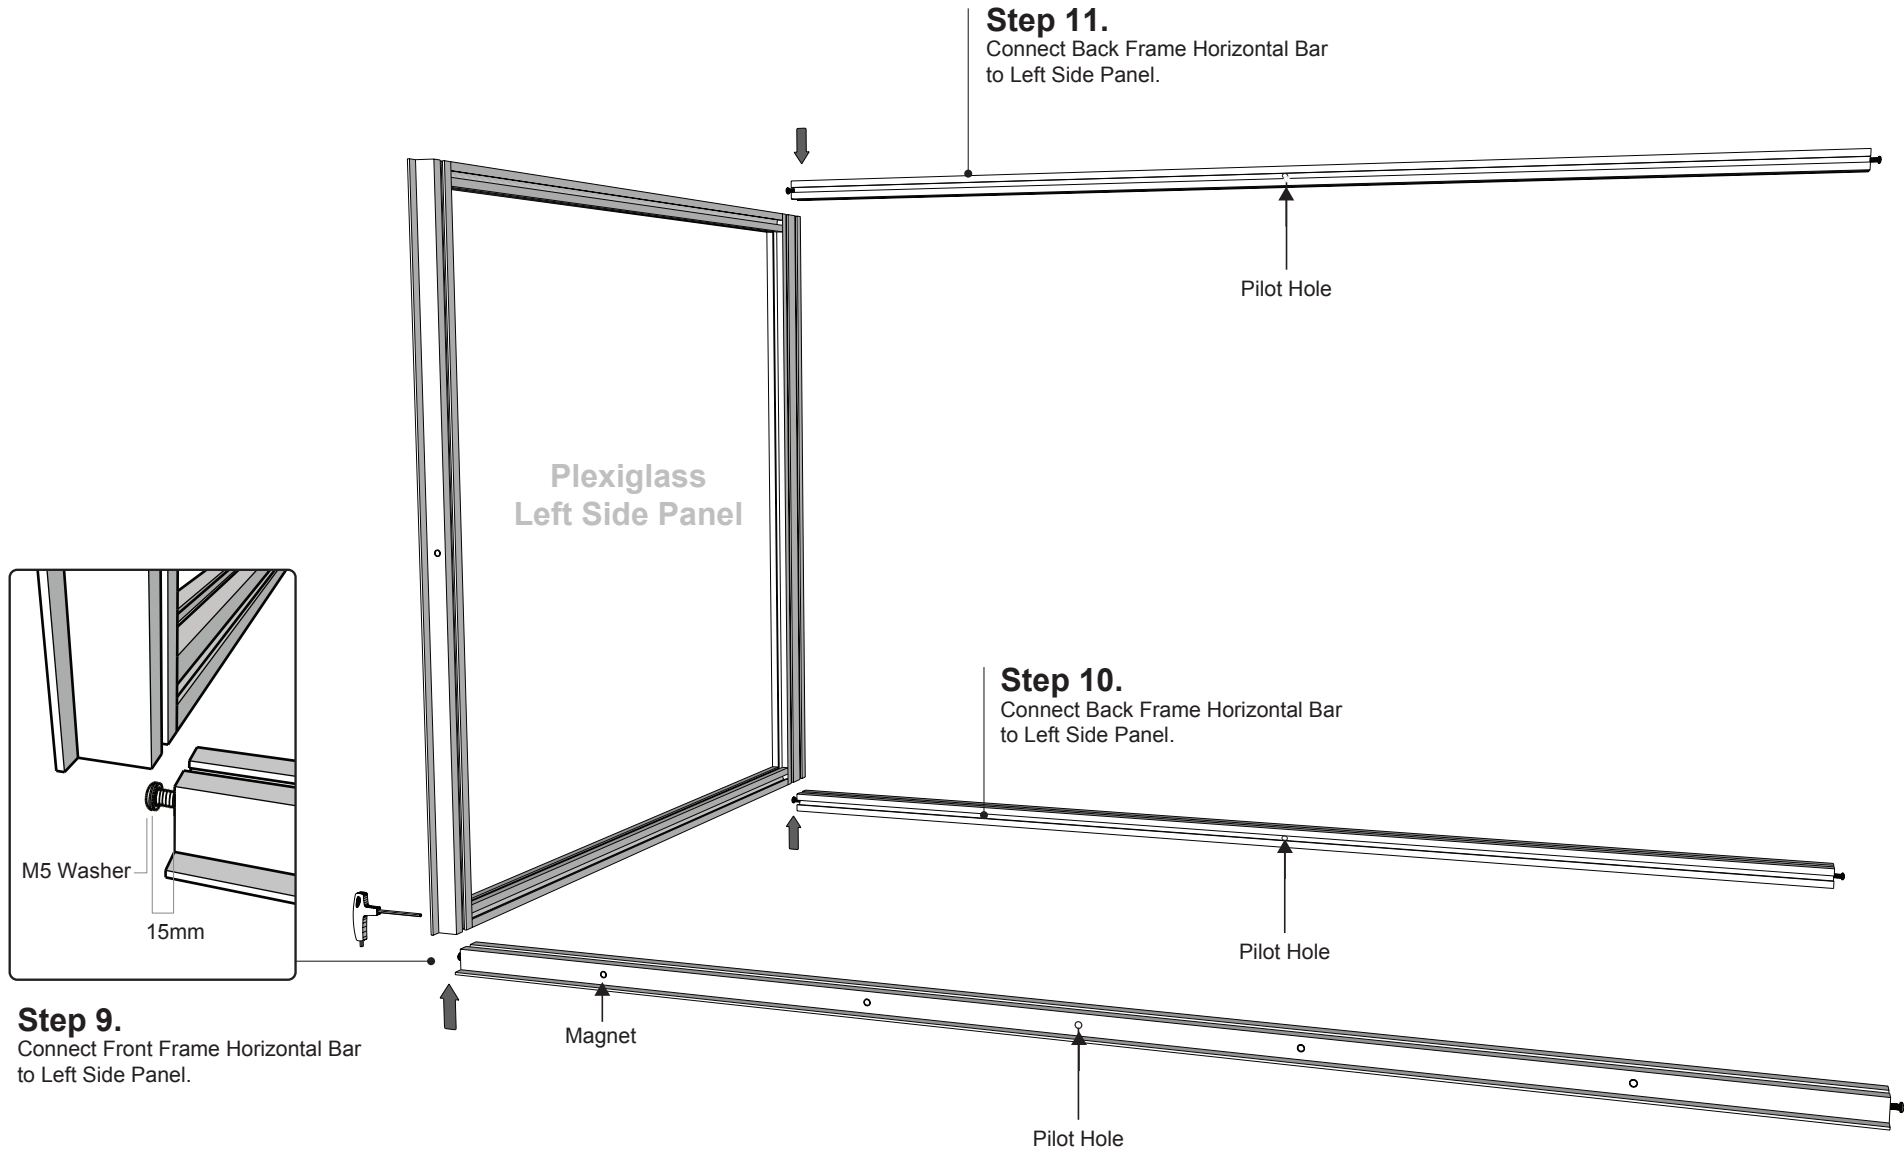

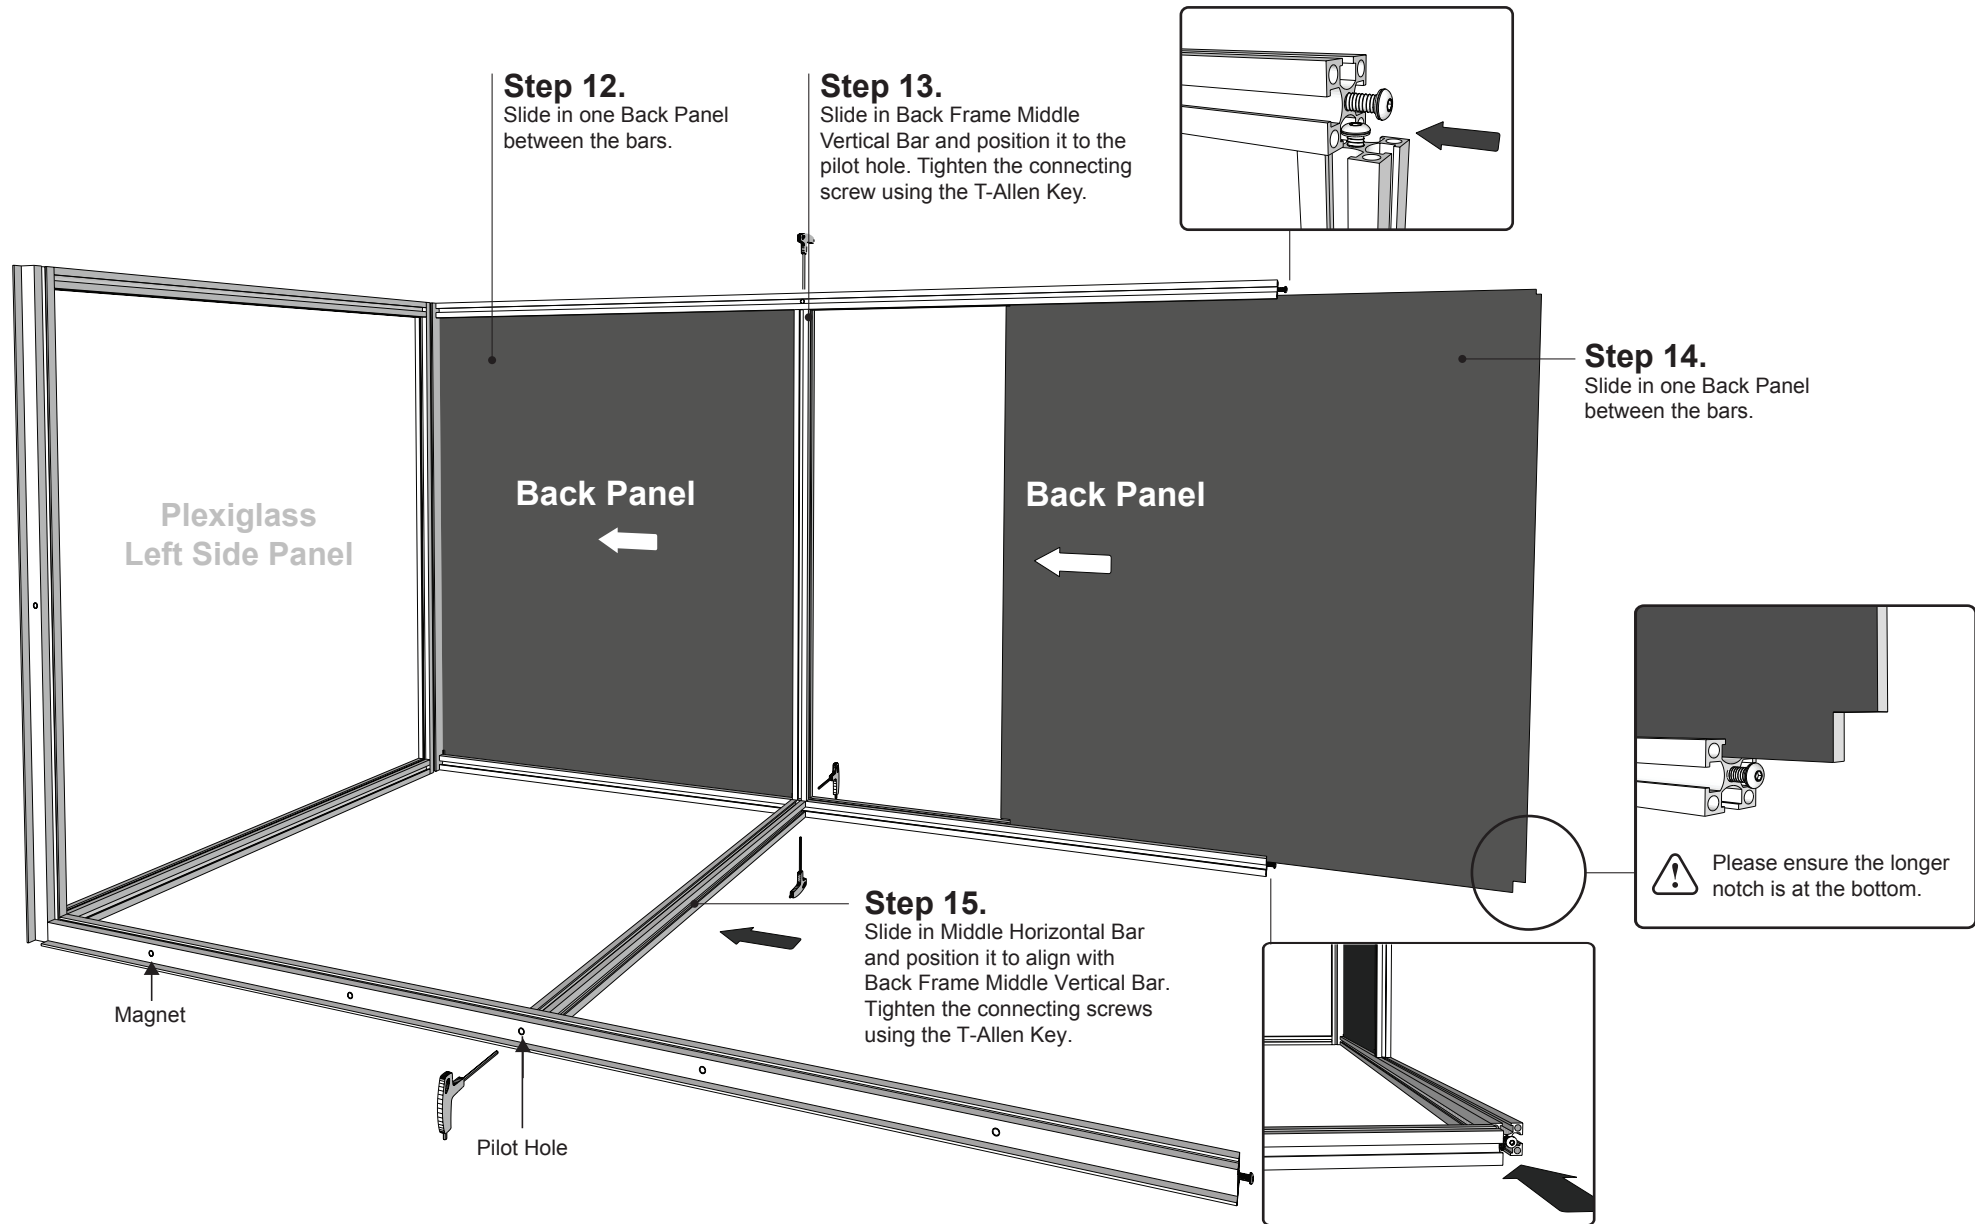


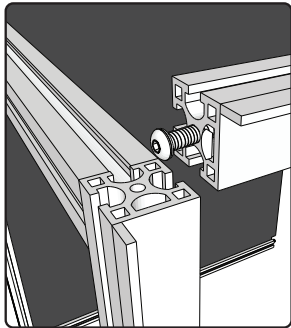



Step 16.
Connect Front Frame Horizontal Bar to Front Frame Vertical bar.



Step 17.
Slide in a Top Panel between the bars.

Step 18.
Slide in a Middle Horizontal Bar between the bars and position it to align with Back Frame Middle Vertical Bar.

Step 19.
Slide in a Top Panel between the bars.

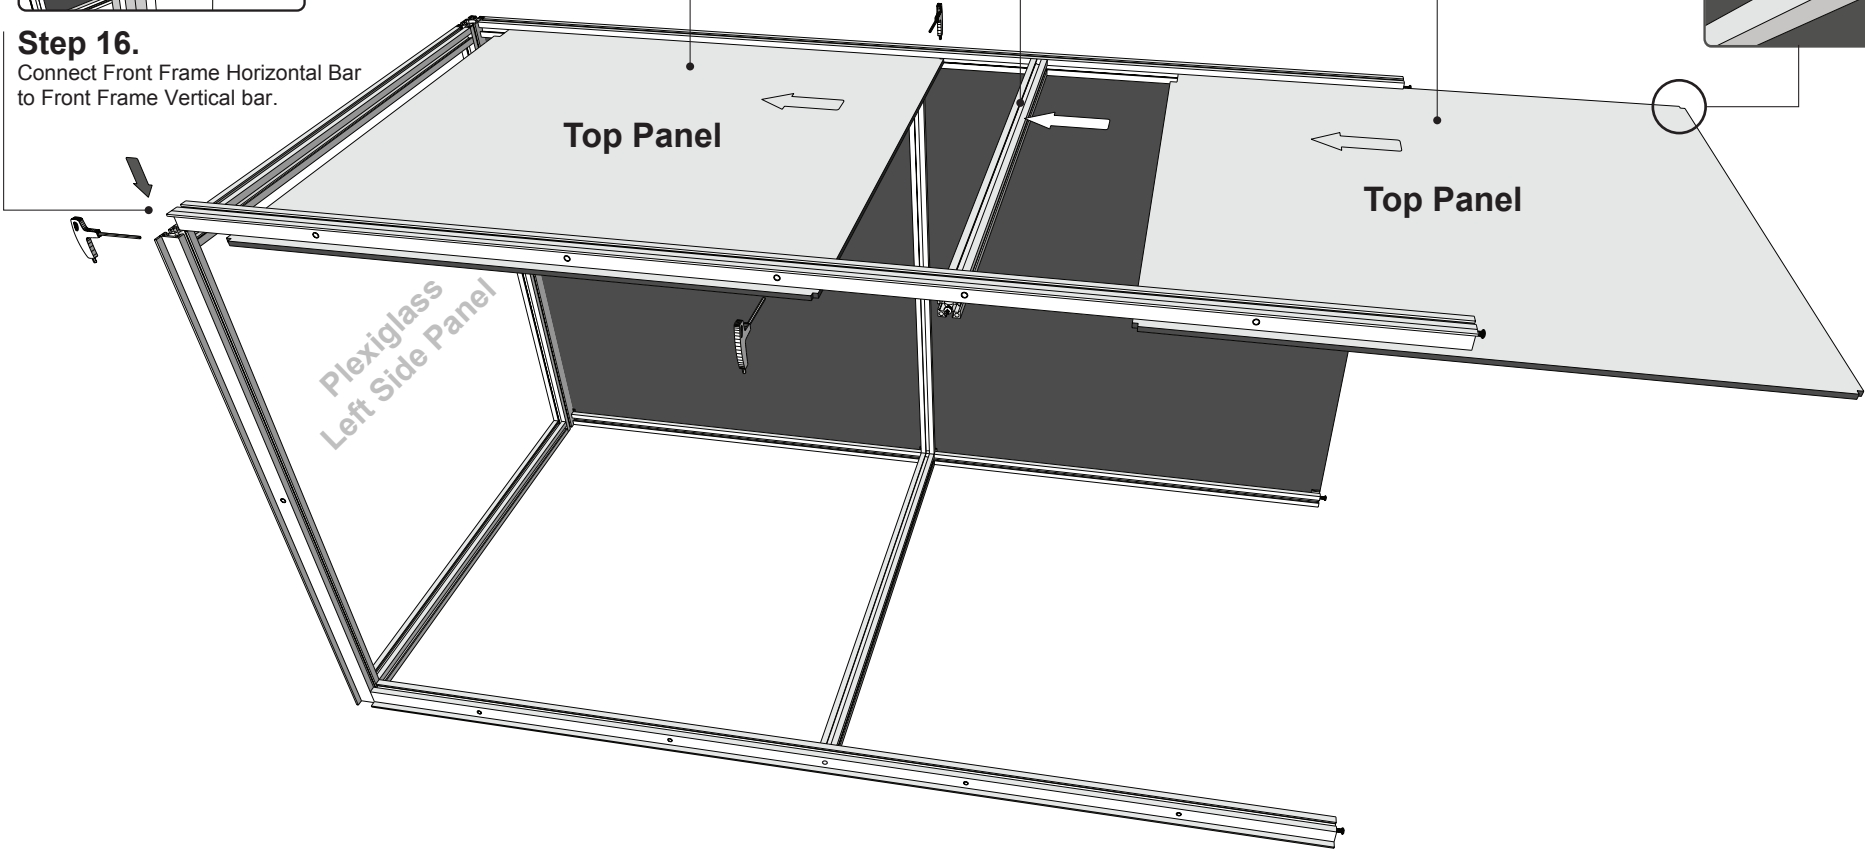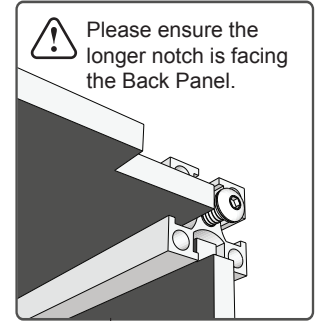

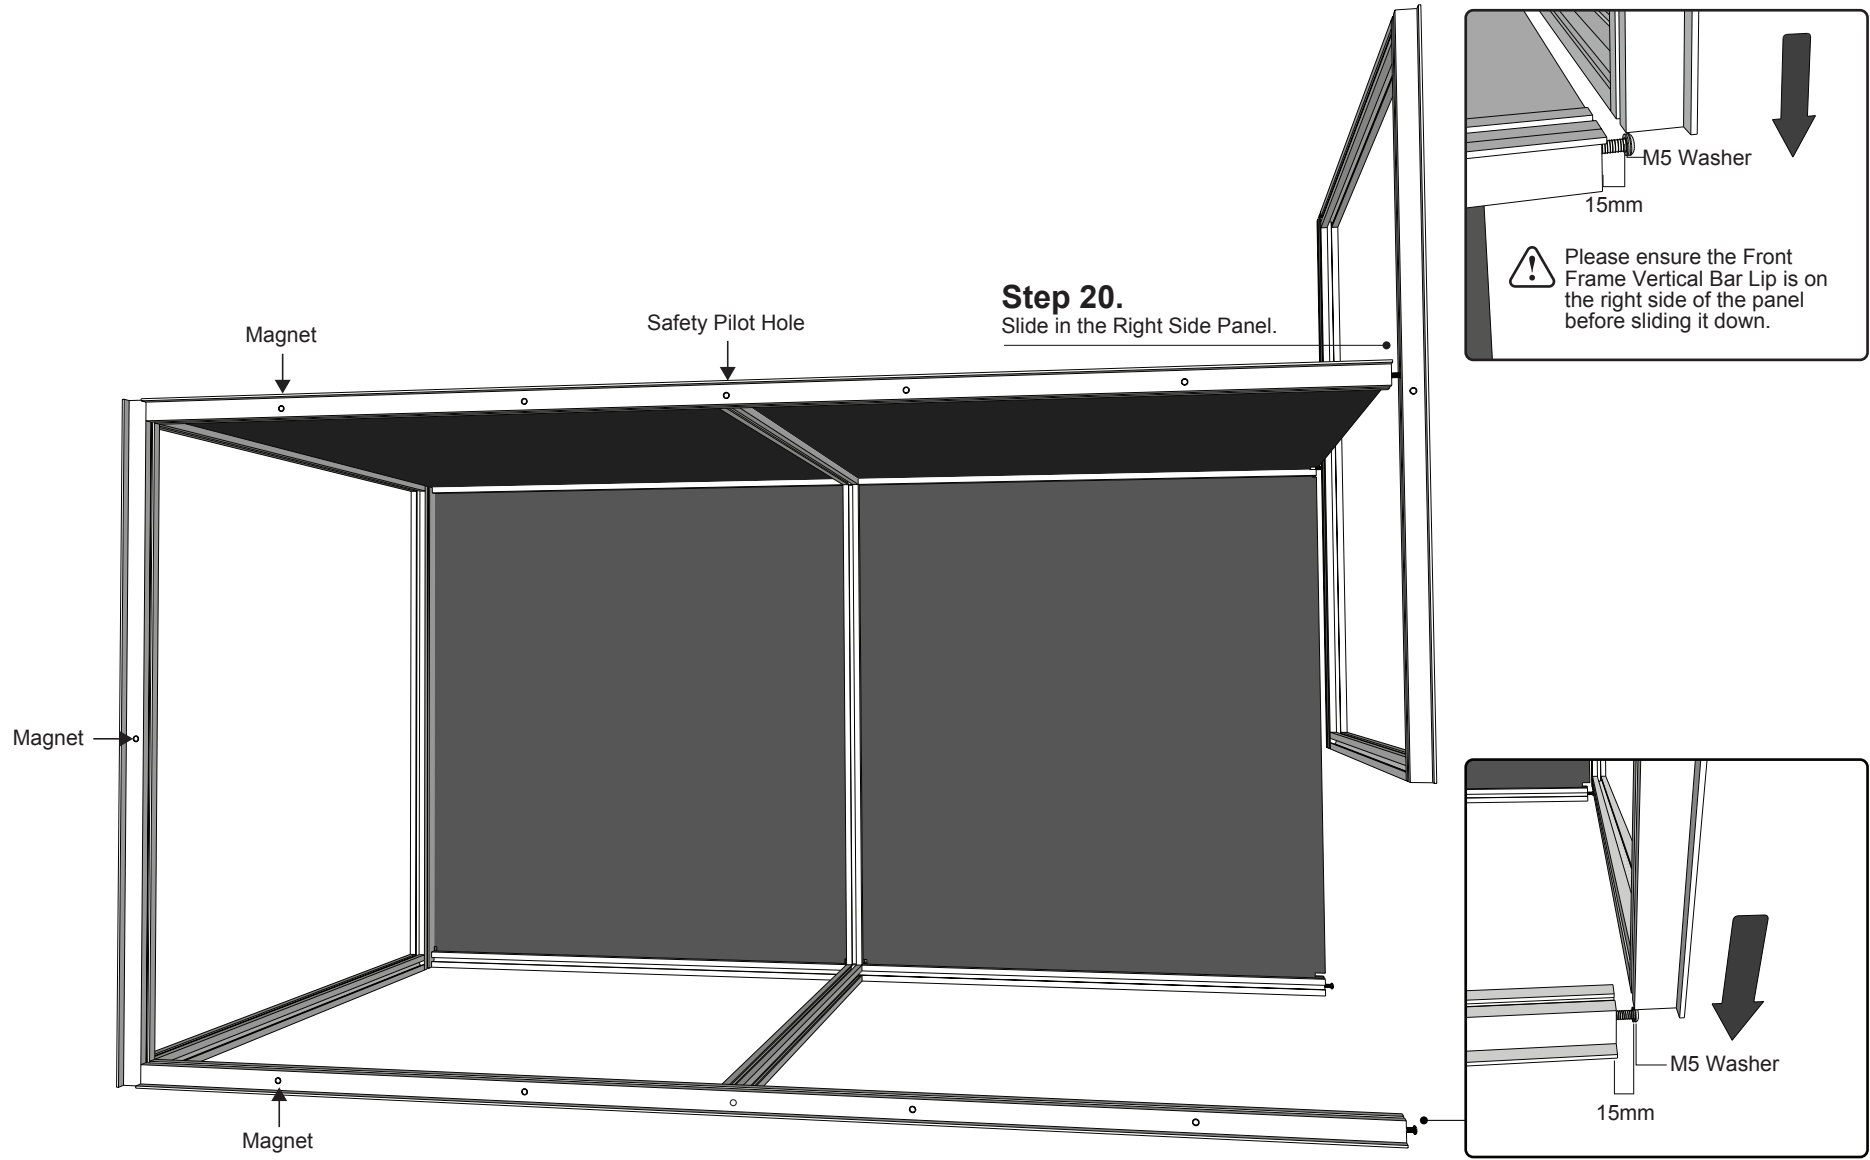

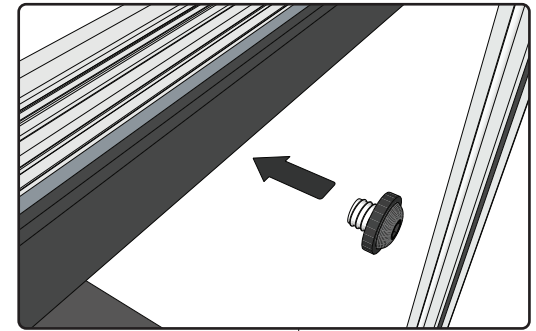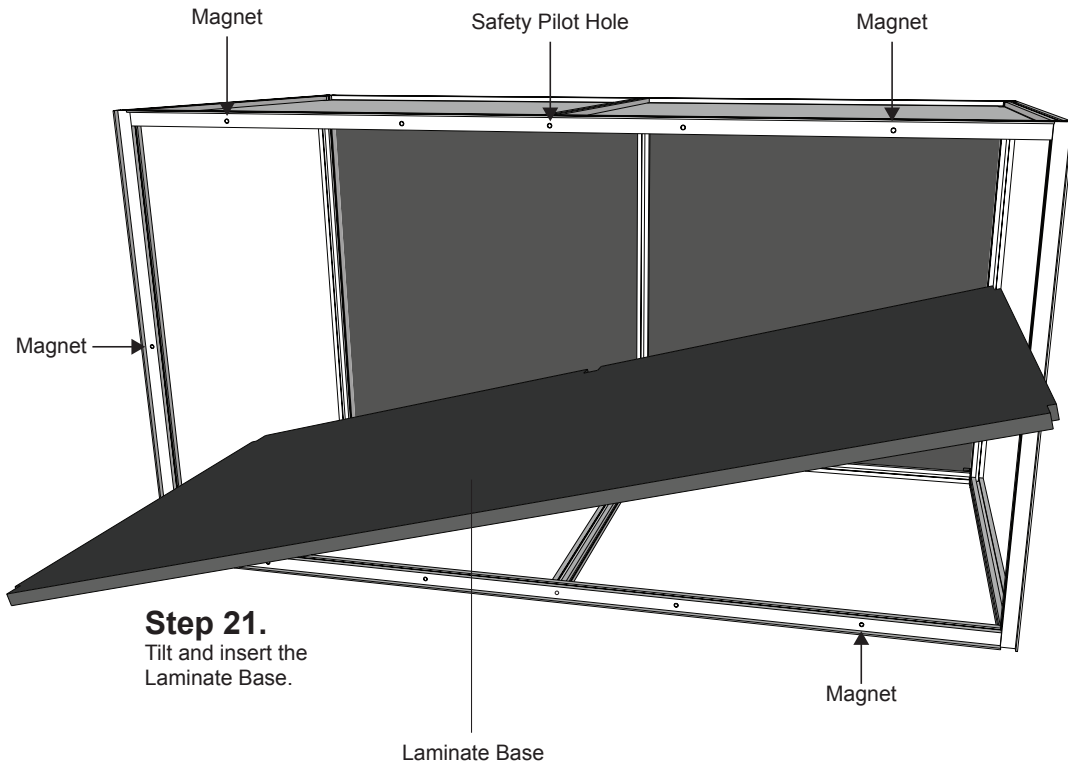

Step 22.
Attach the Plexiglass Front Panel and insert the Safety Screw.

