


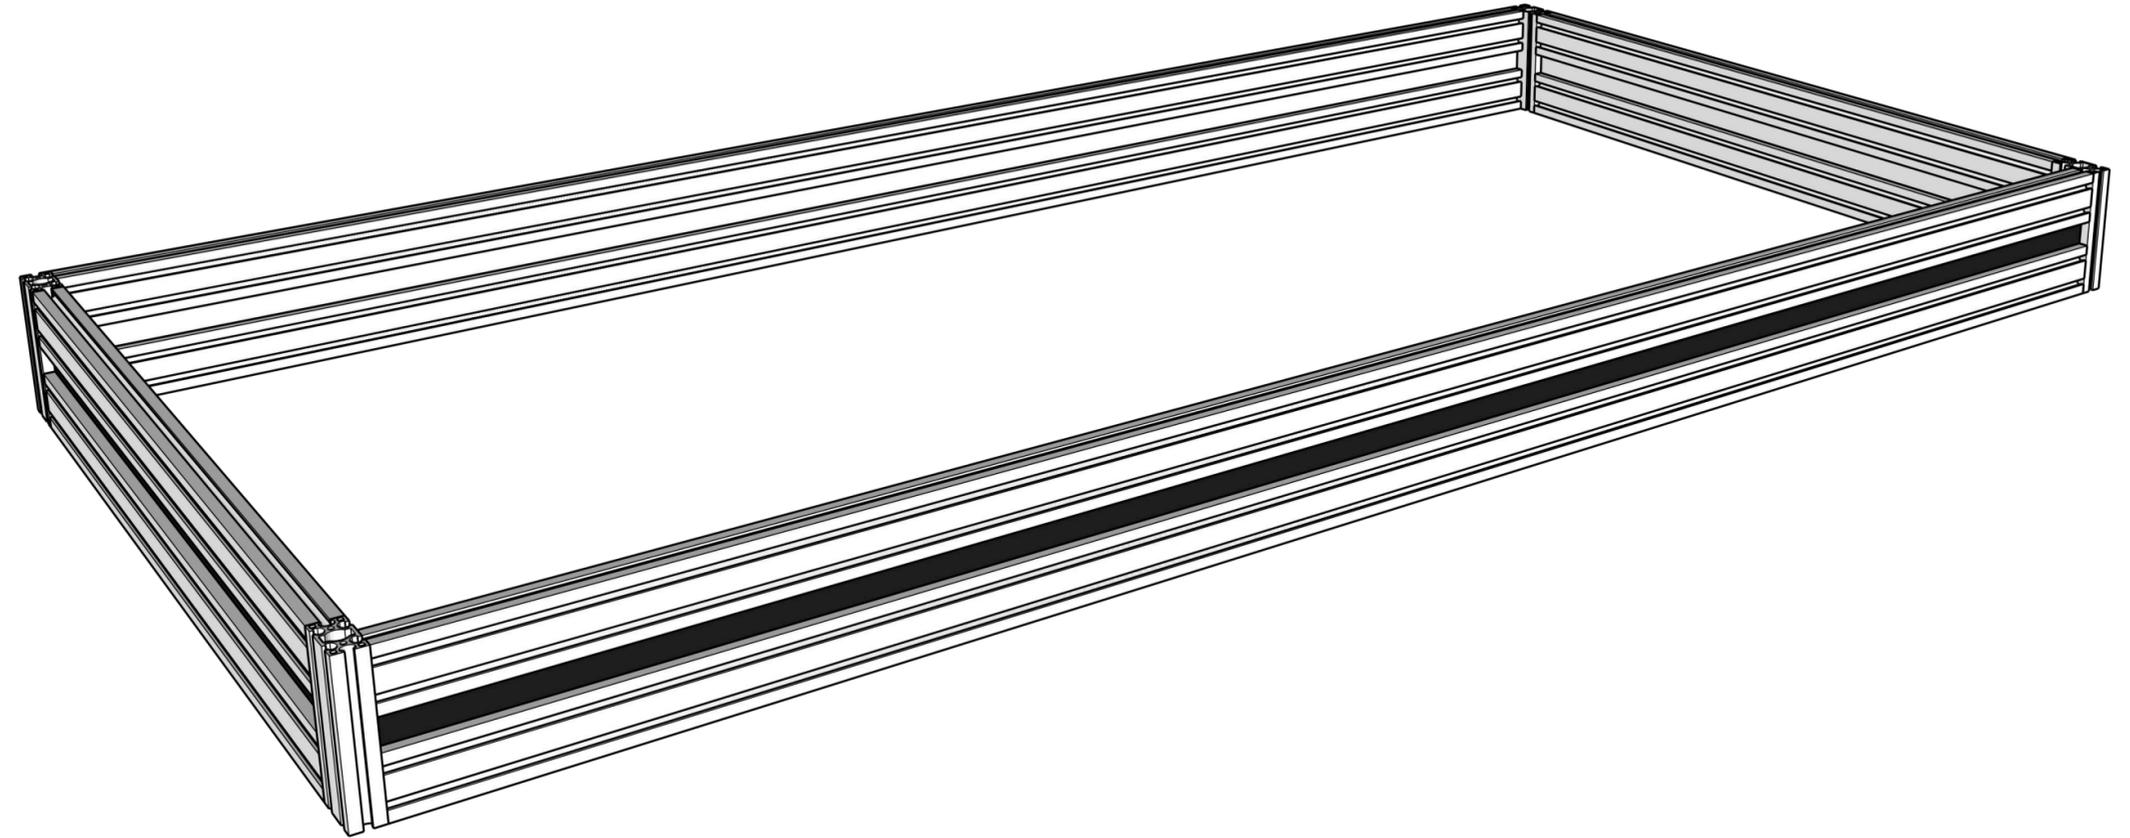


Bespoke Showcase Engineers

**MAX140 Display  
Risers Assembly**


Version 1.0




Front / Back Frame  
Horizontal Bar x 4

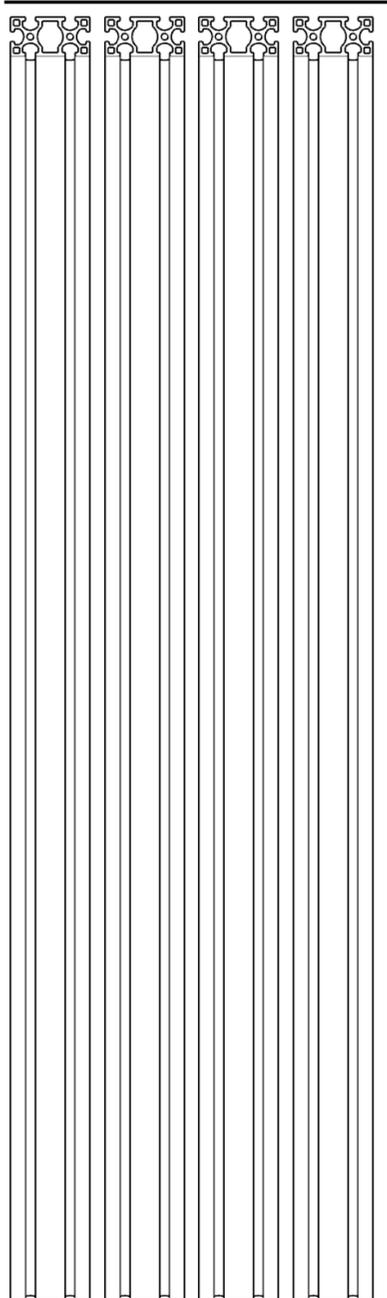


Side Frame  
Horizontal Bar x 4

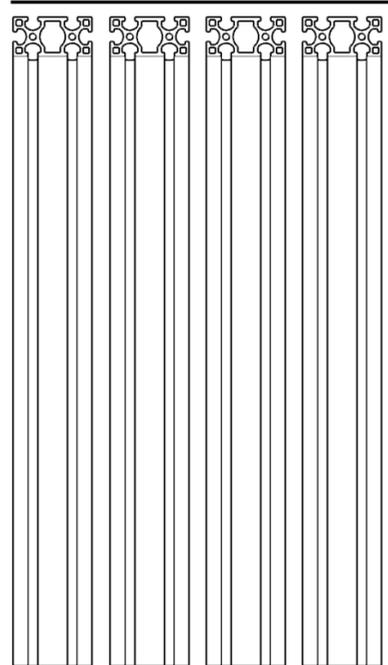

Front / Back Frame  
Vertical Bar x 4

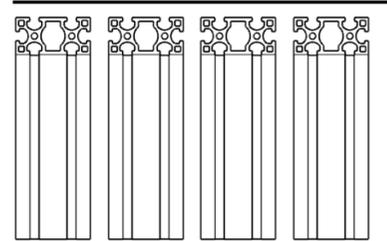

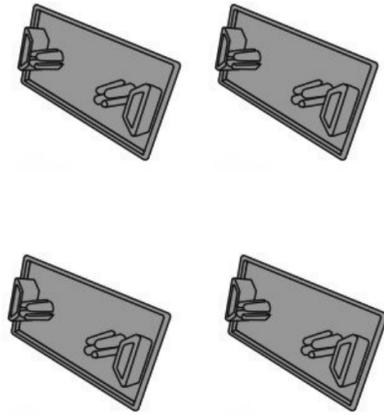

Front/ Back  
Frame Foot Pad  
x 4



M5 Allen Key x 1



M4 Allen Key x 1




M5-Long  
Screws x 35



M5 Washer  
x 35



M4 Stacking  
Screws x 16

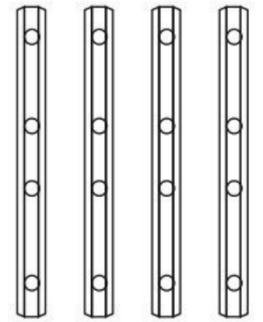

Stacking  
Brackets x 4

Side Panel



Side Panel




Back Panel



Front Panel



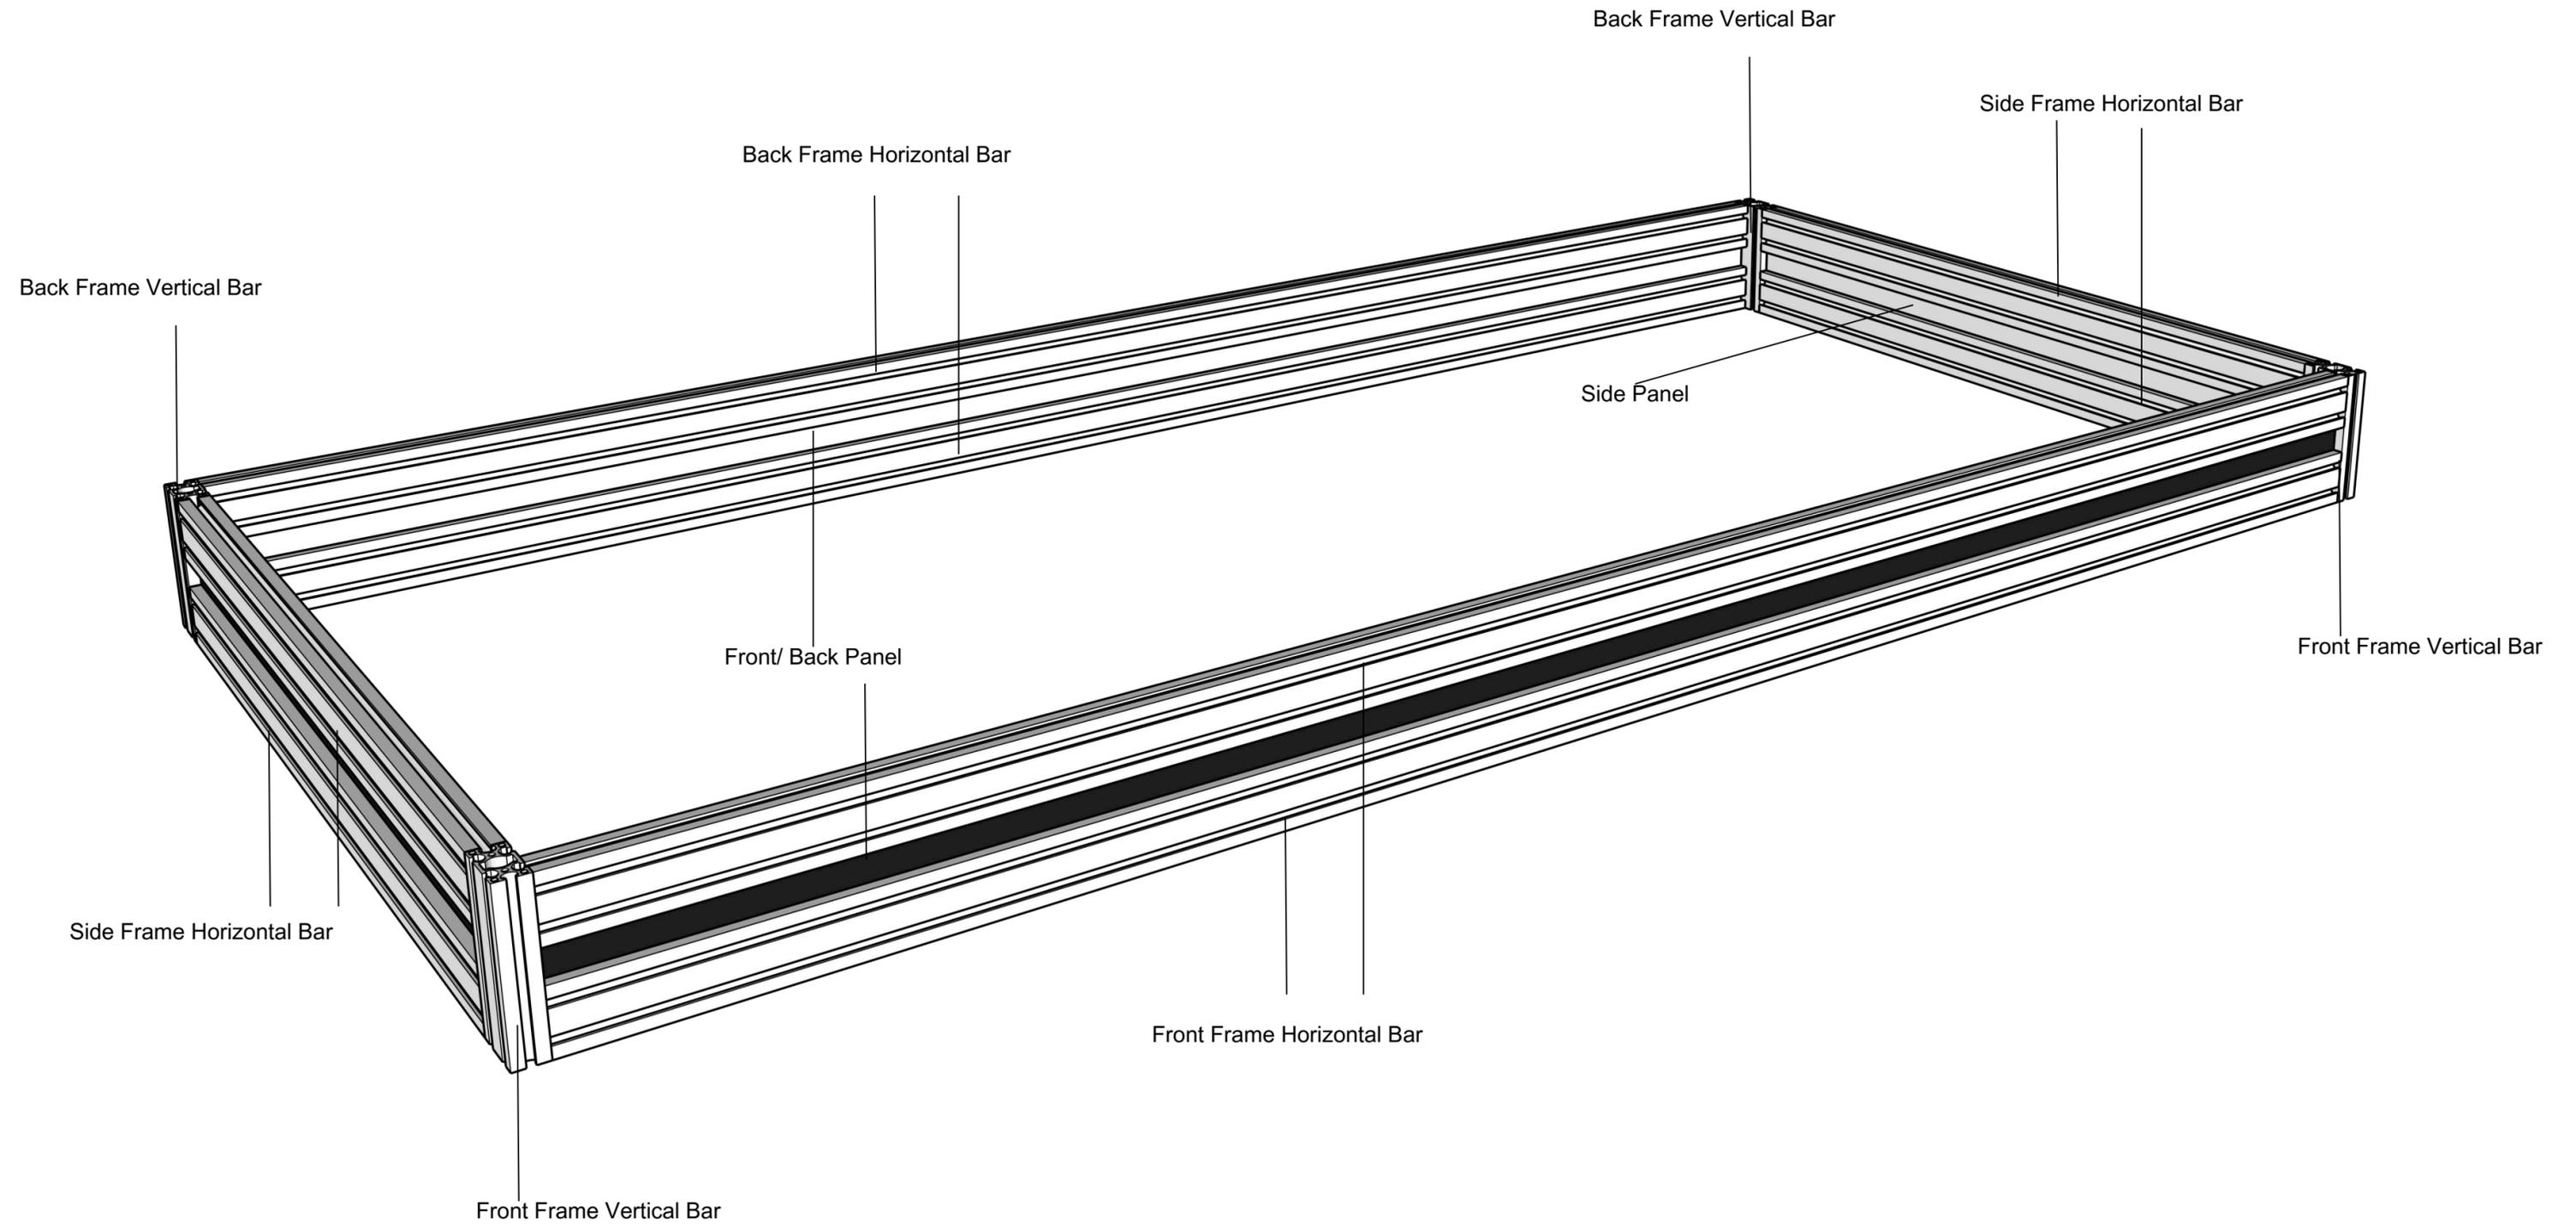




**You will need**



- M5-Long Screw x 16
- M5-Washer x 16
- Side Frame Horizontal Bars x 4
- Back Frame Horizontal Bars x 2
- Front Frame Horizontal Bars x 2


**Steps to insert M5-Long Screw**

- Step 1.** Insert the M5-Long Screw fully into the M5-Washer.
- Step 2.** Position the screw with washer into the pilot hole on the left side of the bar. Turn clockwise to tighten the screw. Leave a 15mm gap between the washer and bar.
- Step 3.** Repeat steps 1-2 for the other side of the bar.
- Step 4.** Repeat steps 1-3 for
- Side Frame Horizontal Bars x 4
  - Back Frame Horizontal Bars x 2
  - Front Frame Horizontal Bars x 2

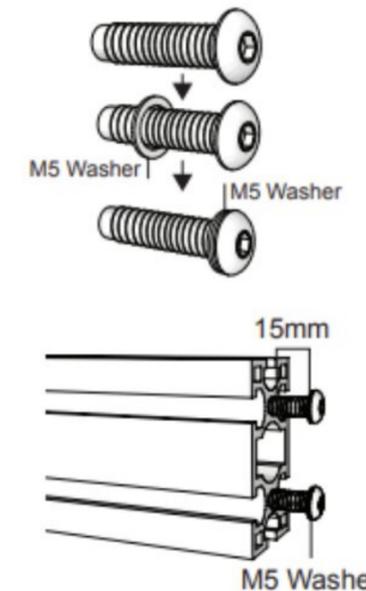

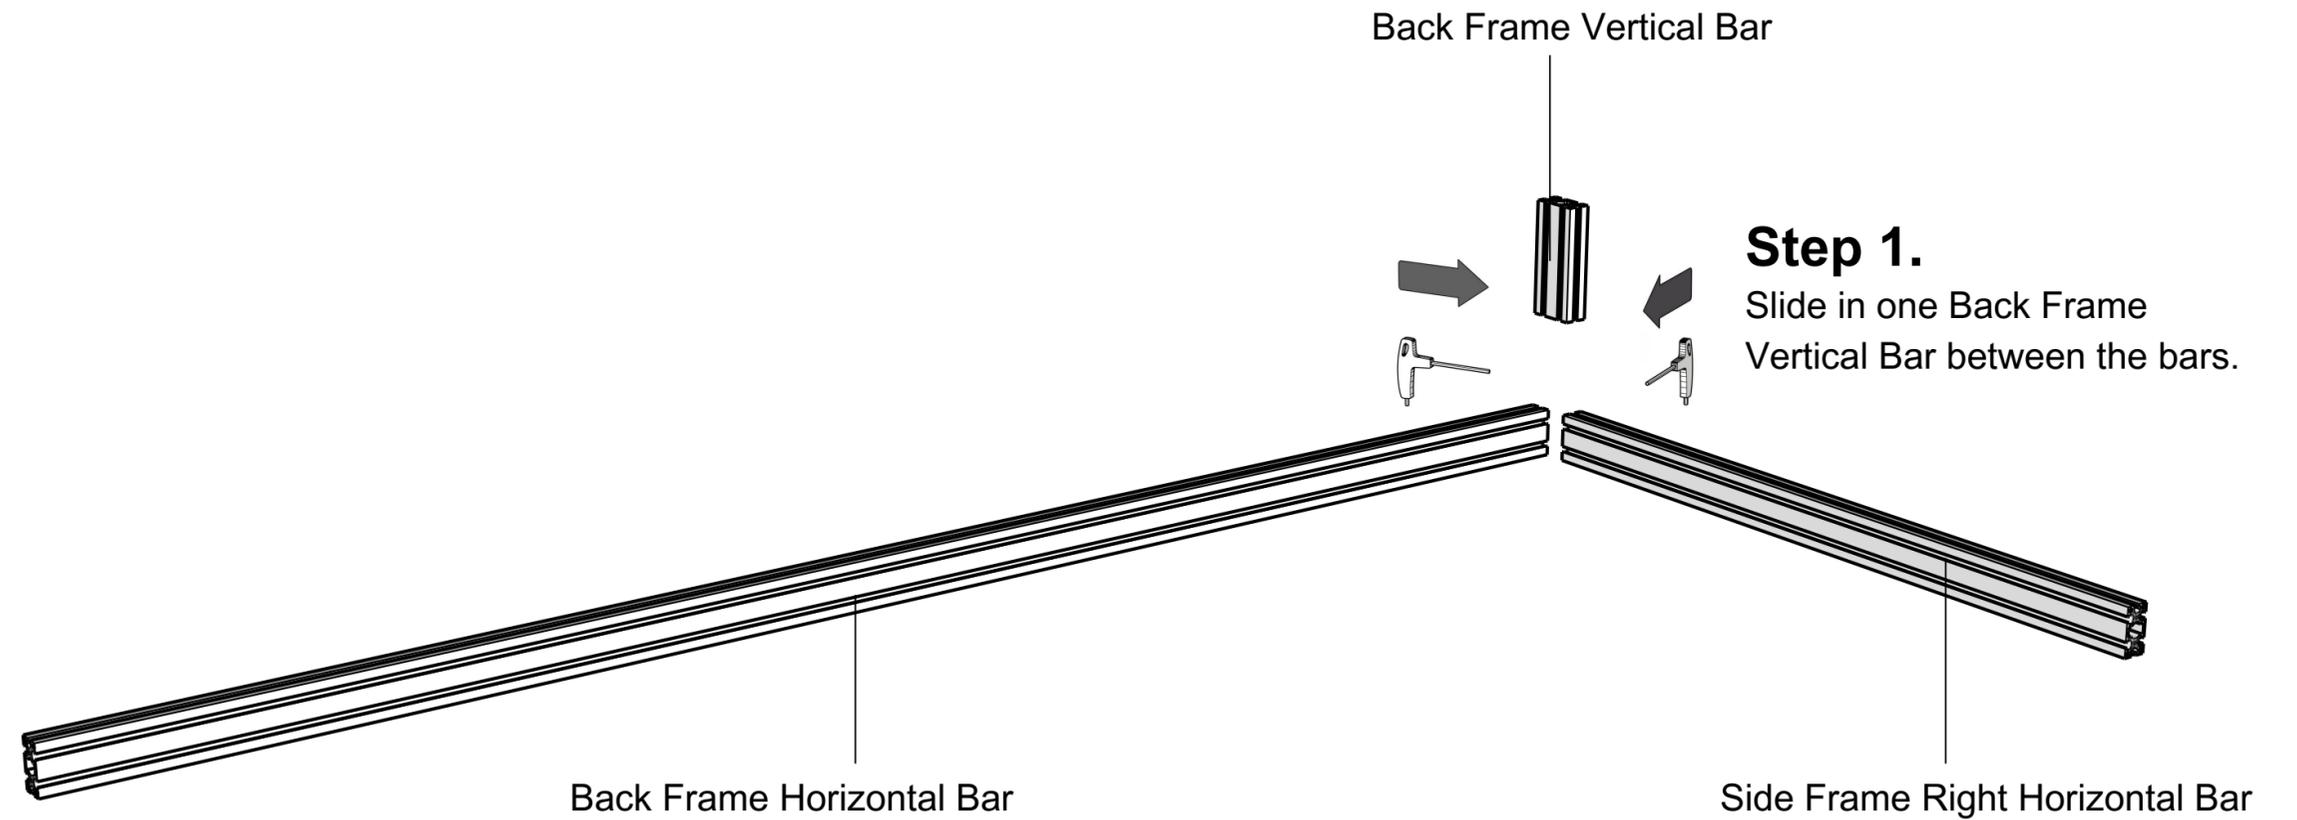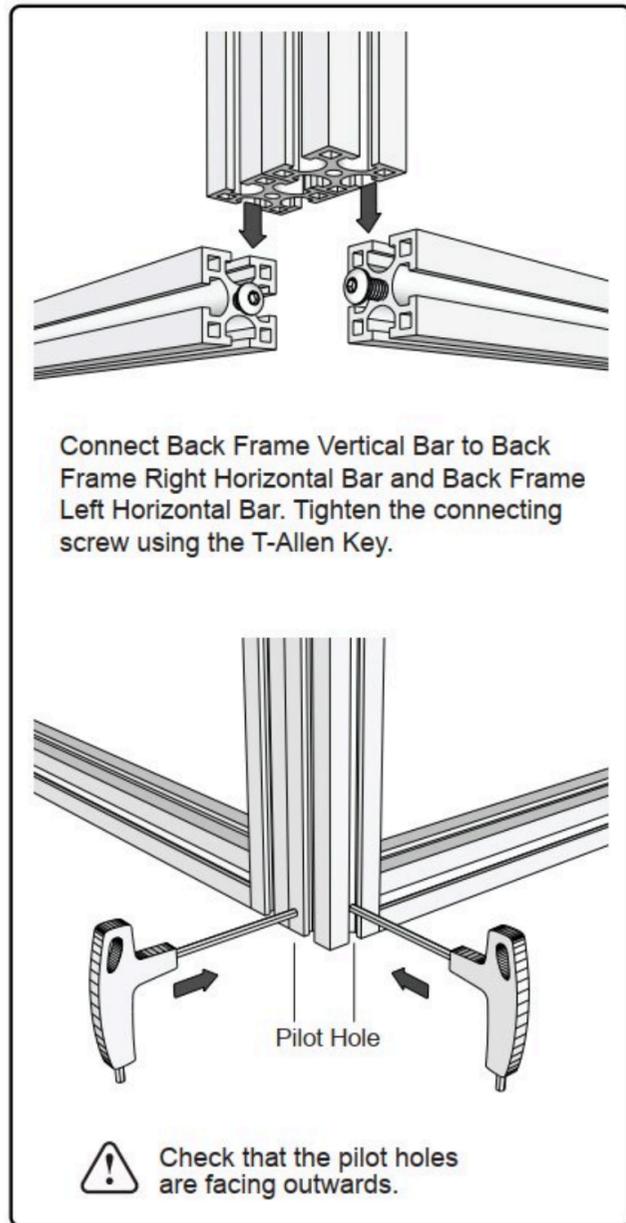

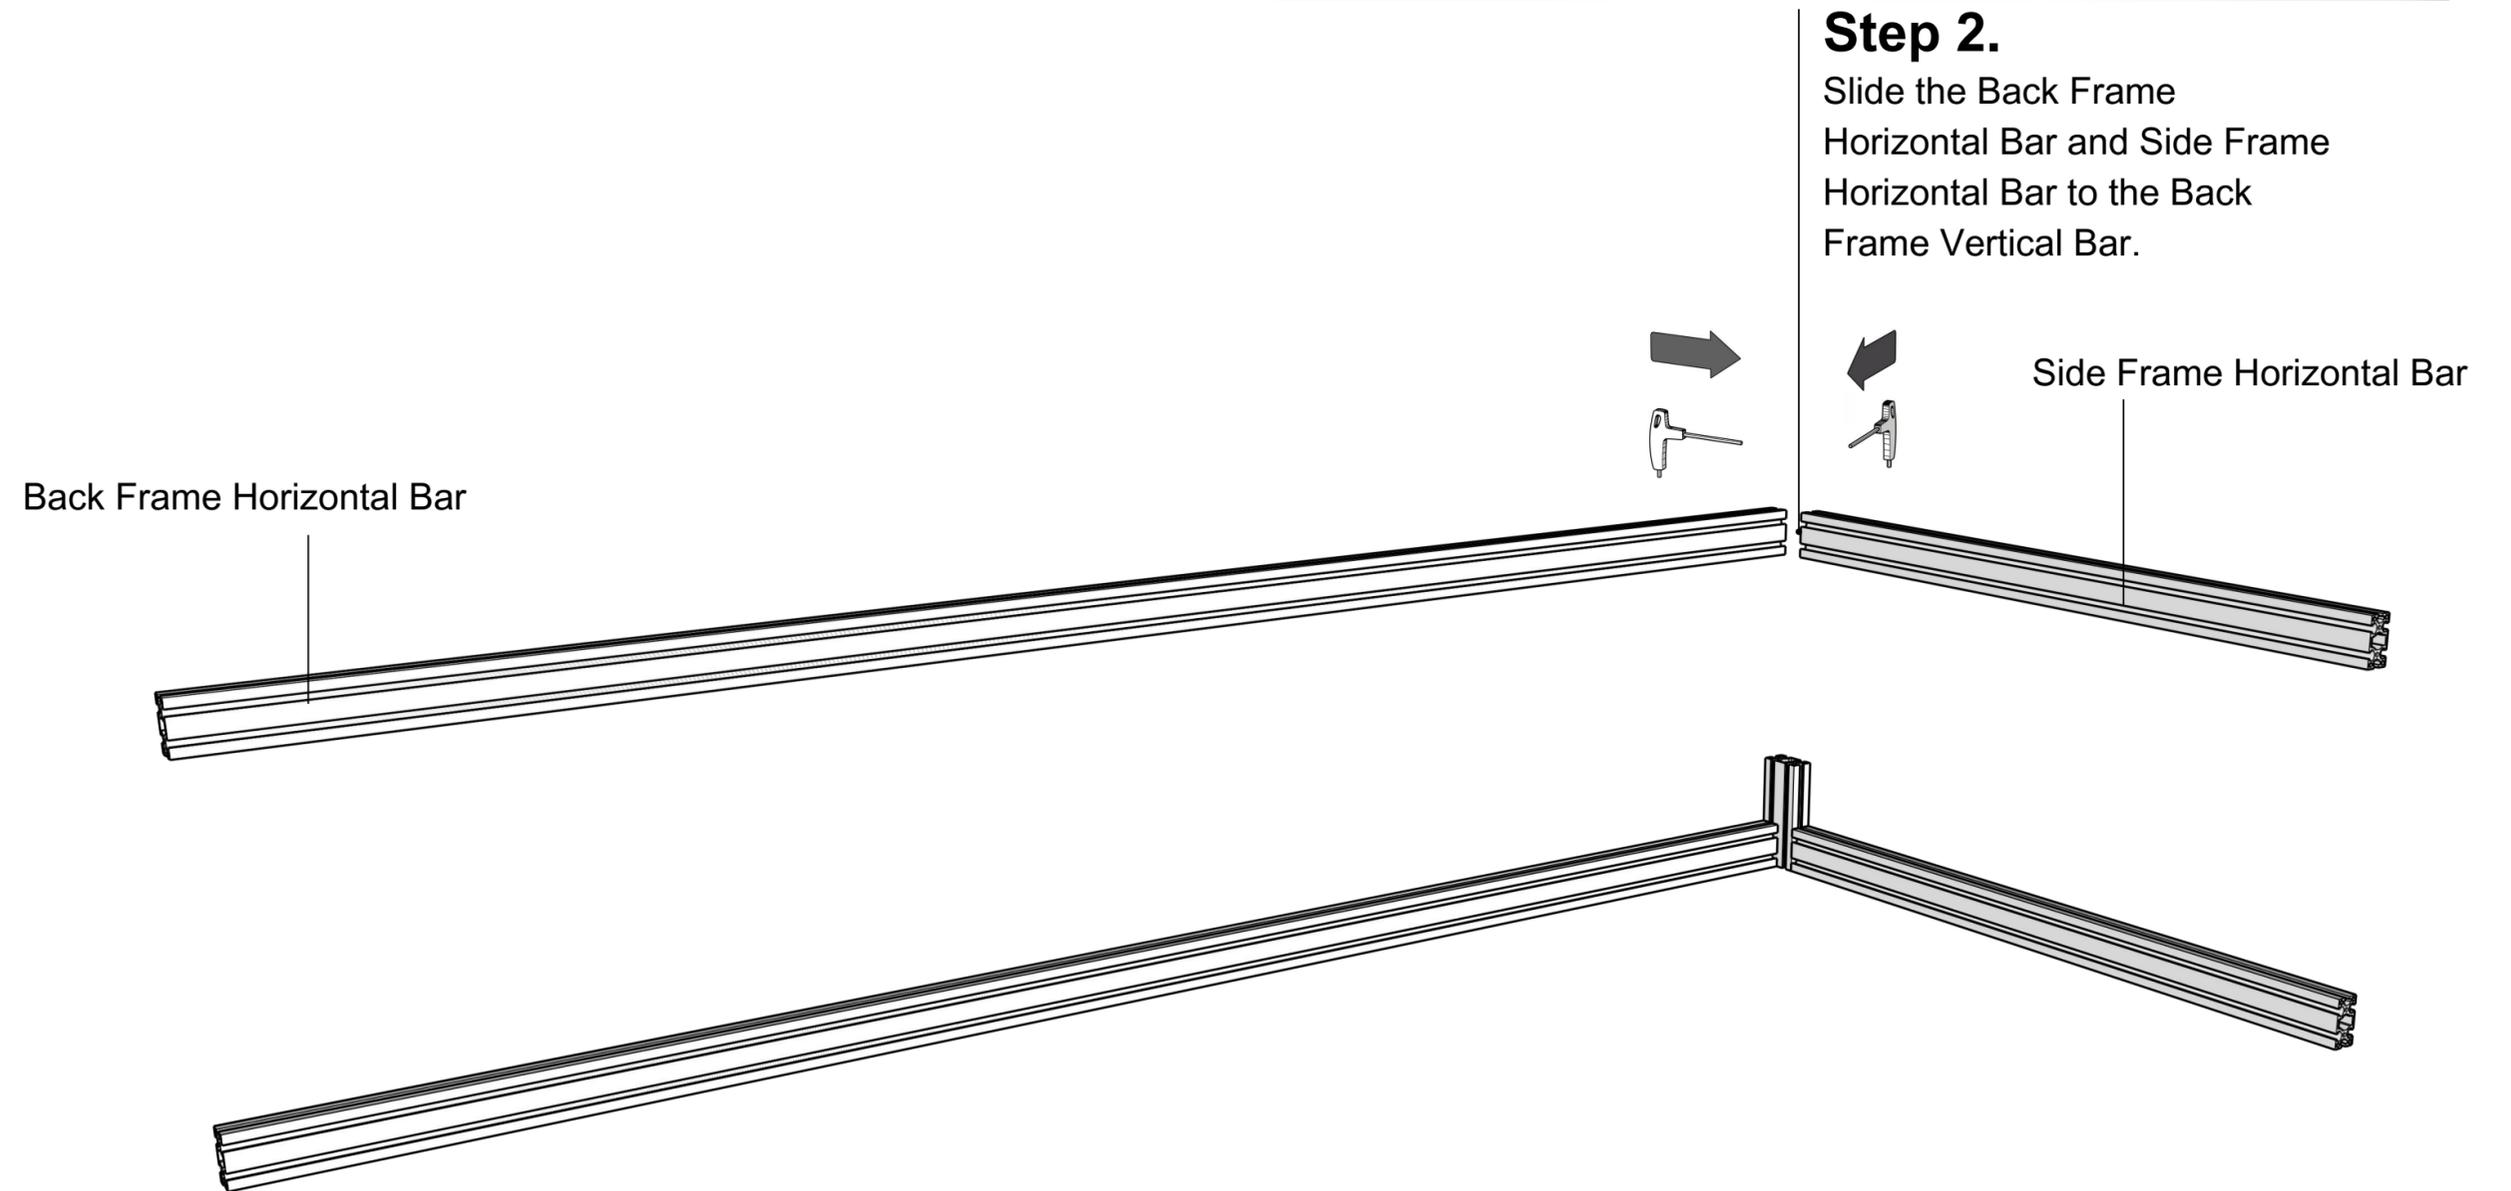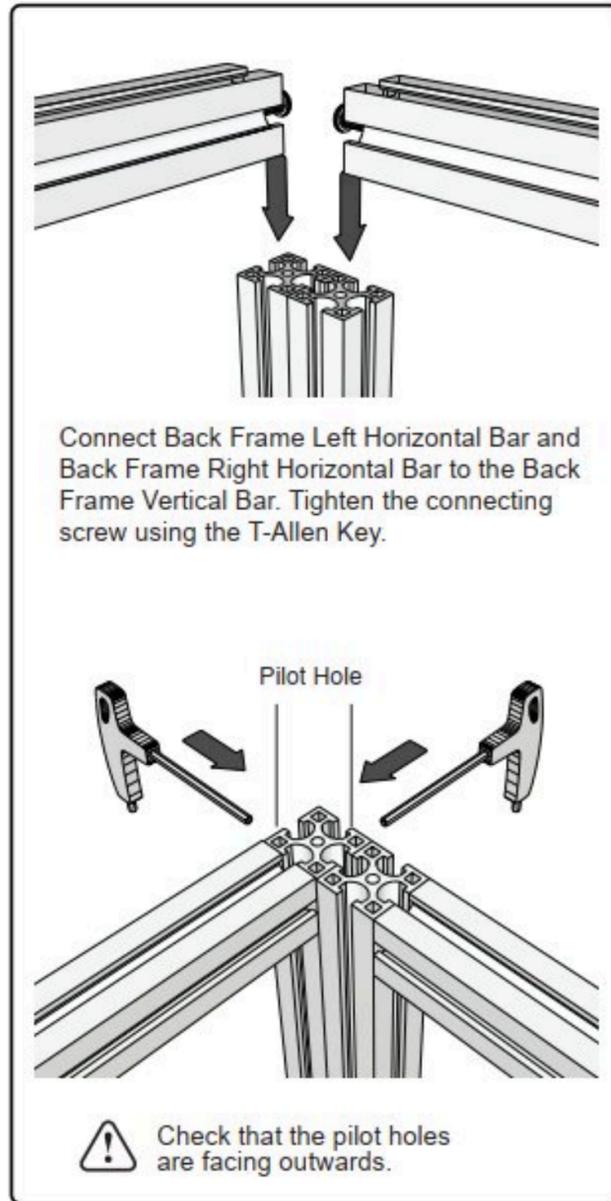

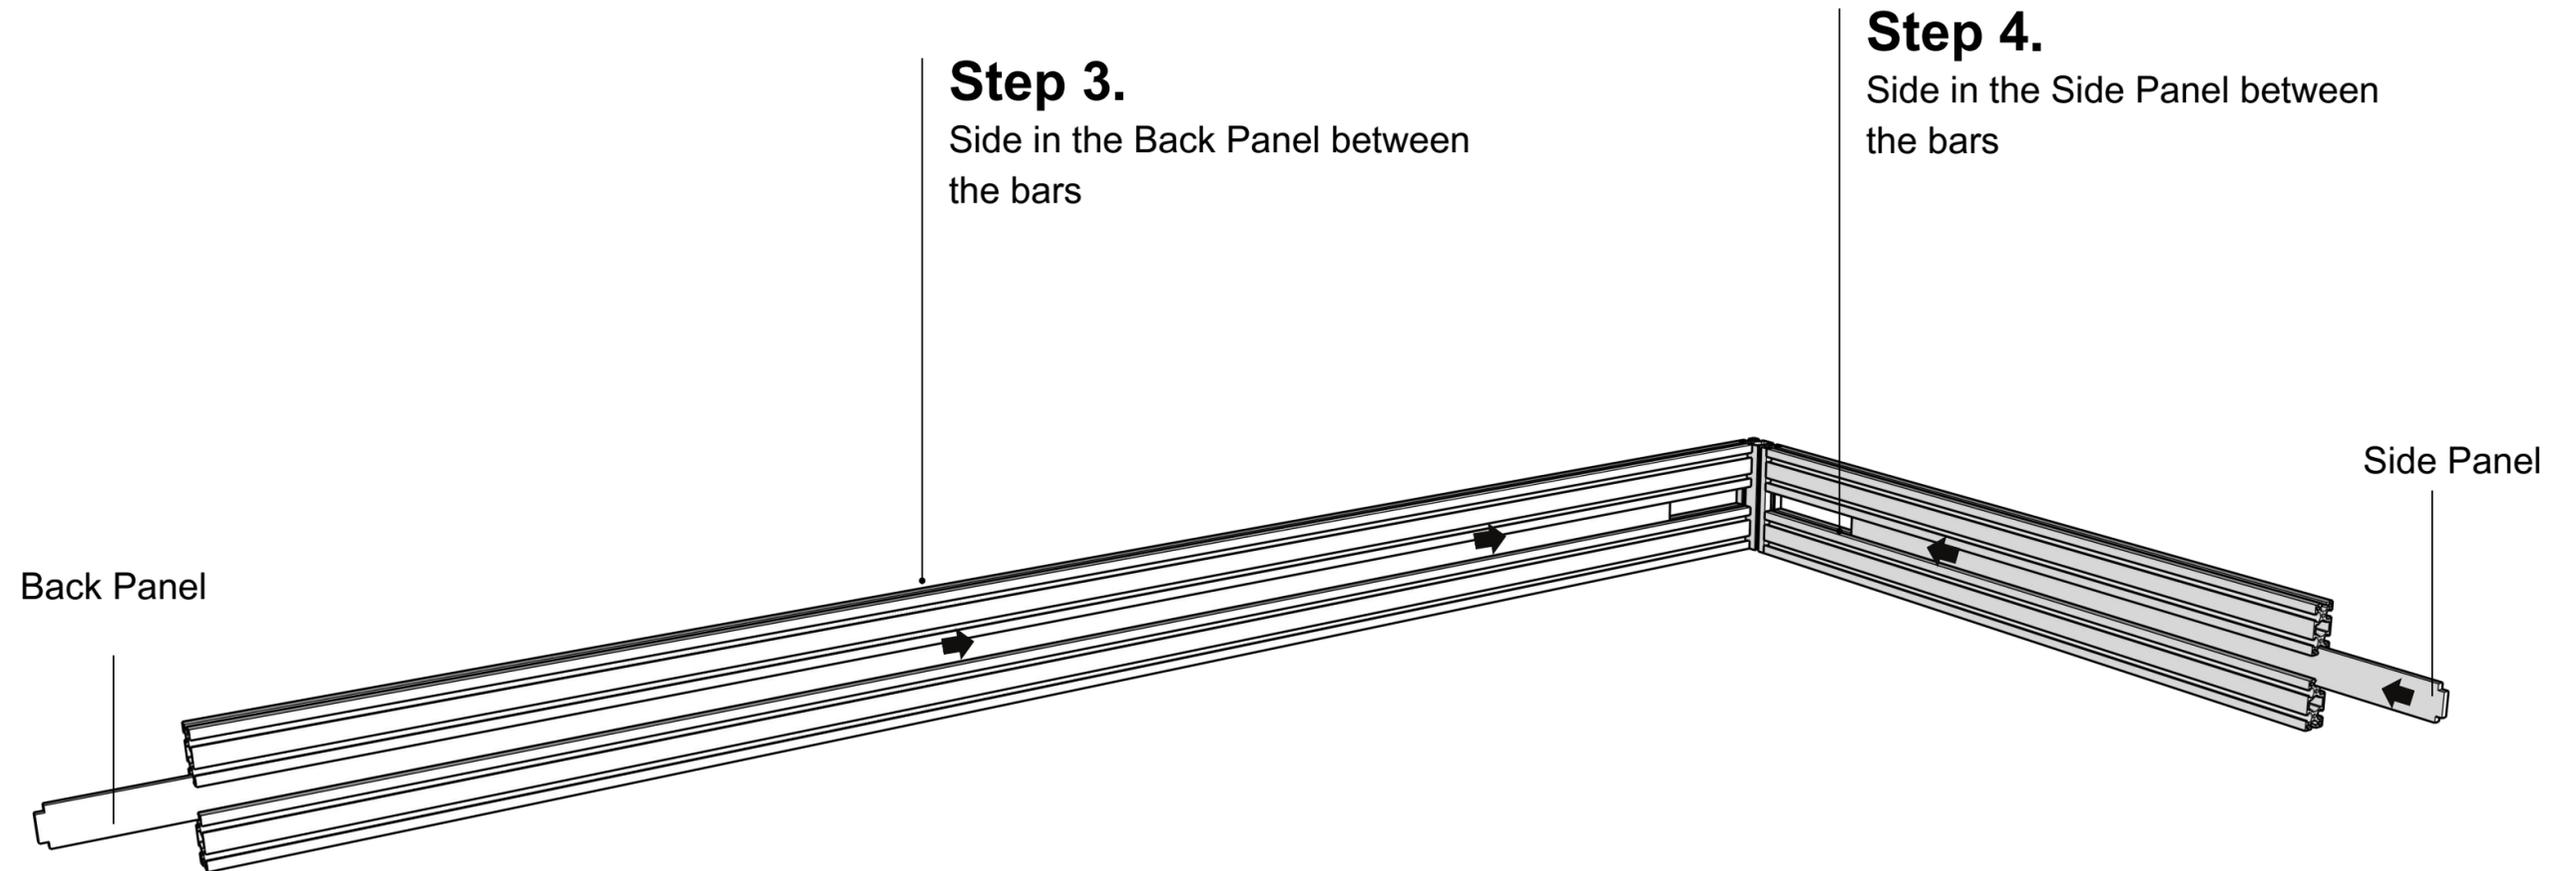


## Step 5.

Side in the Back Frame Vertical  
Bar between the bars




## Step 6.


Side in the Front Frame Vertical  
Bar between the bars

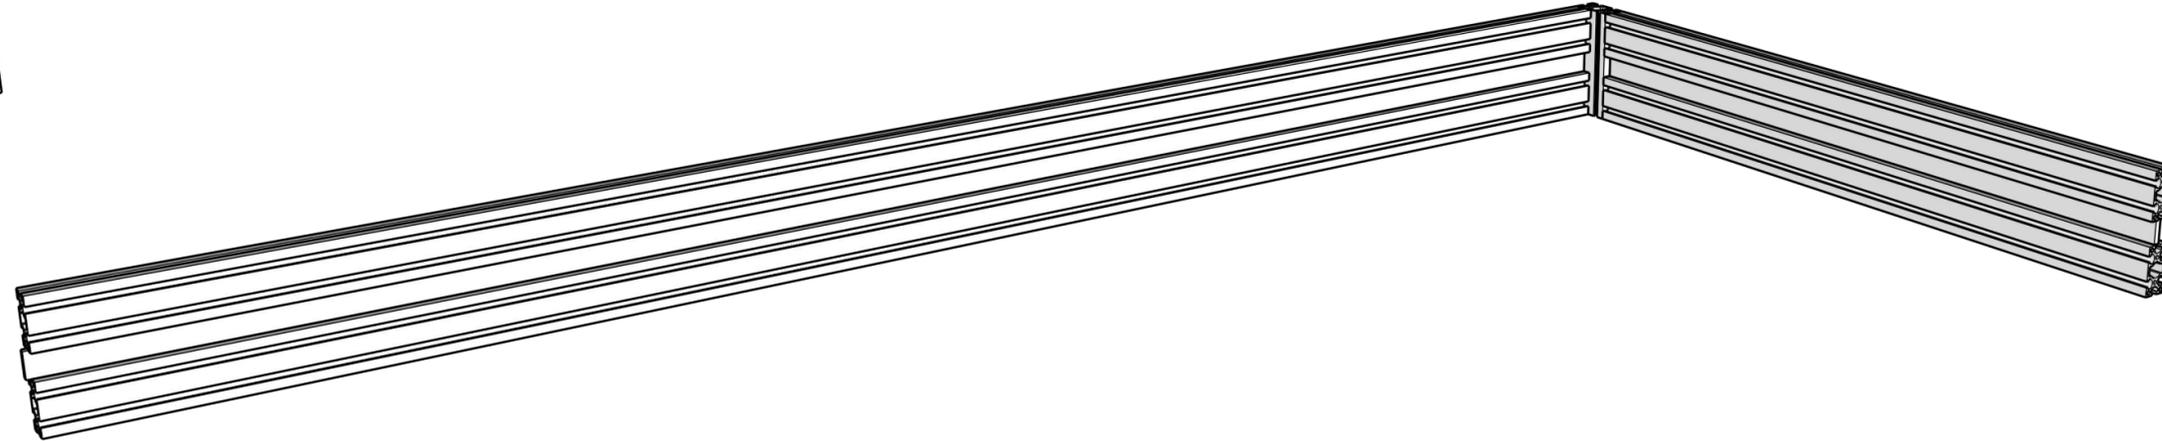

## Step 7.


Side in two Front Frame  
Horizontal Bars to Front Frame  
Vertical Bar

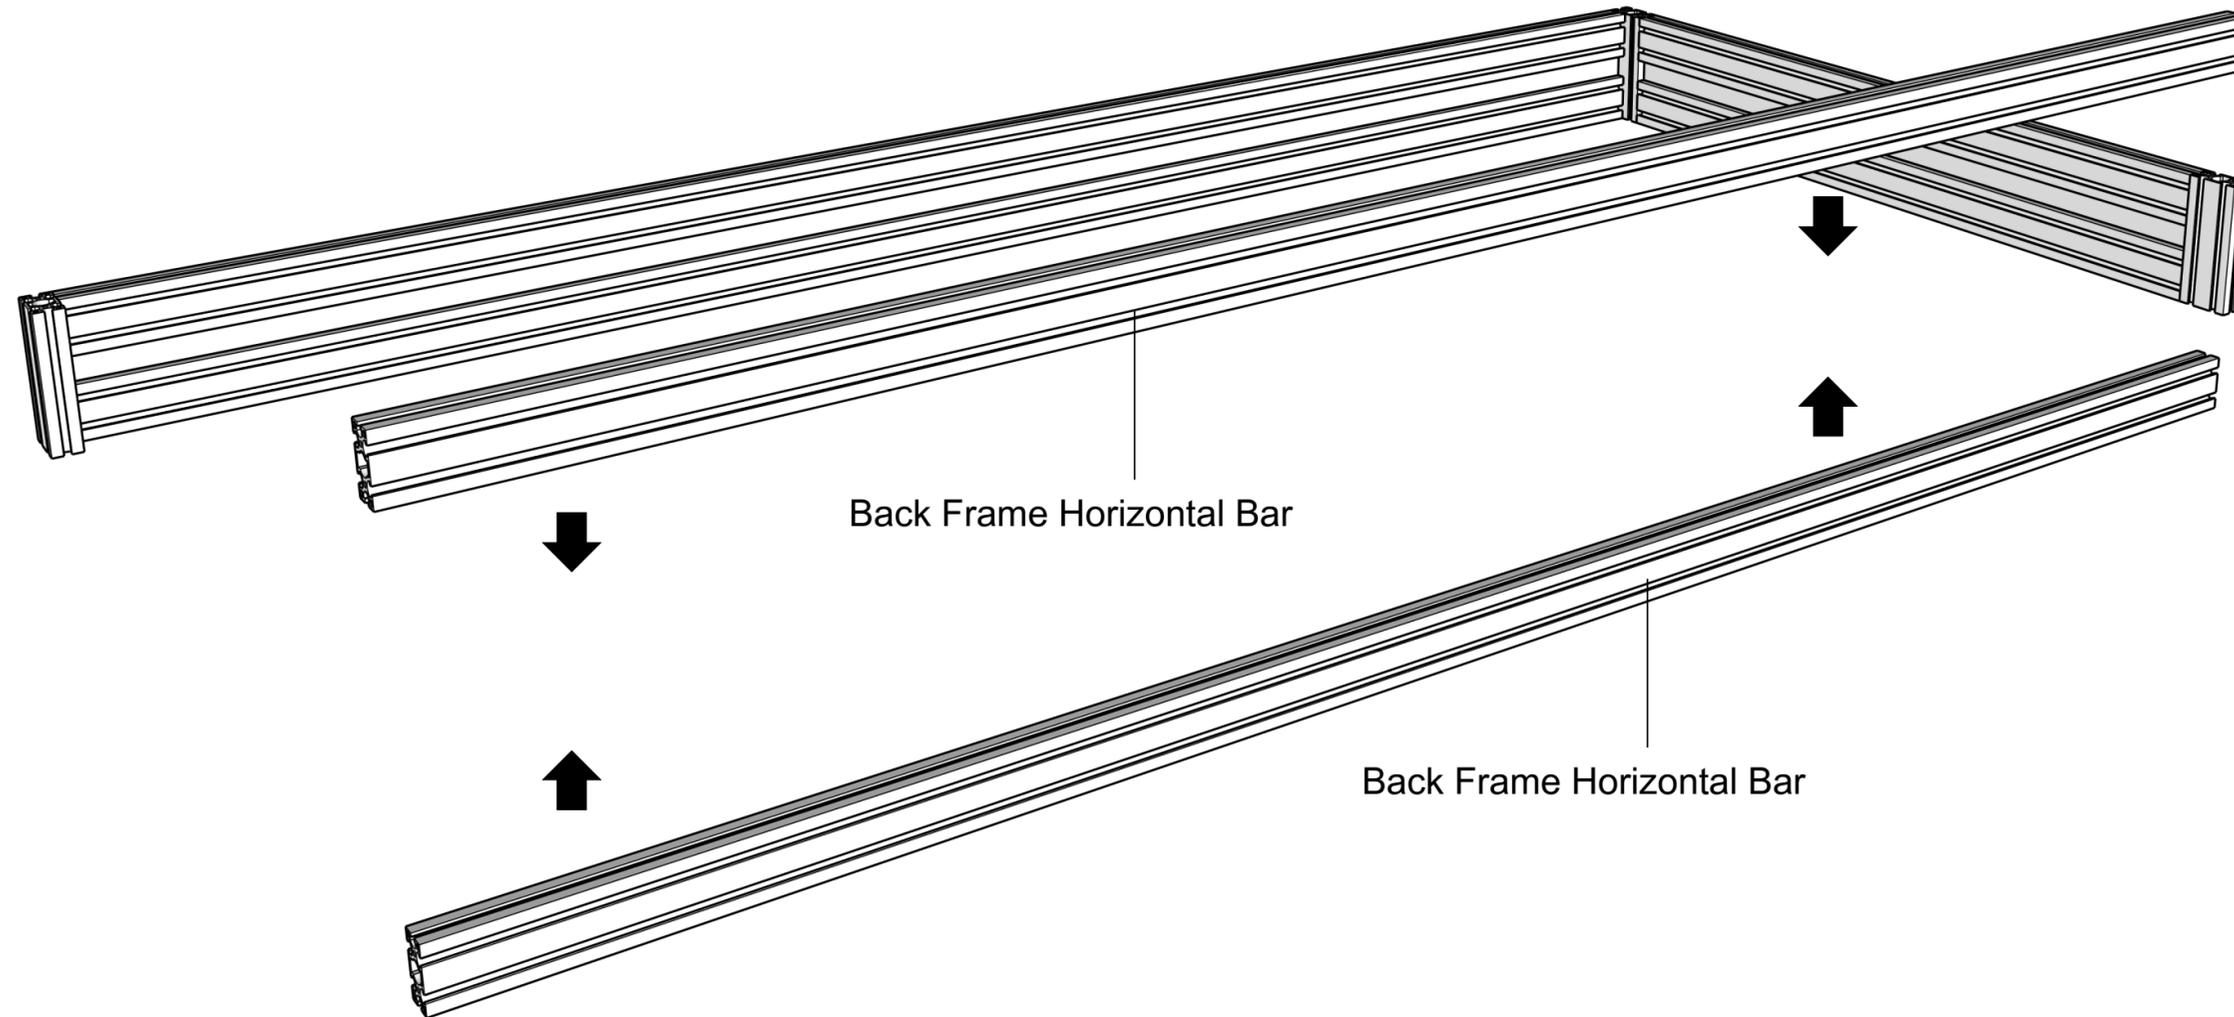

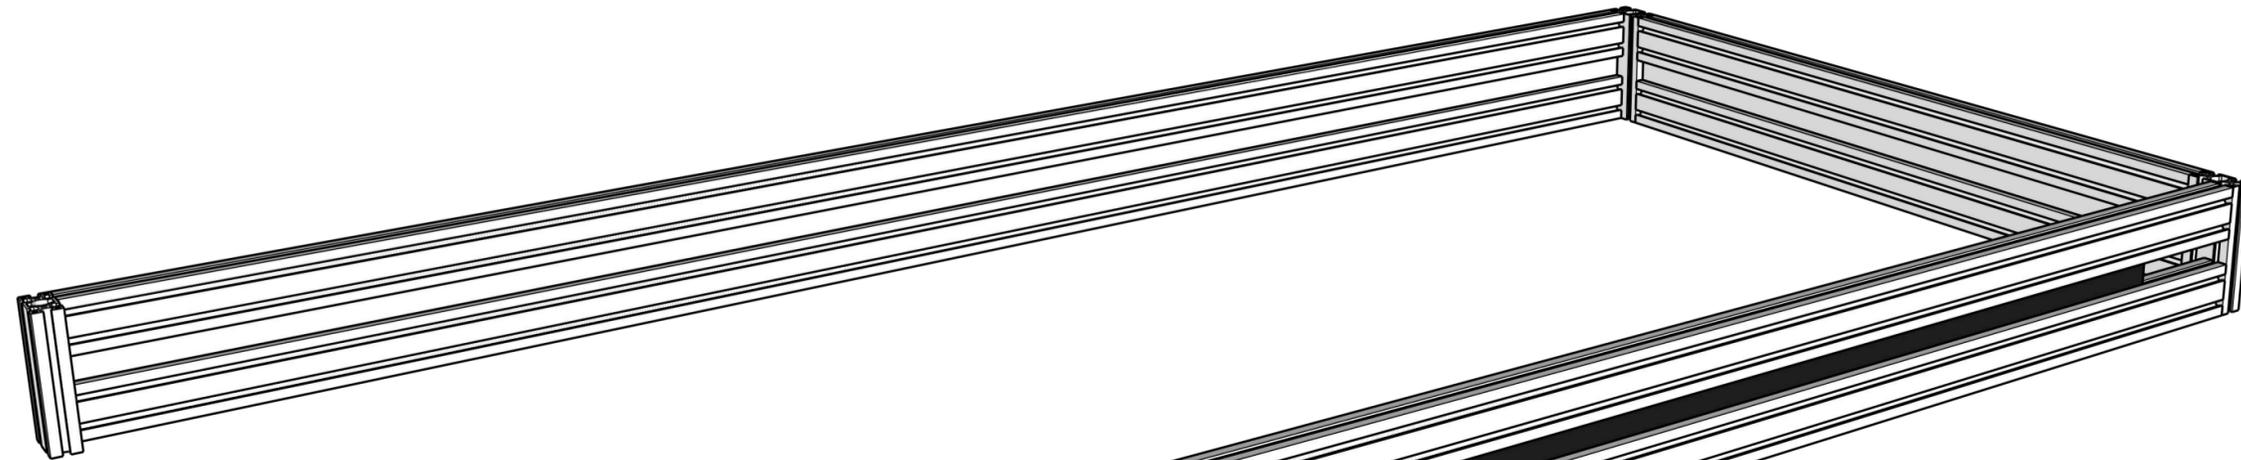


**Step 8.**

Side in the Front Panel  
between the bars

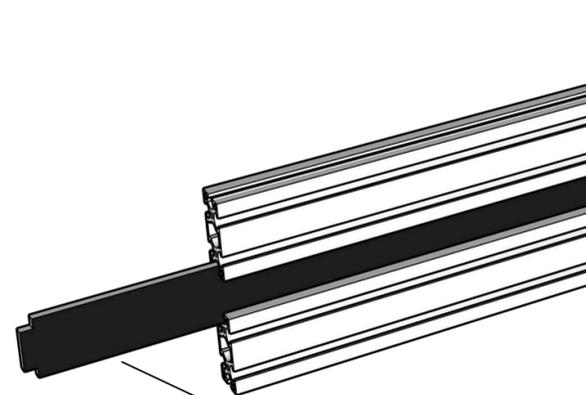


Front Panel

**Step 9.**  
Side in the Front Frame Vertical  
Bar

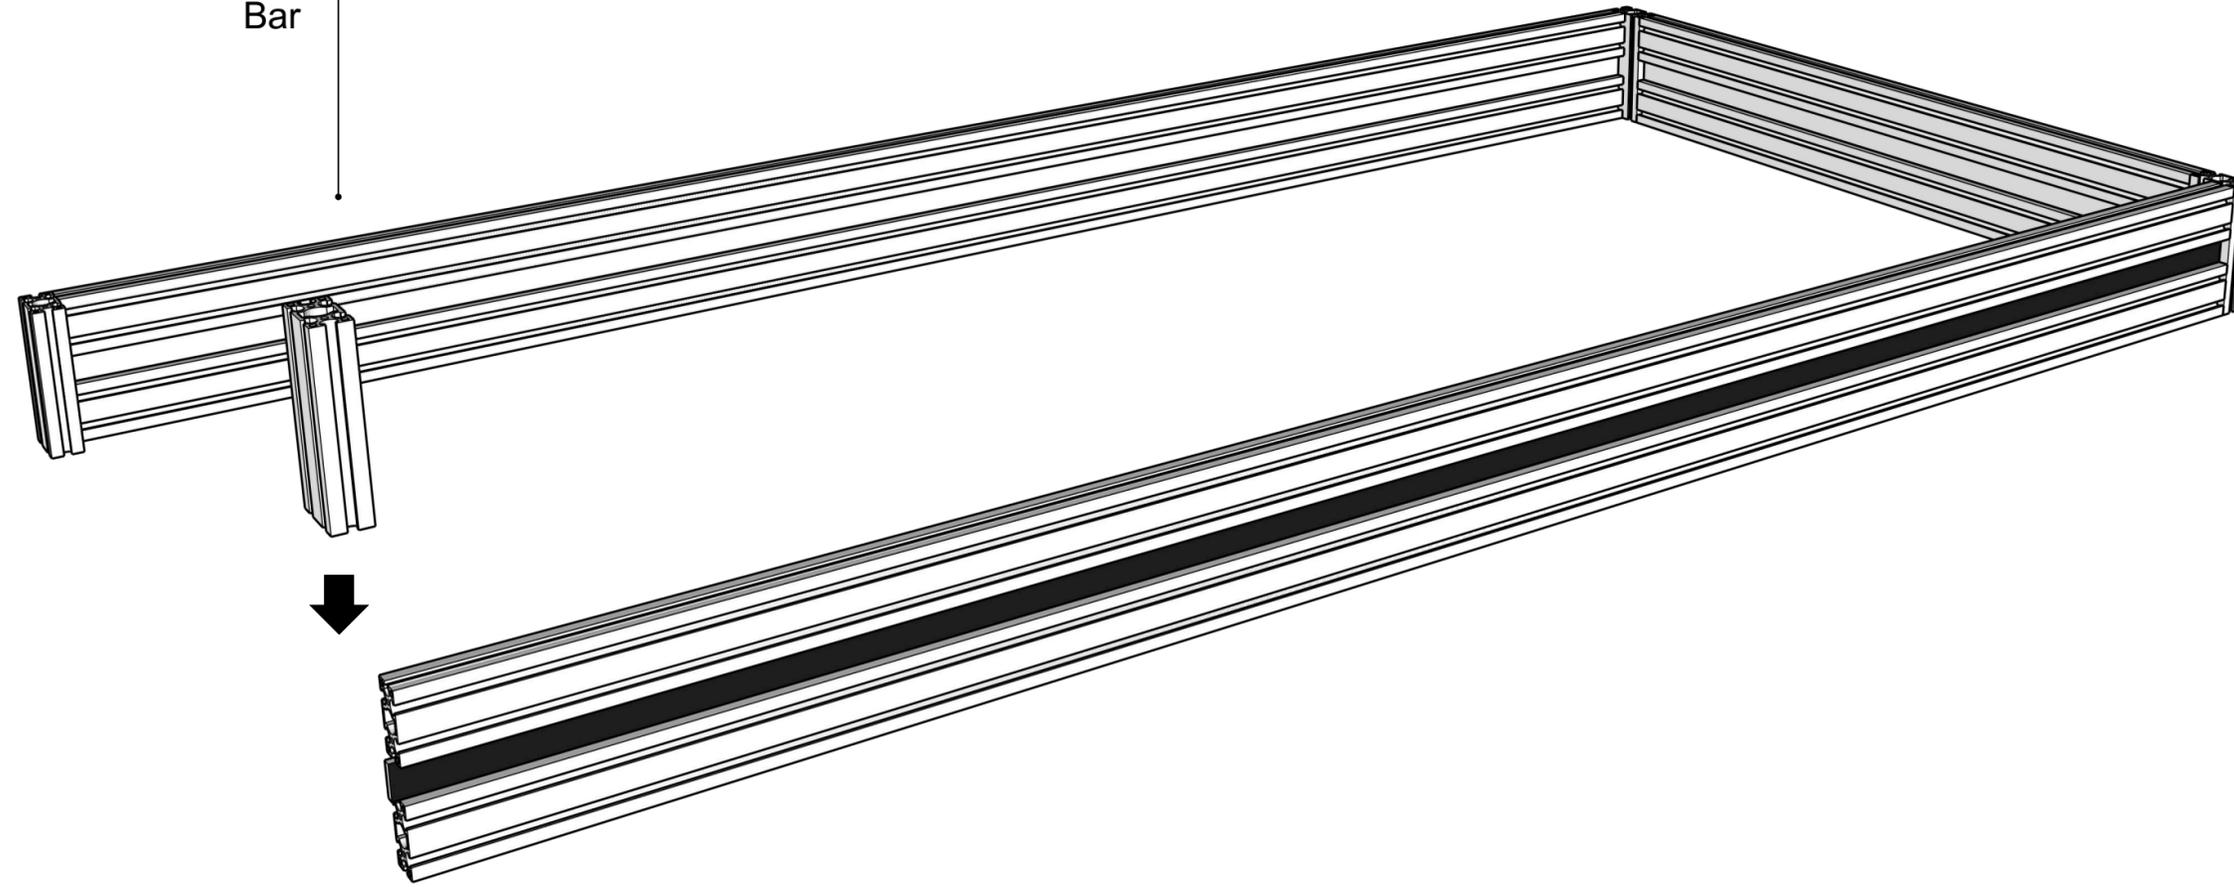


## Step 10.

Side in the Side Frame Vertical  
Bar between the bars

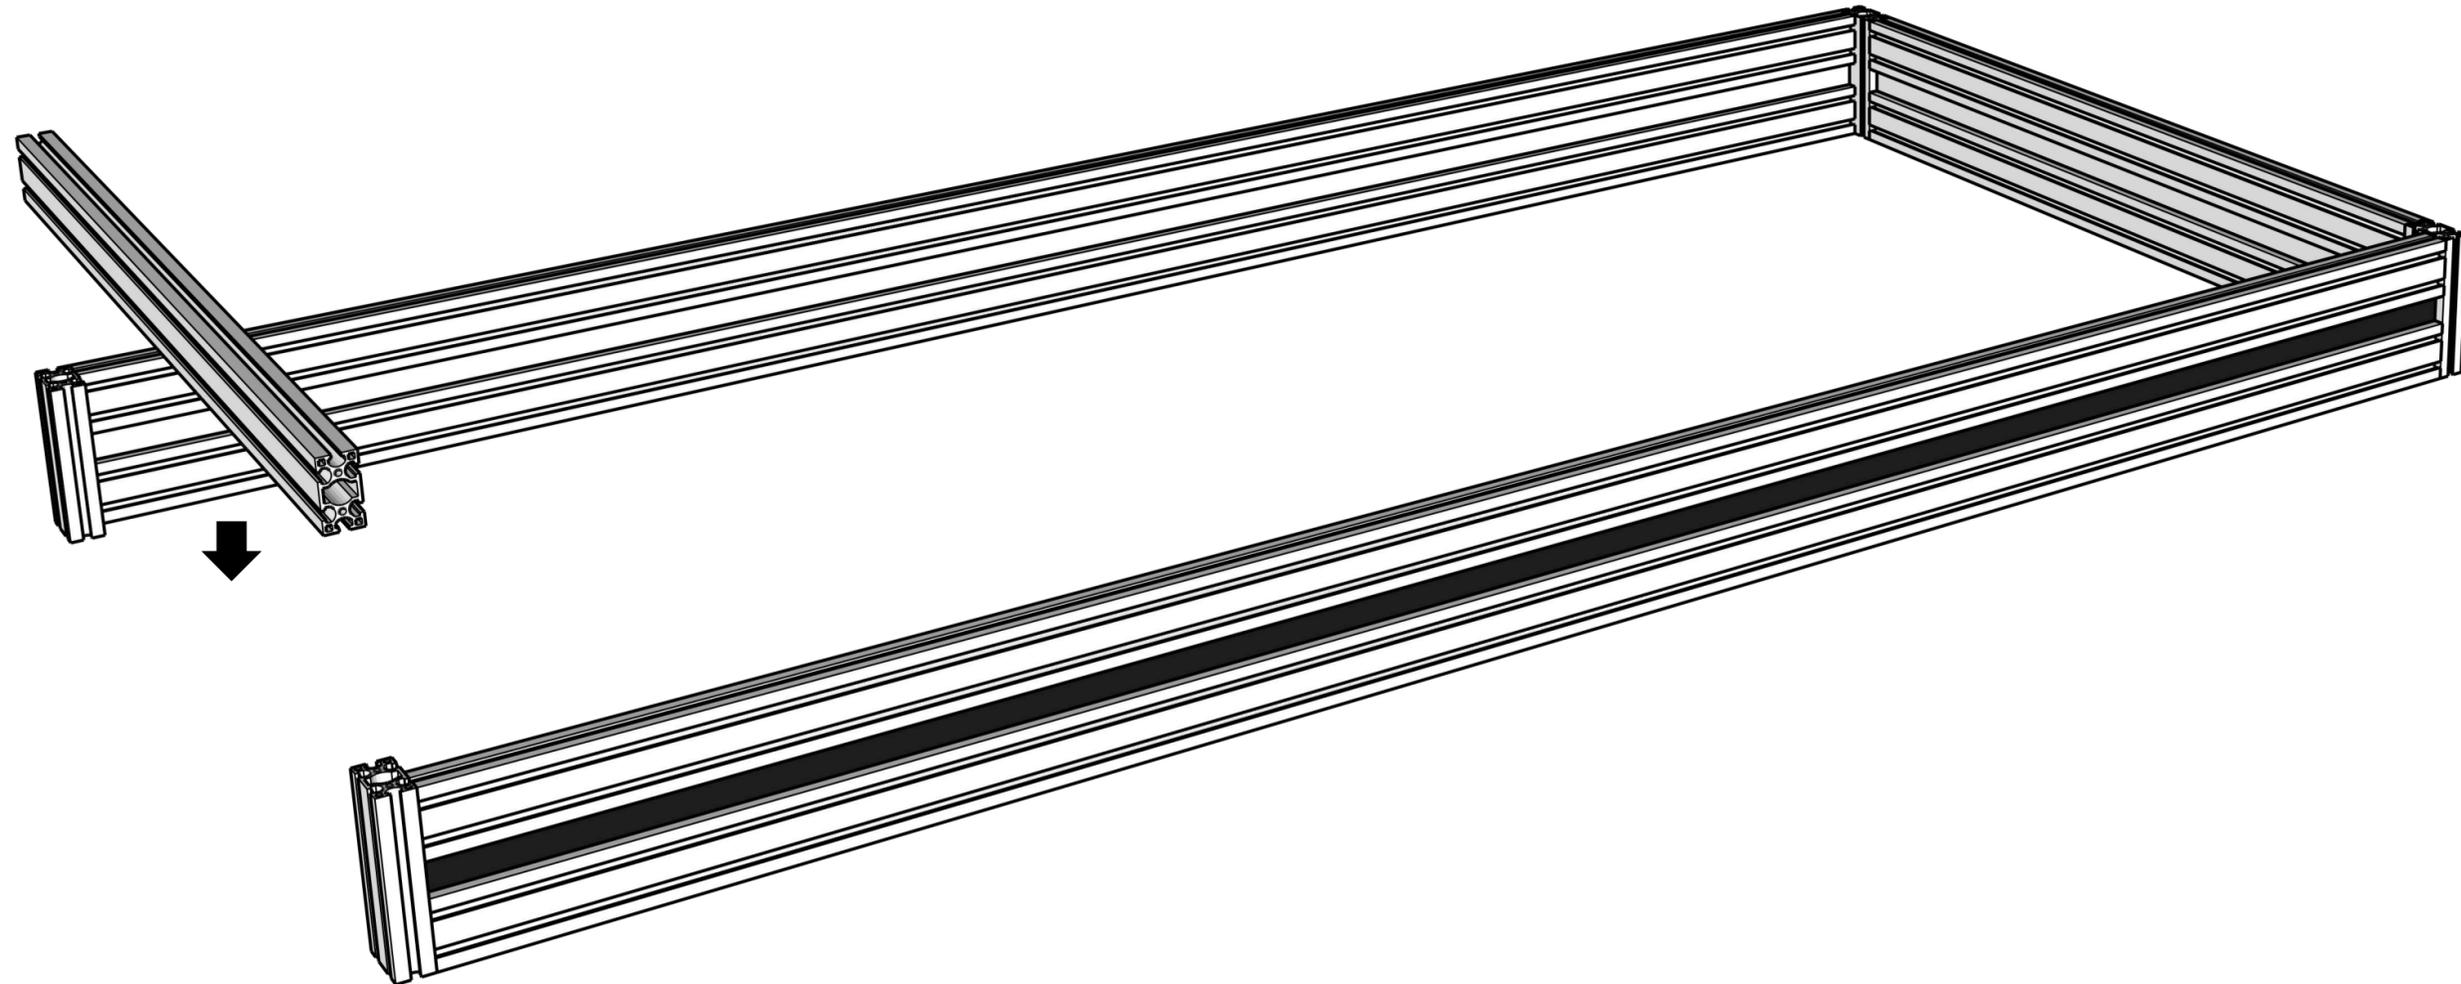


**Step 11.**

Side in the Side Panel on Side  
Frame Vertical Bar

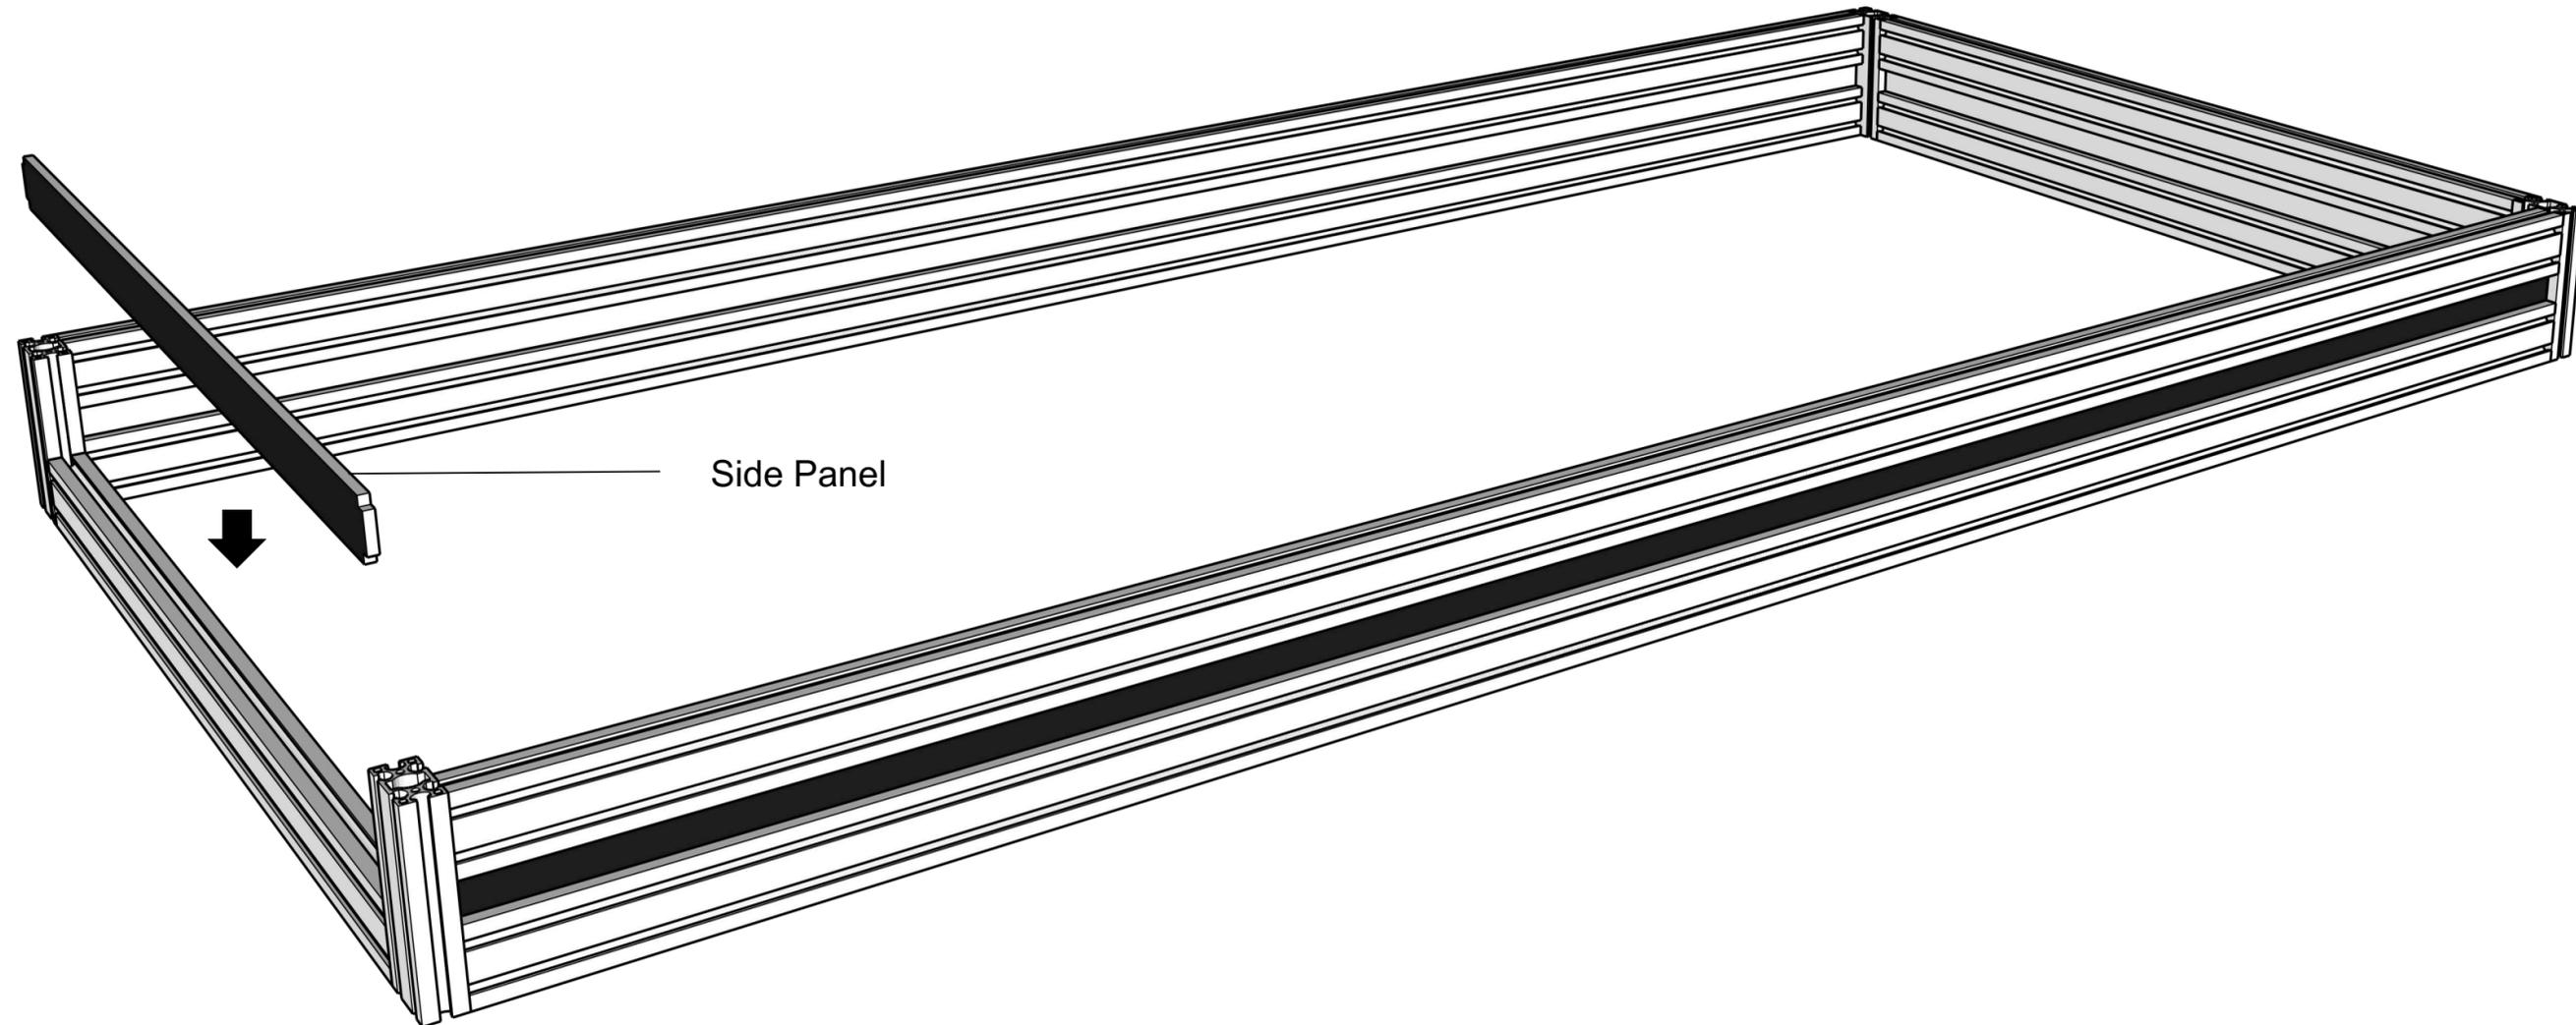


**Step 11.**

Side in the Side Panel on Side  
Frame Vertical Bar

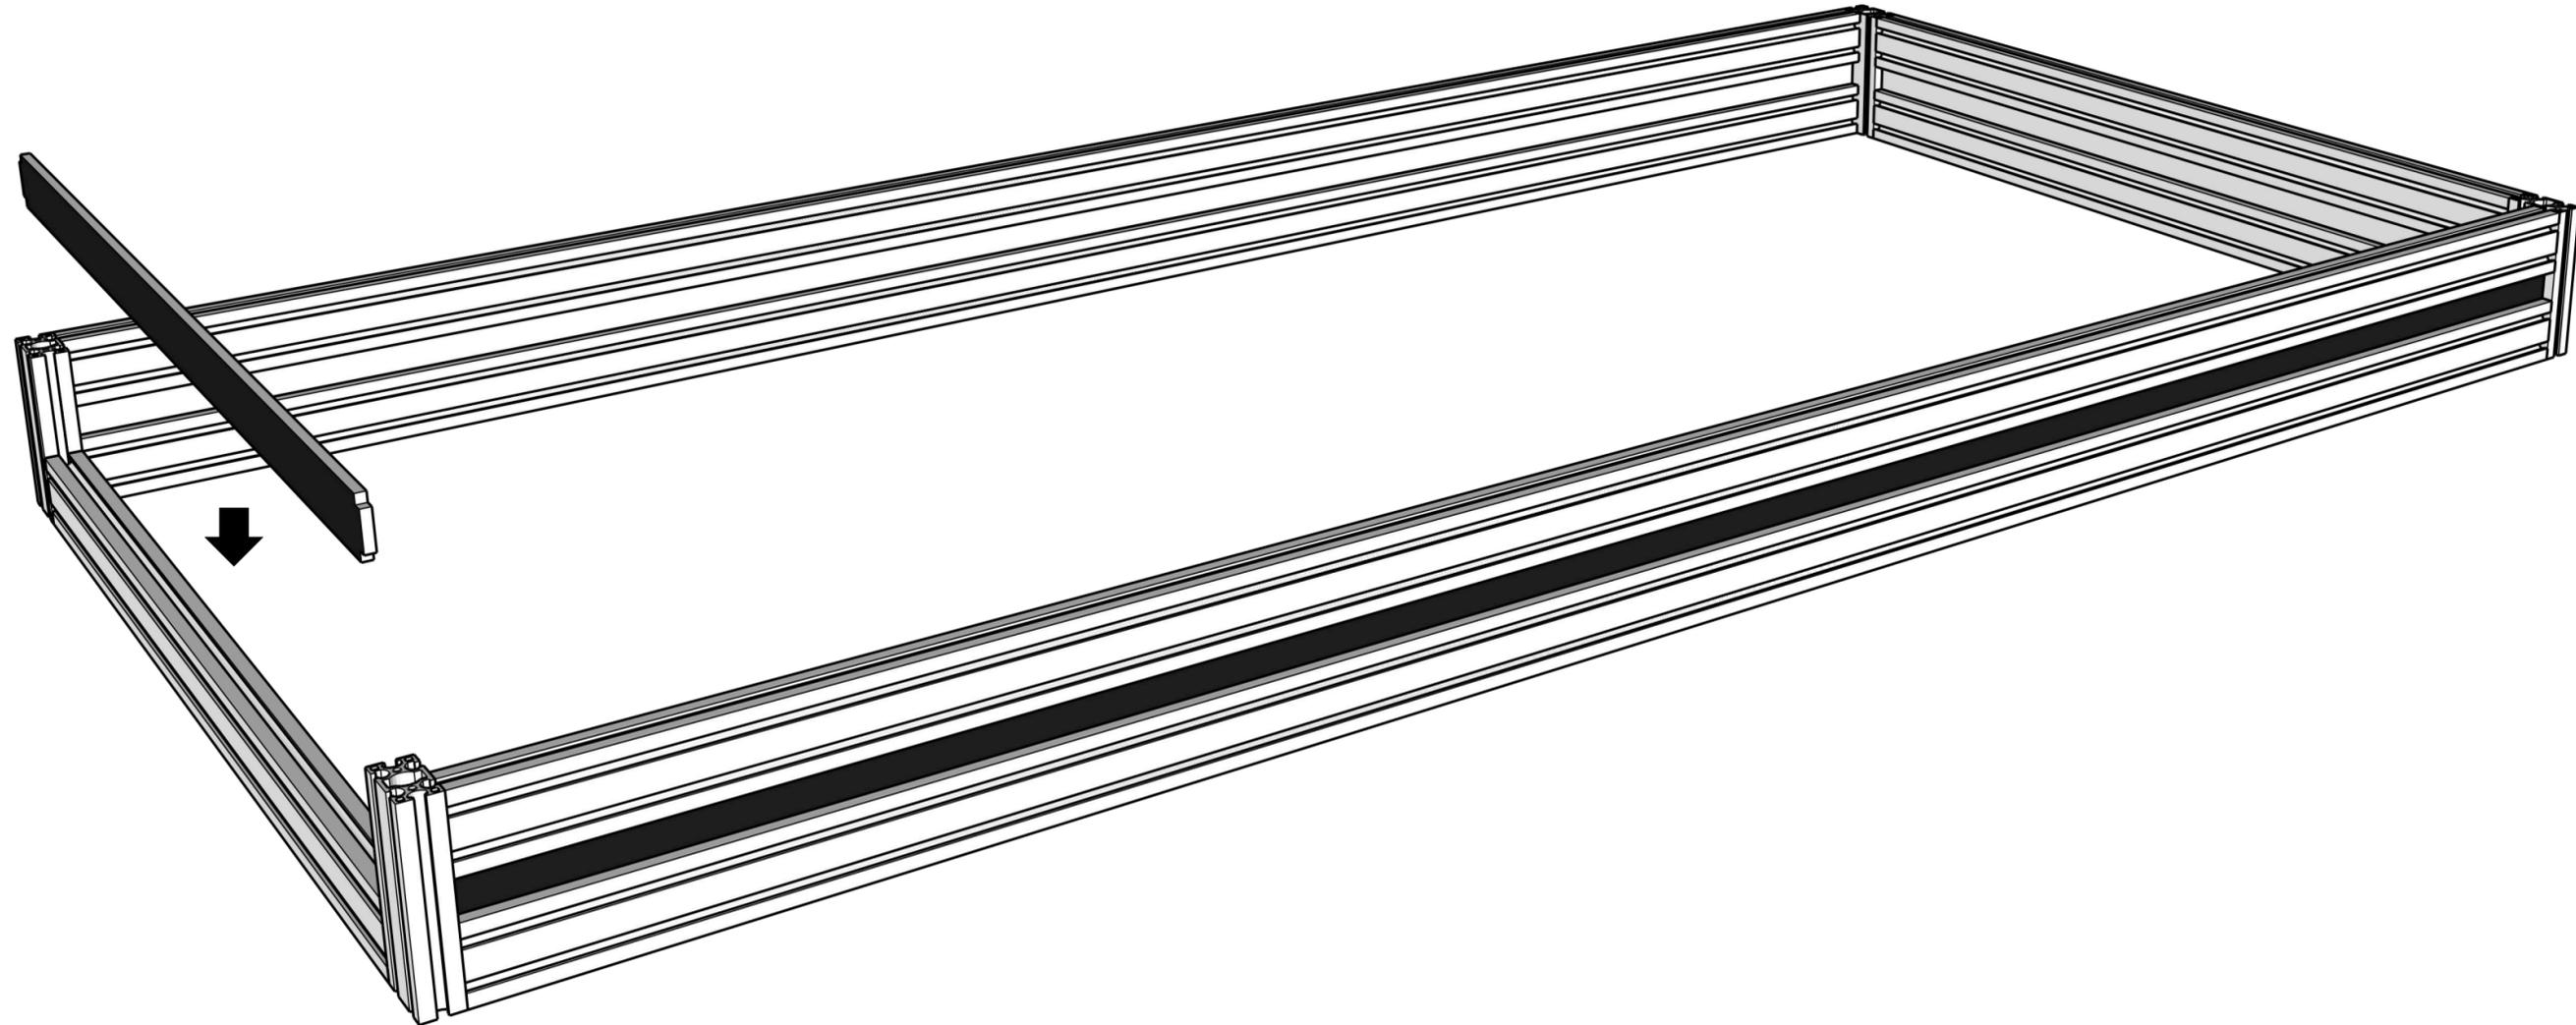

**Step 12.**

Slide the Side Frame Vertical  
Bar

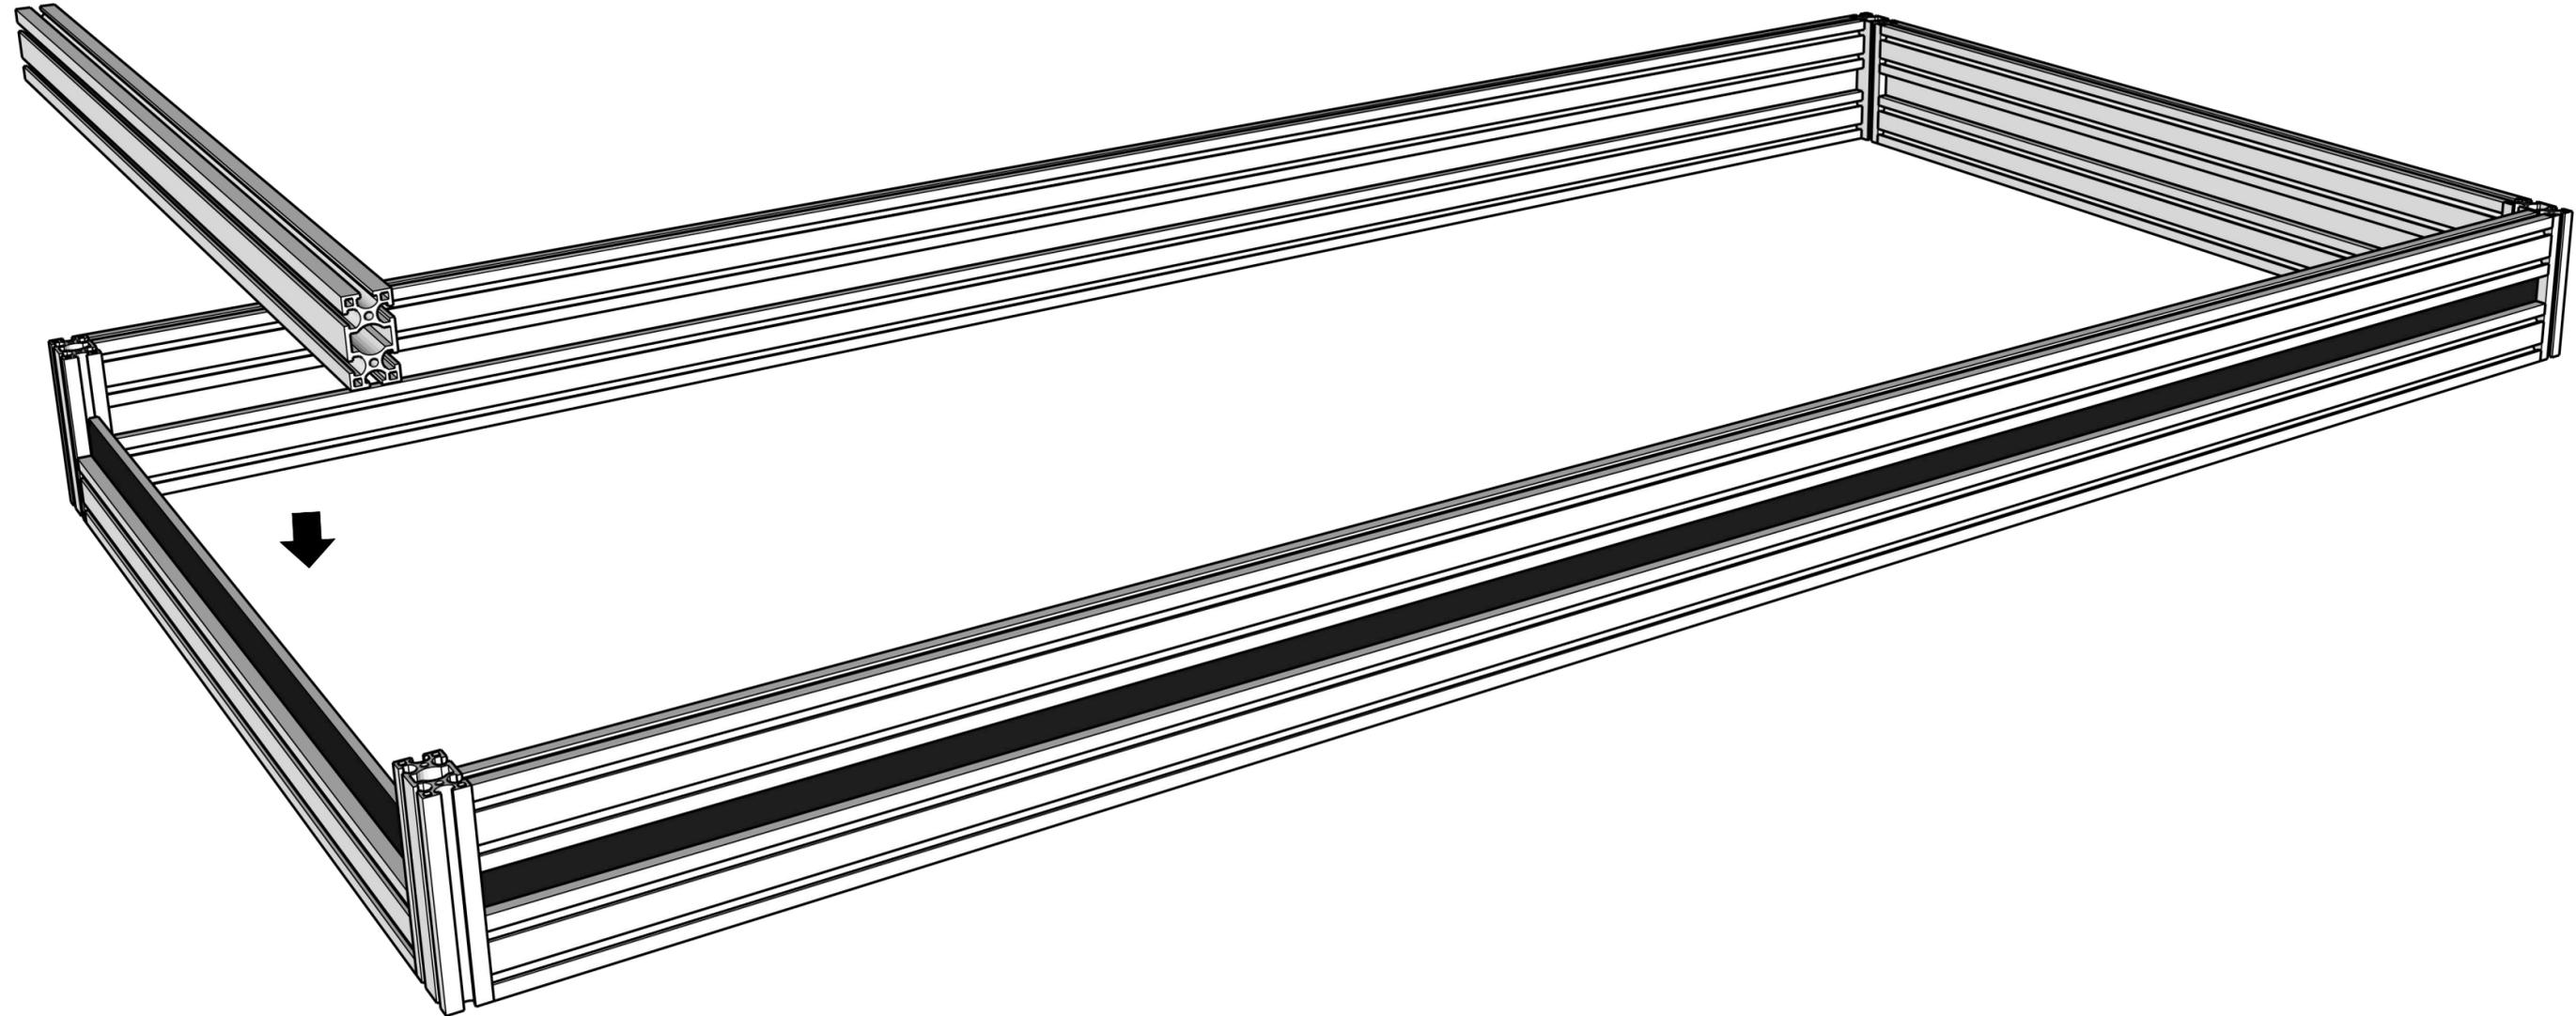

**Step 13.**

Insert Front/ Back Frame Foot  
Pad to bottom of Front/ Back  
Vertical Bar

