


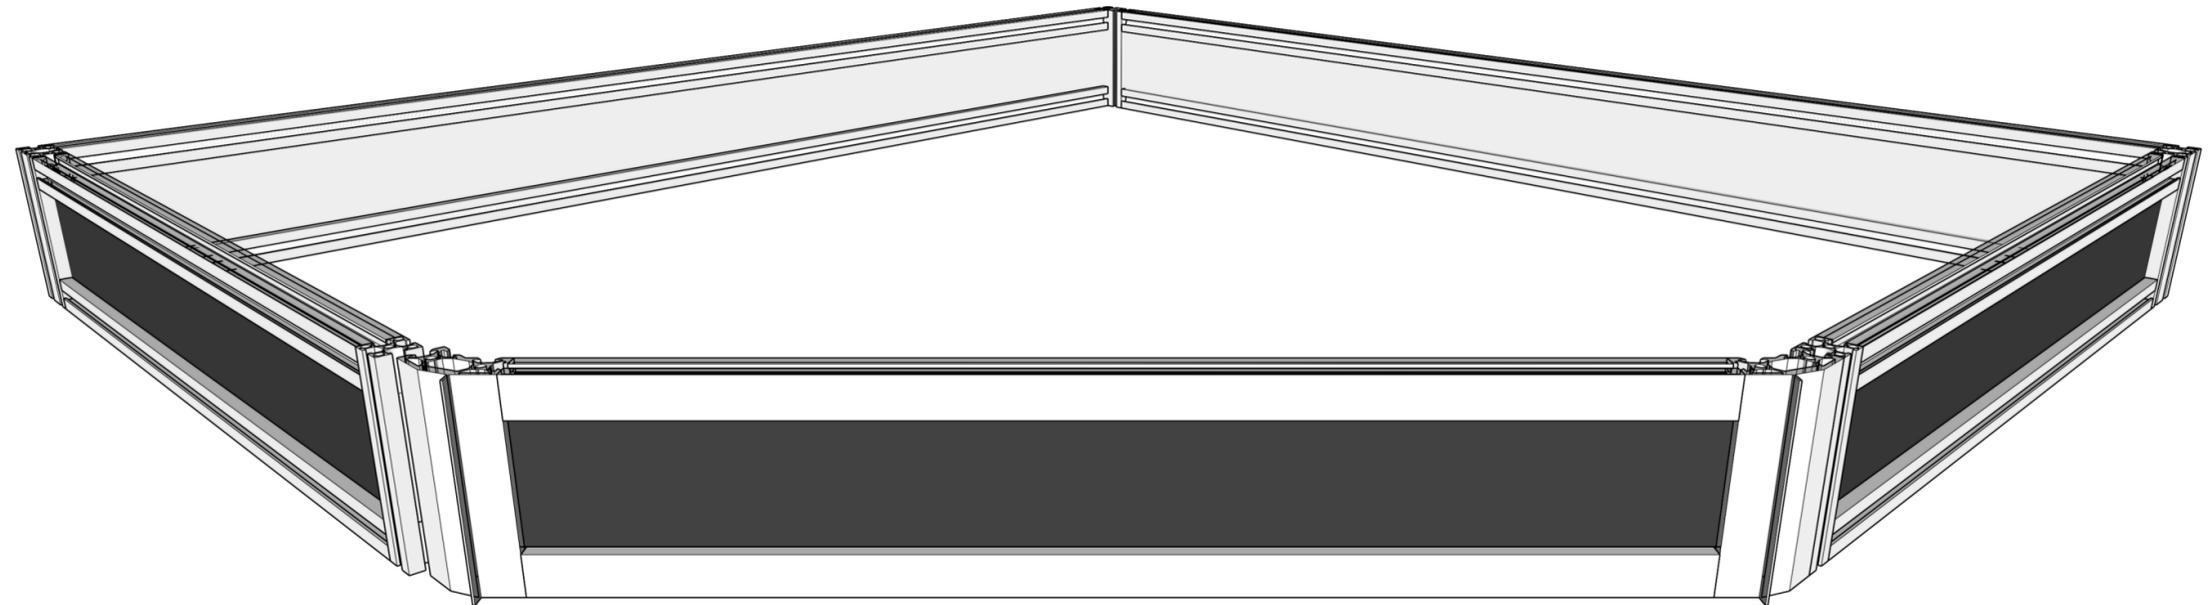


Bespoke Showcase Engineers

**45° Corner Display
Risers Assembly**


Version 1.0




Side Frame
Horizontal
Bars x 4

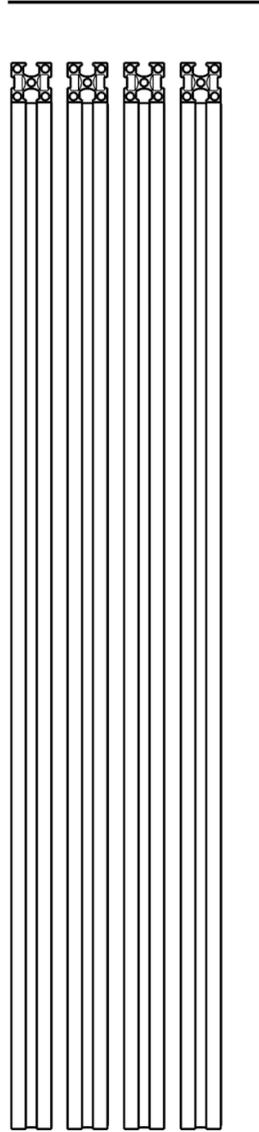


Right Frame
Horizontal
Bars x 2

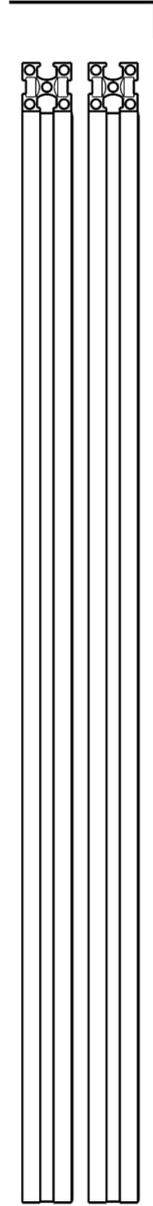


Left Frame
Horizontal
Bars x 2

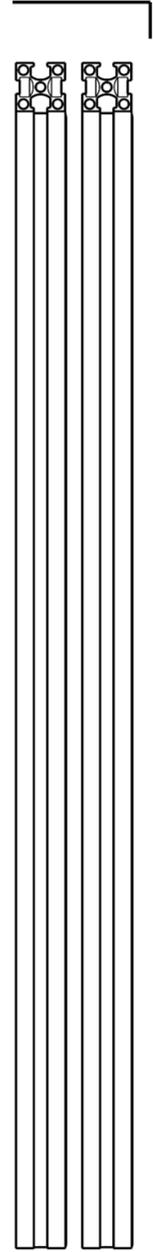

Side Frame
Back Vertical
Bars x 2

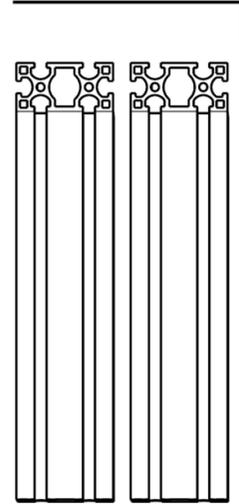


Back Frame
Vertical
Bar x 1

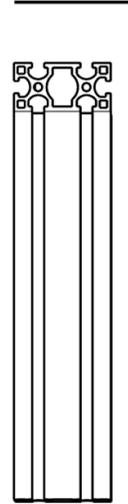


Assembled Front Frame




Side Frame
Front Vertical
Bars x 2

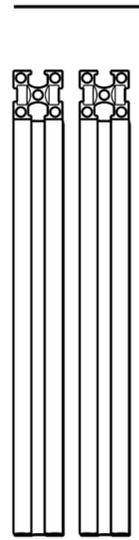


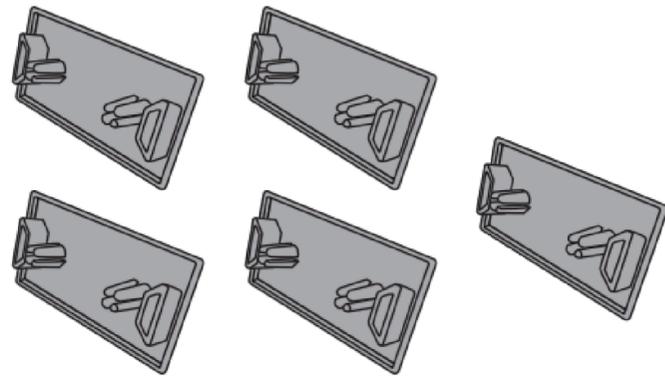

Back Frame Foot Pad x 5

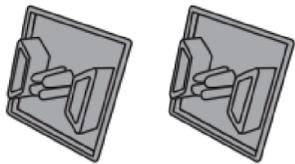

Front Frame Foot Pad x 2

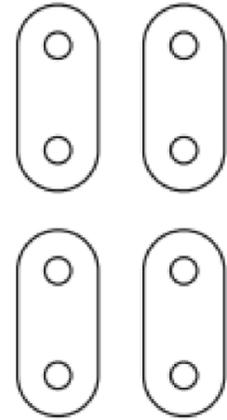


Horizontal Brackets x 4



M5 Allen Key x 1



M4 Allen Key x 1

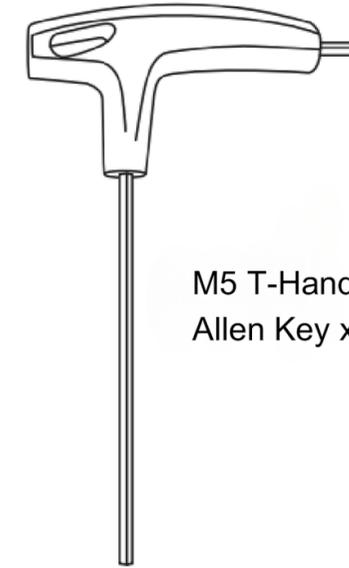

M5 T-Handle
Allen Key x 1



M5-Long
Screw x 20



M5 Washer
x 20




M5-Short
Screw x 8



M5 Nuts x 8



M4 Stacking
Screw x 20

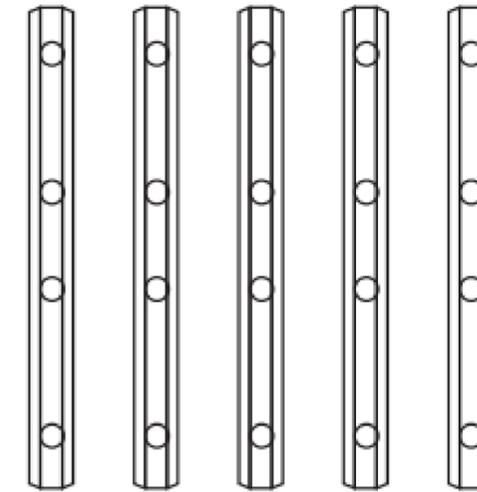

Stacking Brackets x 5

Side Panel



Side Panel




Back Left Panel



Back Right Panel





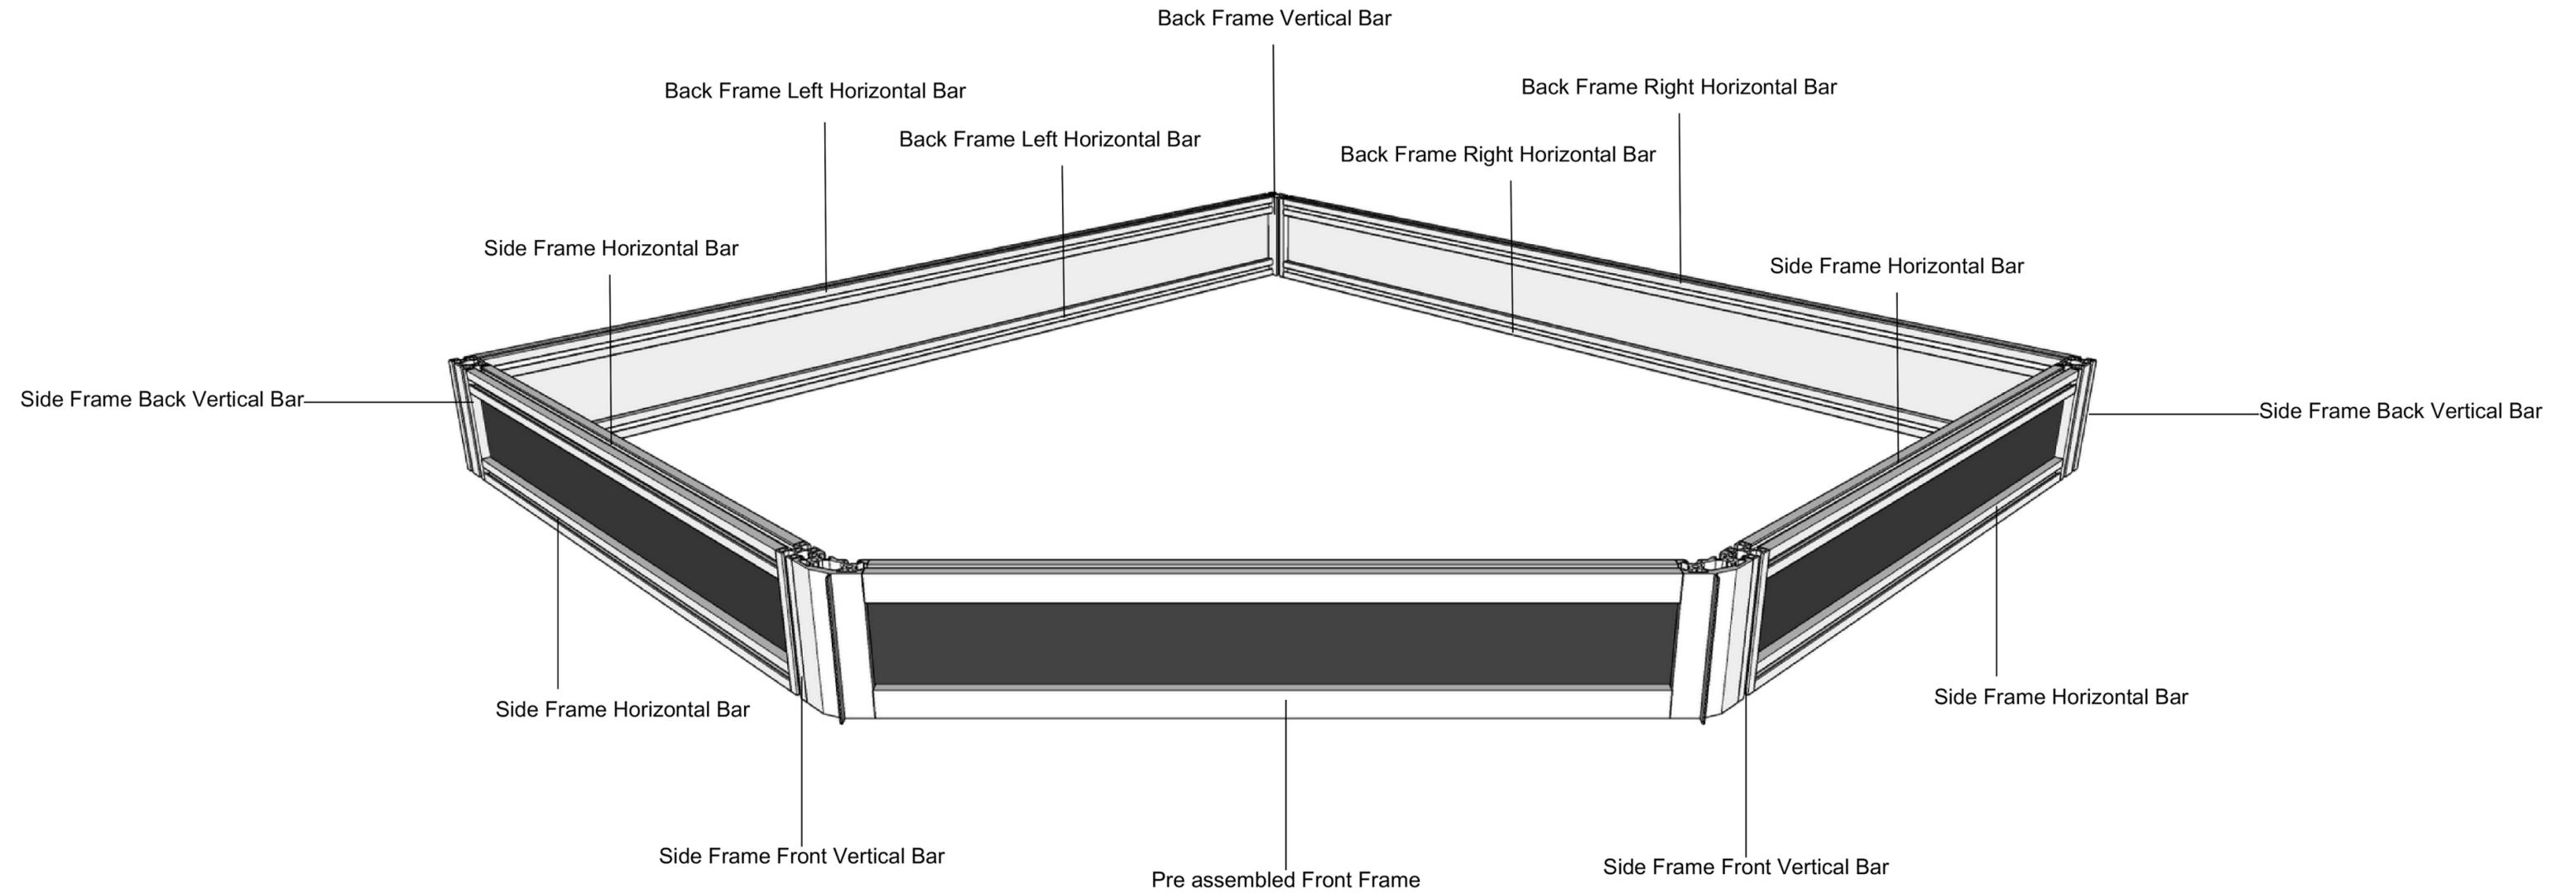



- You will need**
- M5-Long Screw x 16
 - M5-Washer x 16
 - Side Frame Horizontal Bars x 4
 - Back Frame Left Horizontal Bars x 2
 - Back Frame Right Horizontal Bars x 2

Steps to insert M5-Long Screw

- Step 1.** Insert the M5-Long Screw fully into the M5-Washer.
- Step 2.** Position the screw with washer into the pilot hole on the left side of the bar. Turn clockwise to tighten the screw. Leave a 15mm gap between the washer and bar.
- Step 3.** Repeat steps 1-2 for the other side of the bar.
- Step 4.** Repeat steps 1-3 for
- Side Frame Horizontal Bars x 4
 - Back Frame Left Horizontal Bars x 2
 - Back Frame Right Horizontal Bars x 2

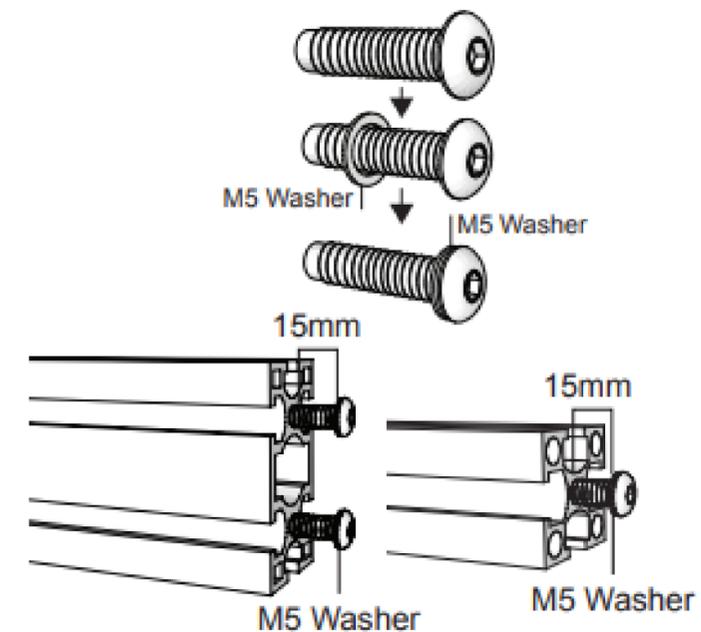


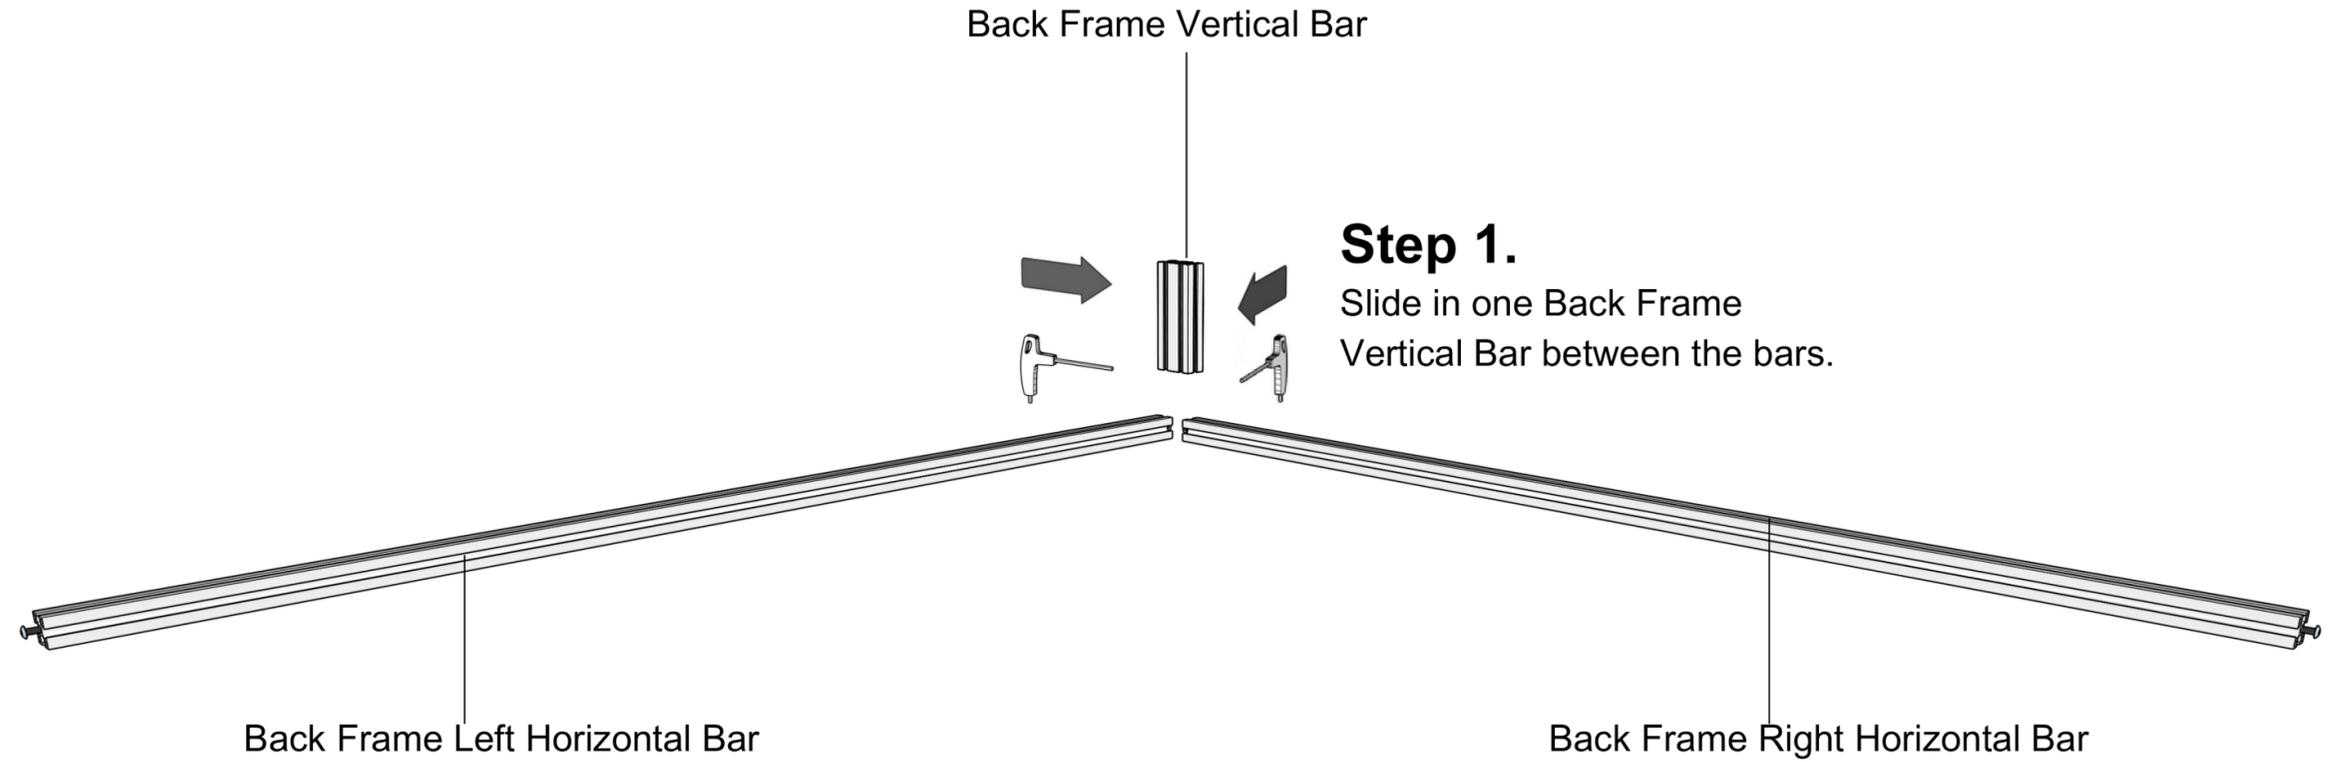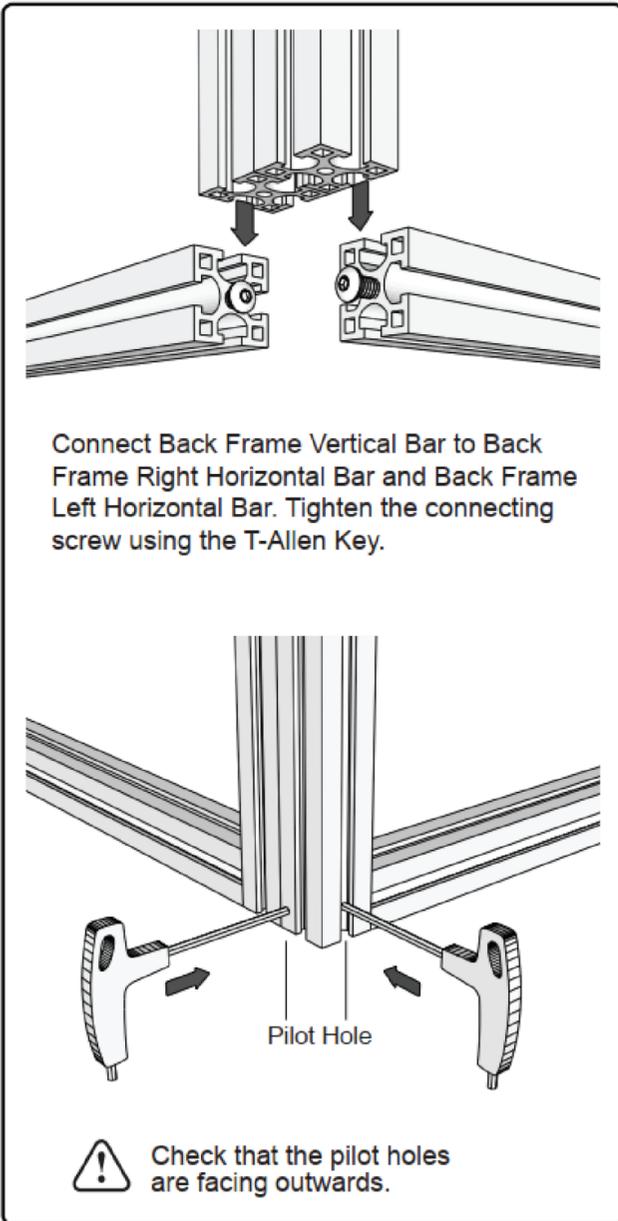


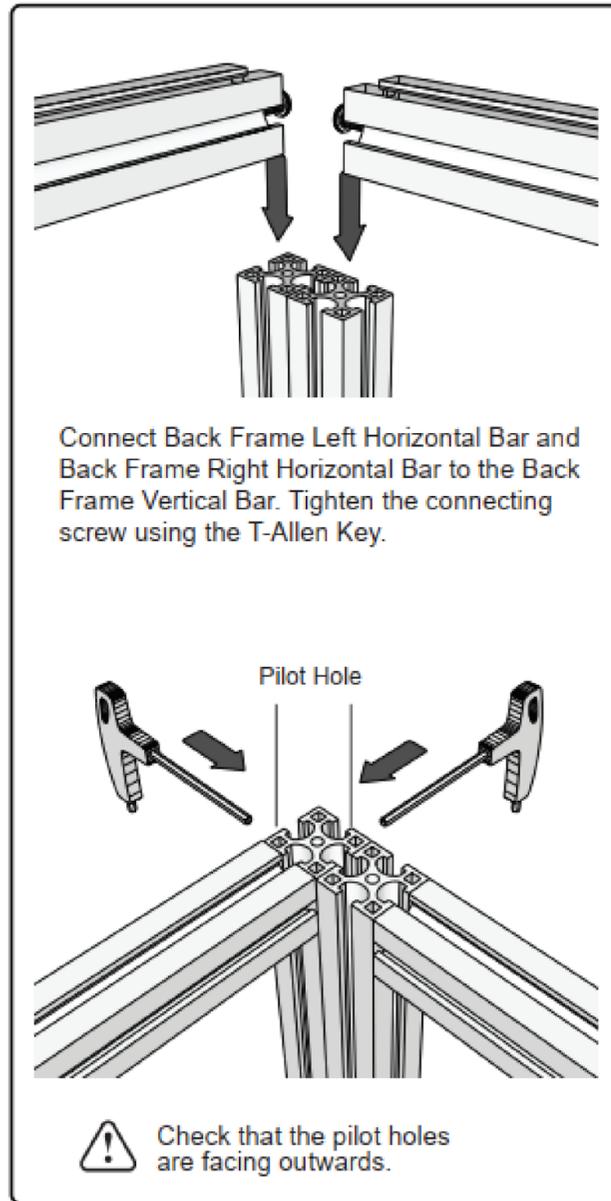

Step 2.


Slide the Back Frame Left Horizontal Bar and Back Frame Right Horizontal Bar to the Back Frame Vertical Bar.

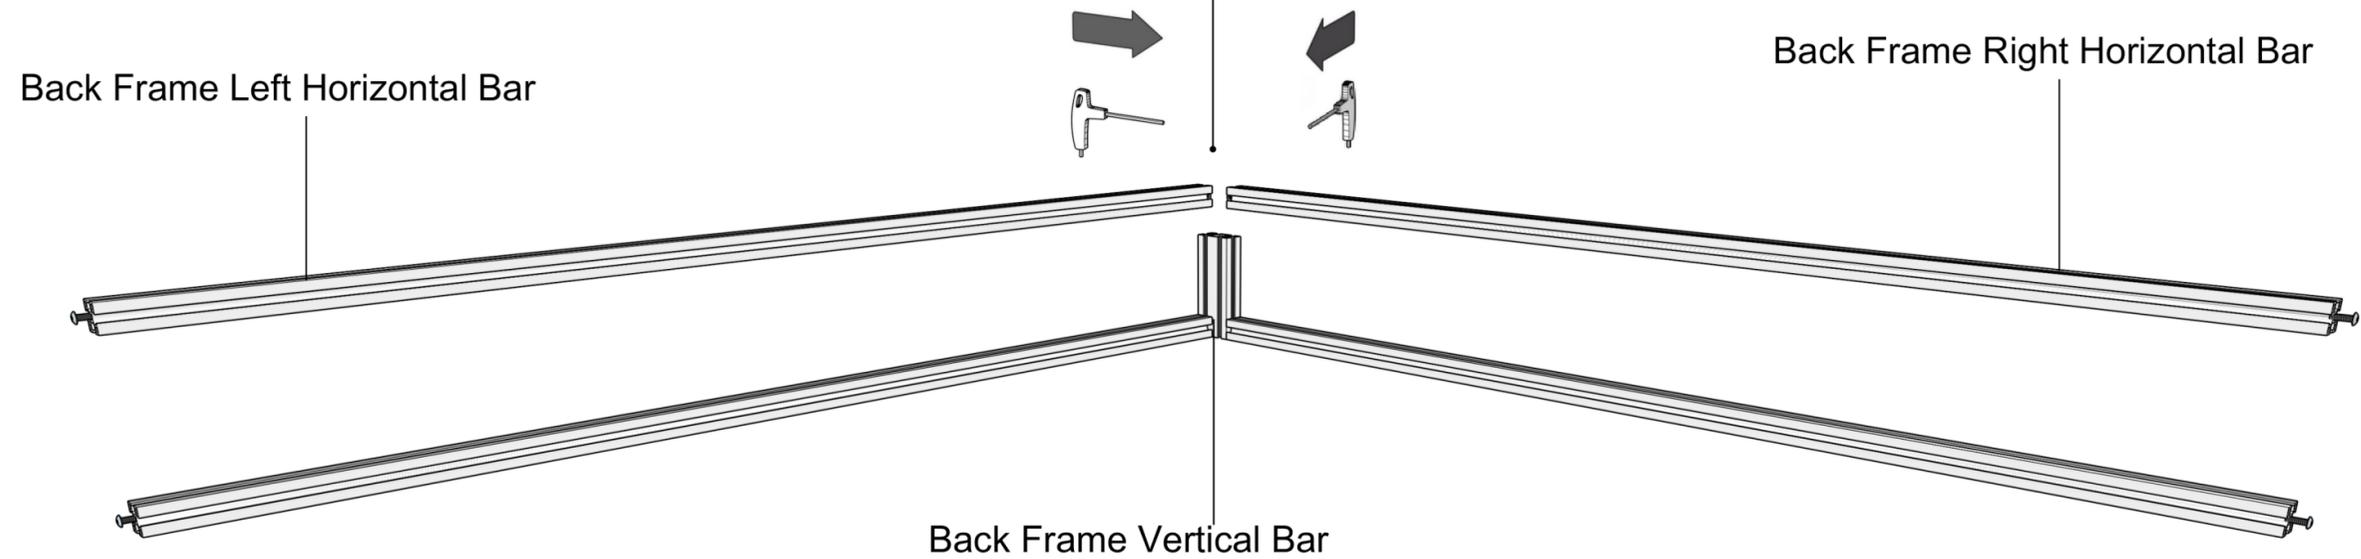

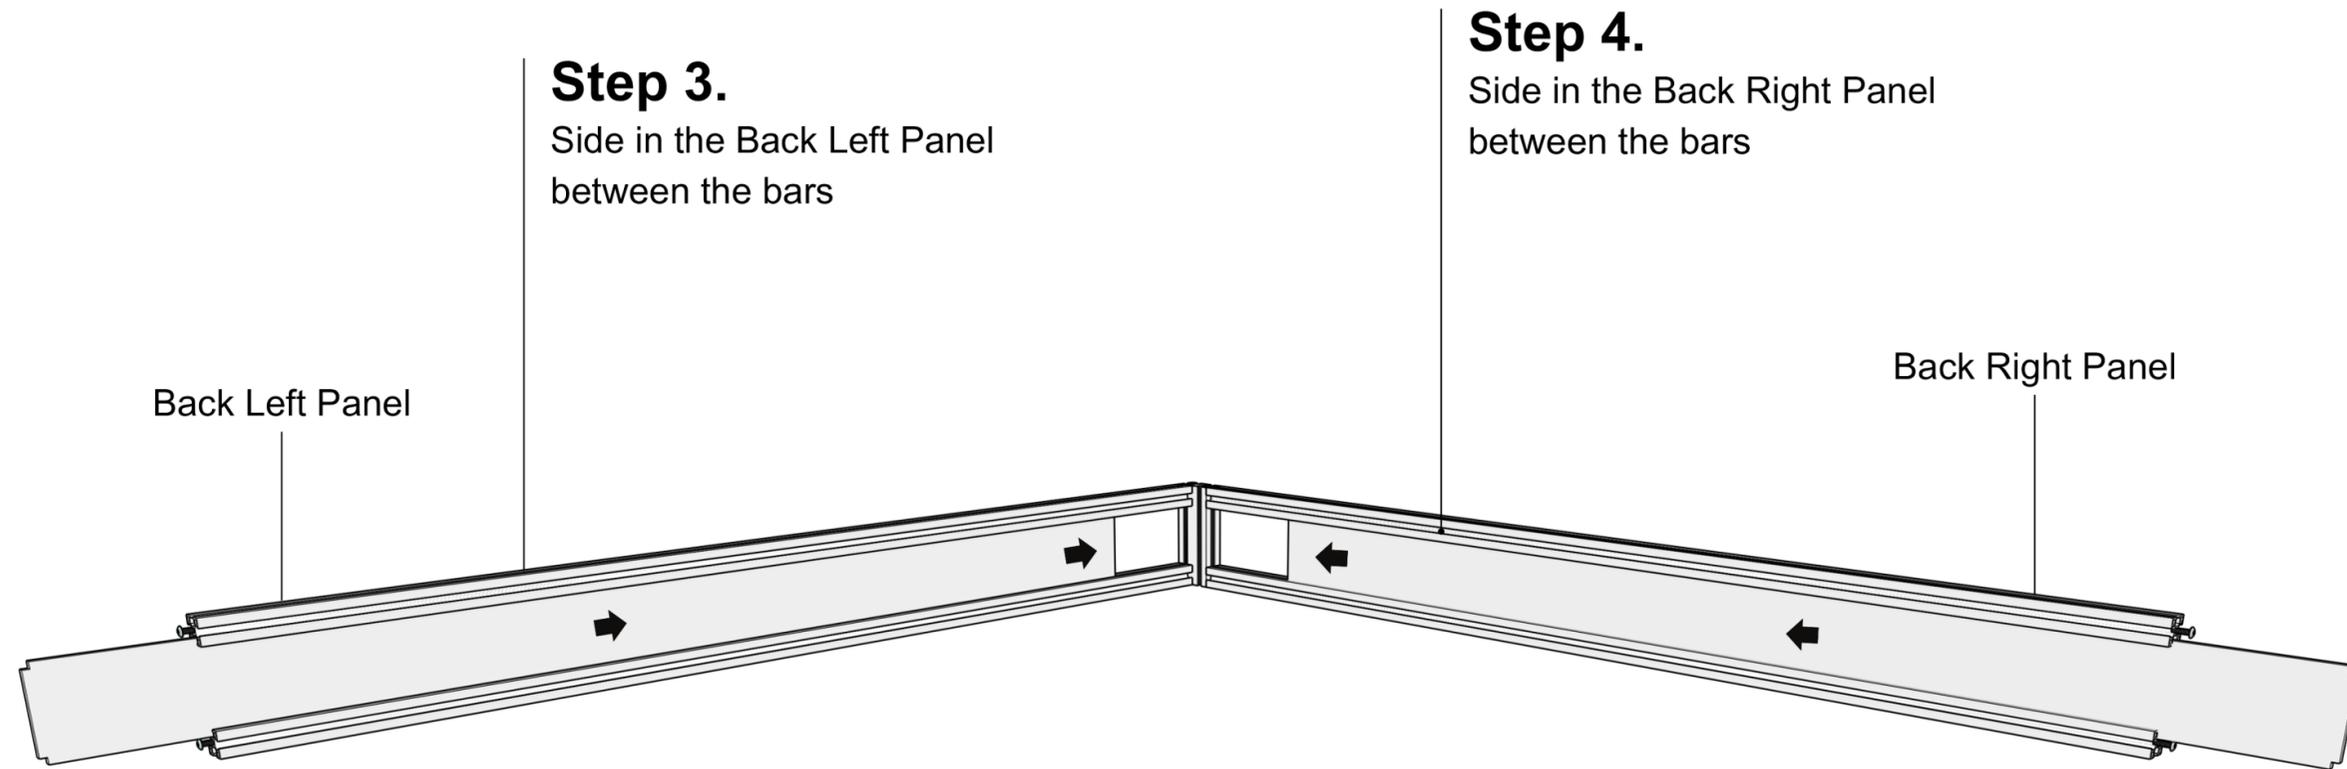

Step 5.


Slide in the Side Frame Back Vertical Bar between the bars

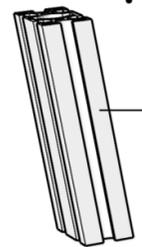


Side Frame Vertical Bar

Step 6.

Slide in the Side Frame Back Vertical Bar between the bars

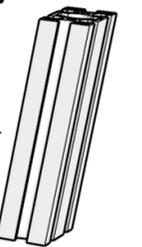


Side Frame Vertical Bar

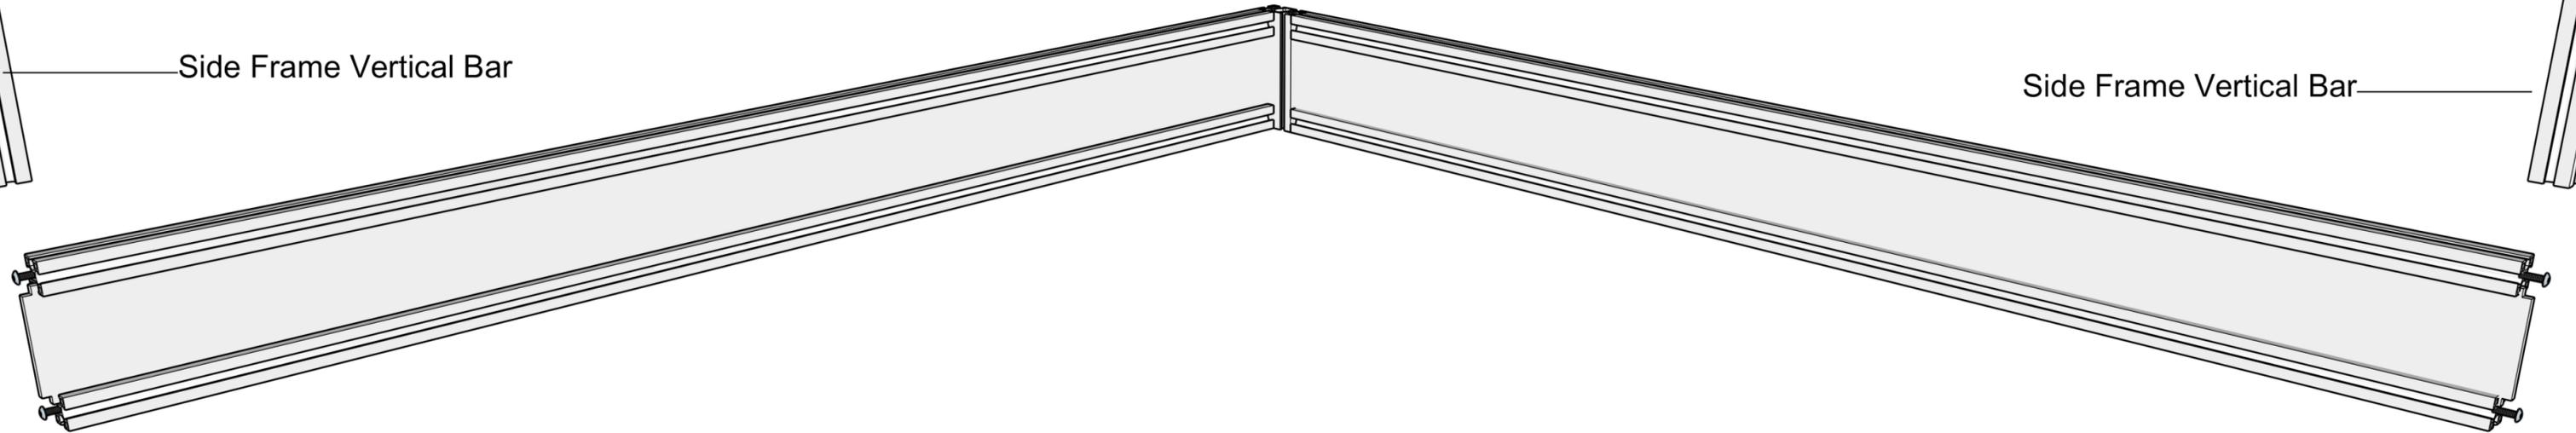


Step 7.

Side in two Side Frame
Horizontal Bars

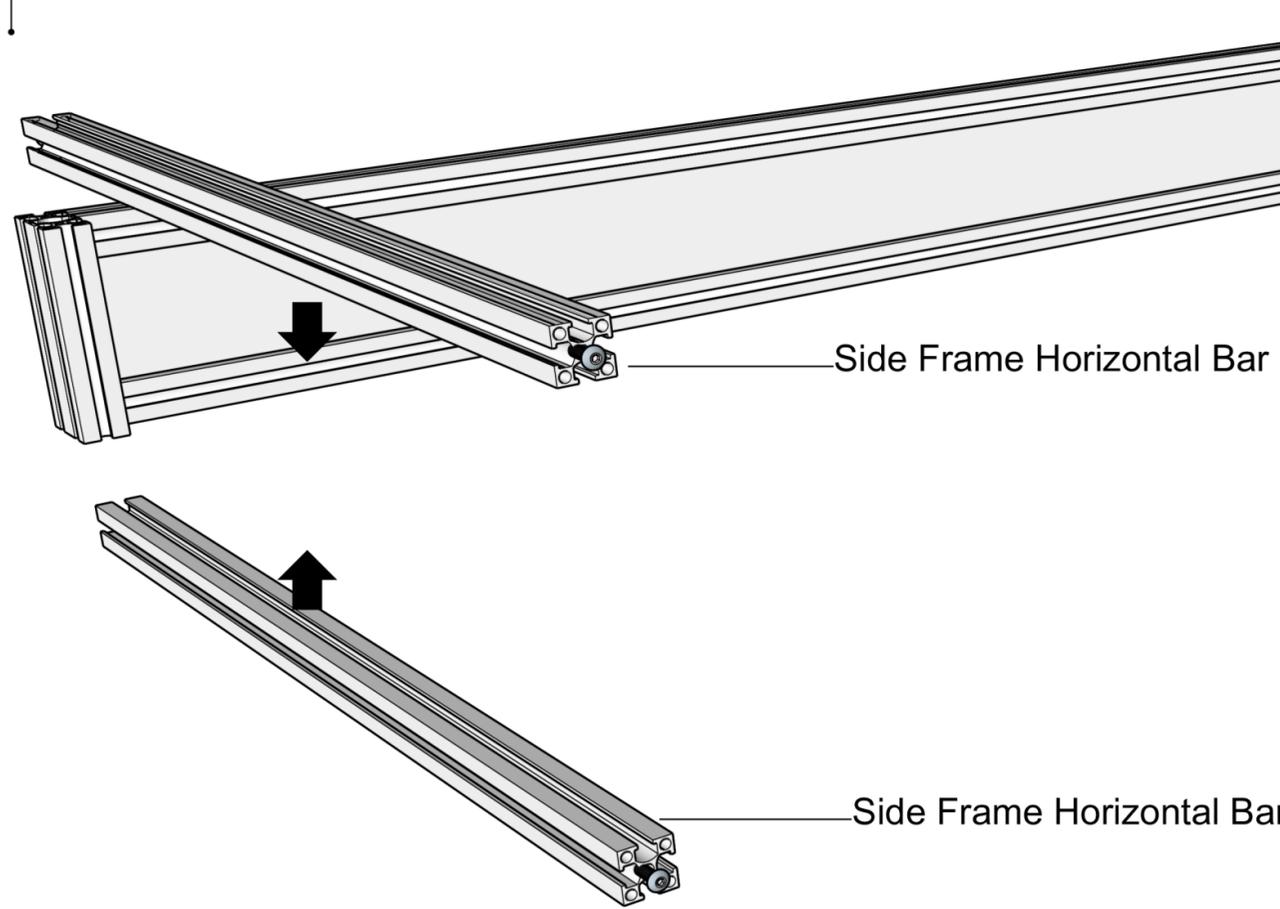


Step 8.

Side in two Side Frame
Horizontal Bars

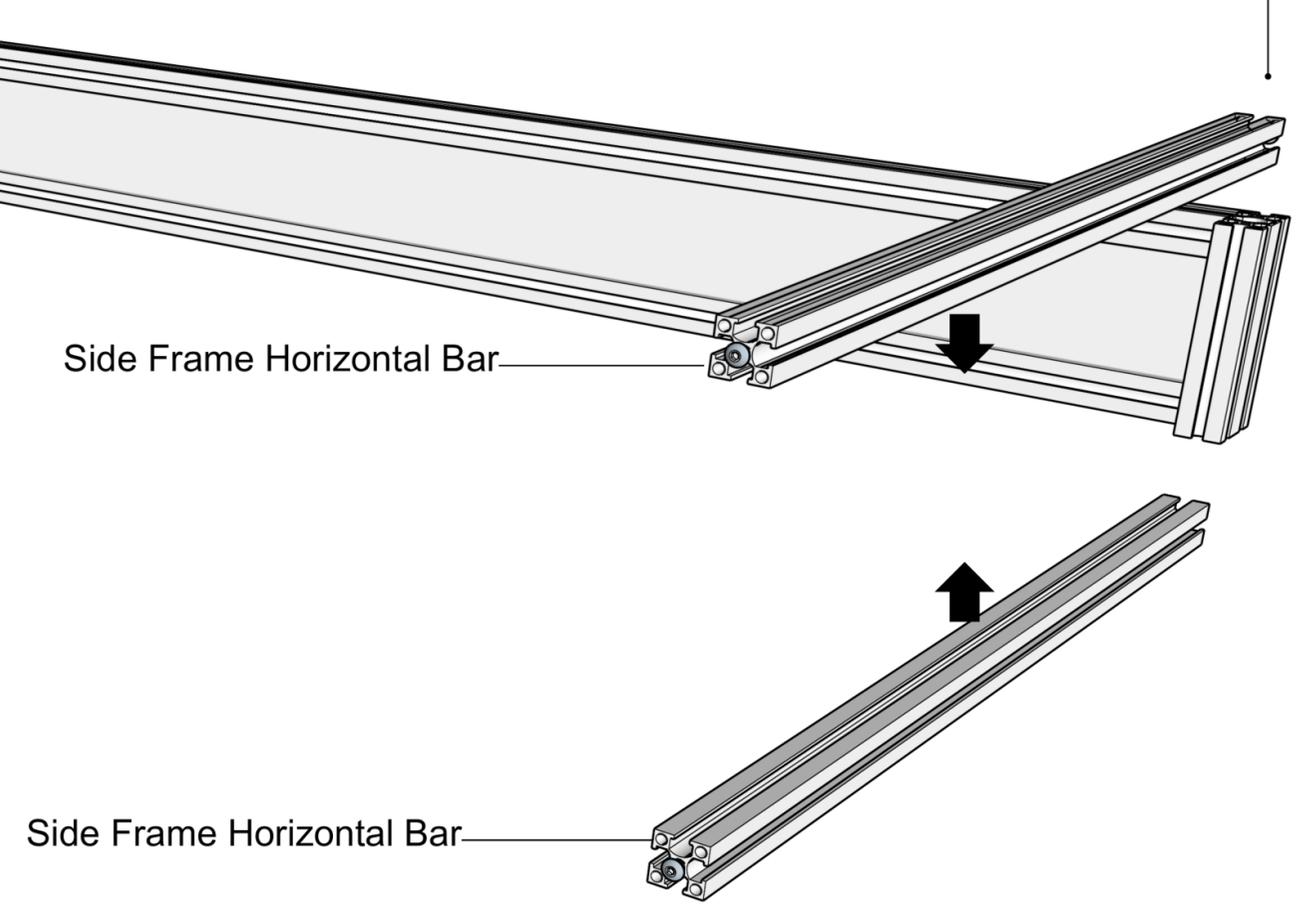


Step 9.


Side in two of the Side Panels

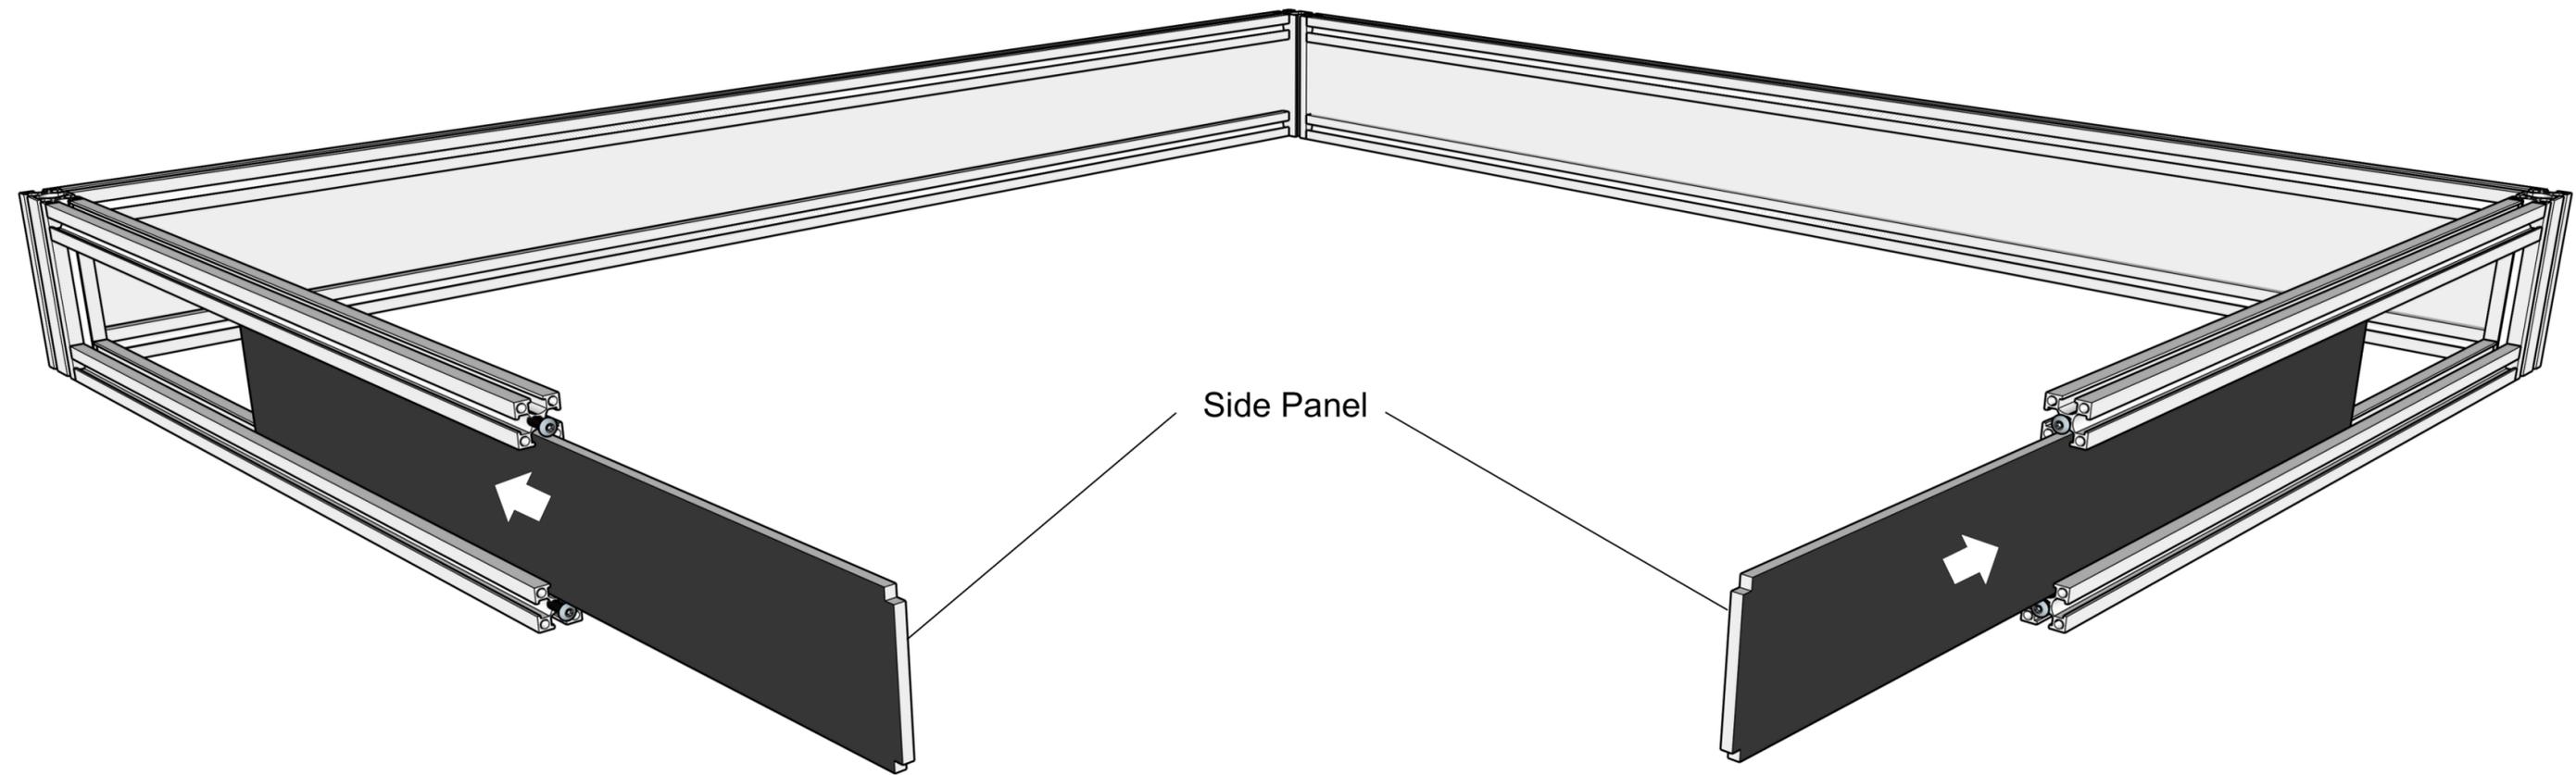

Step 10.

Slide in the Side Frame Front
Vertical Bar

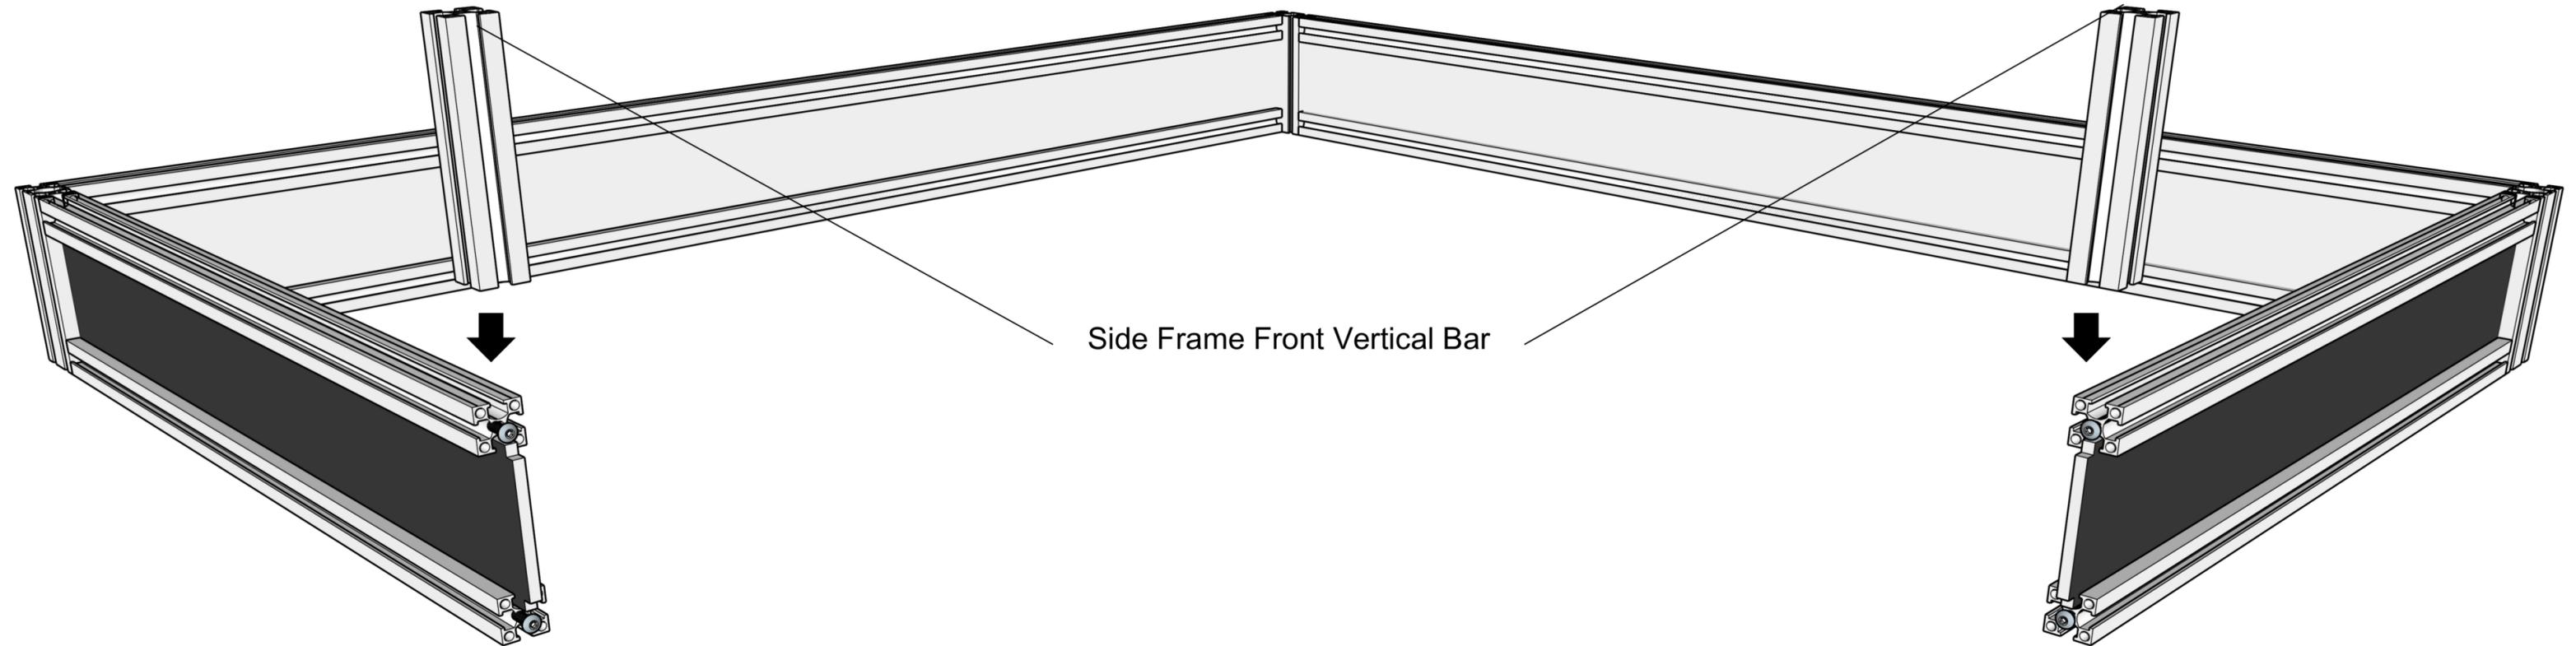

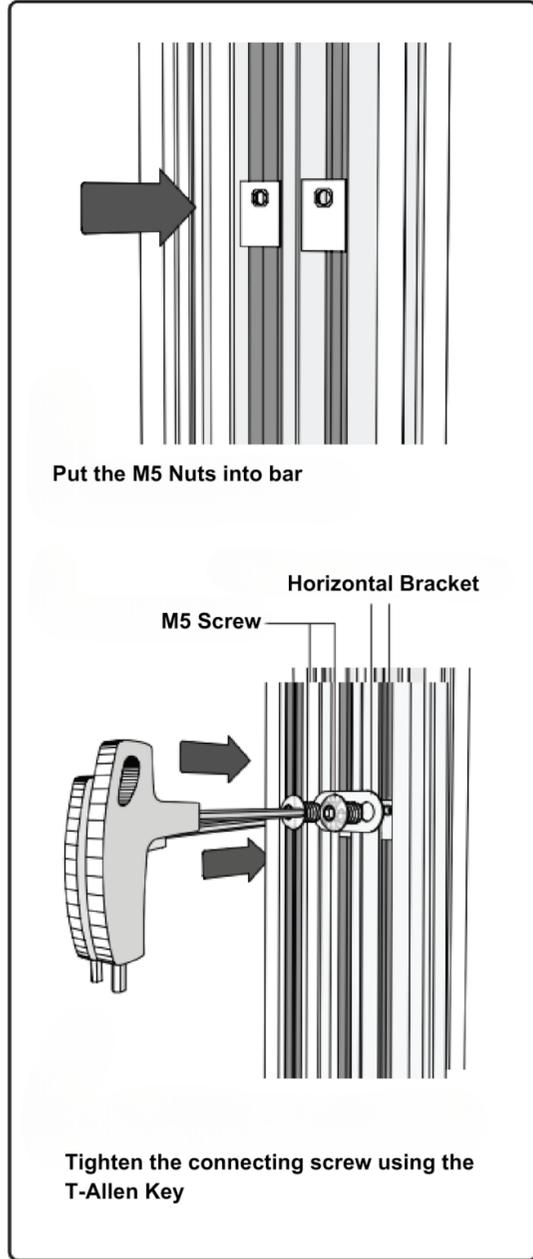

Step 11.

Front frame assembly inner connect.

