





Bespoke Showcase Engineers


**MONO Display
Assembly**

Version 1.0

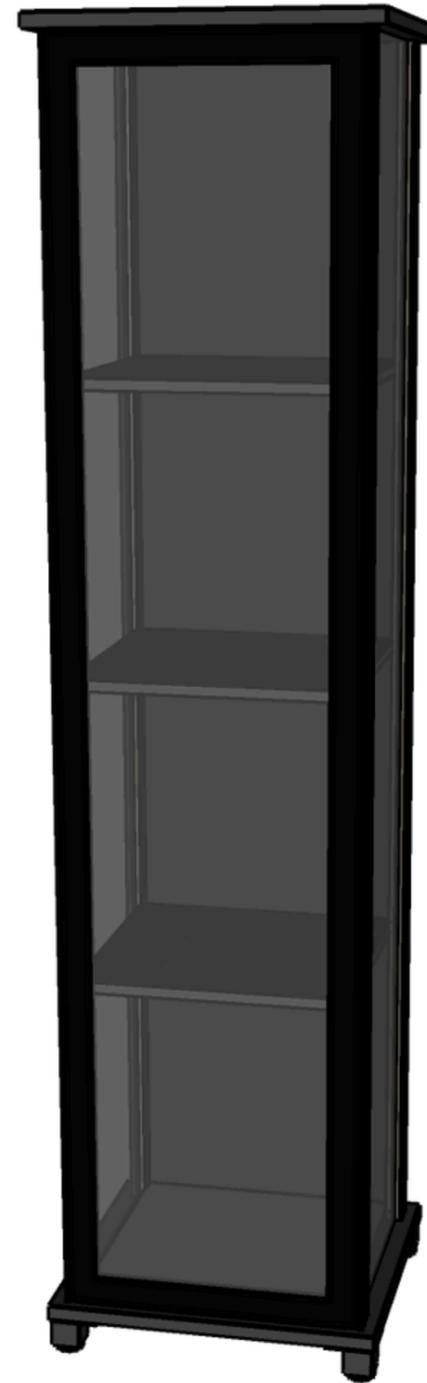


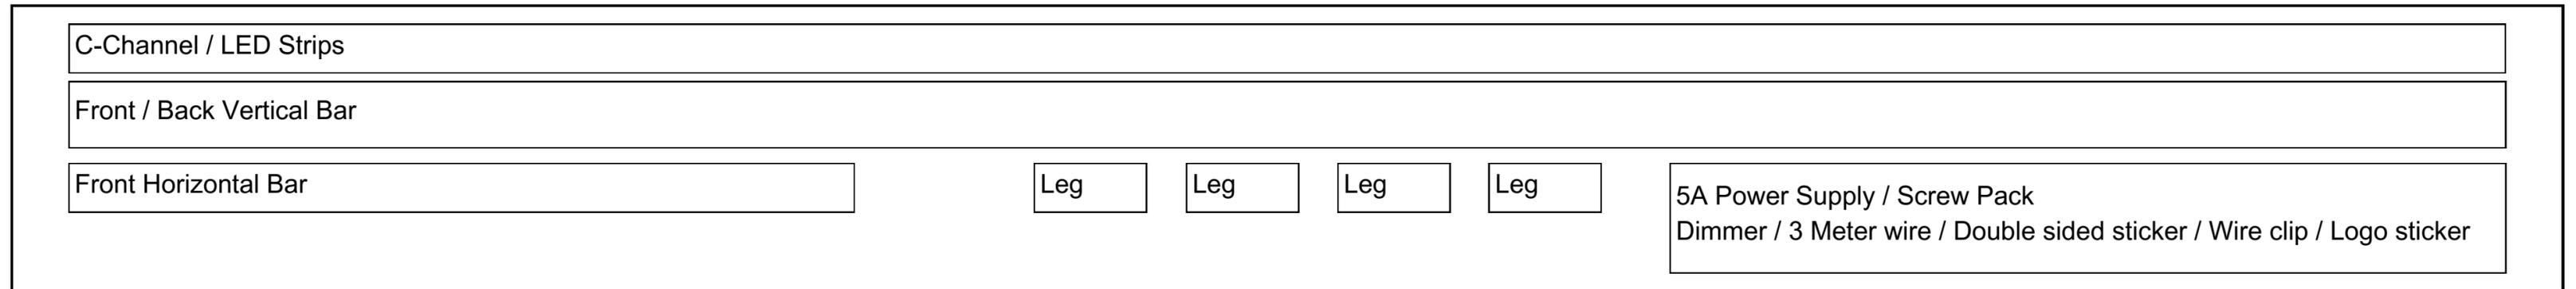


Front
Vertical Bar x 2

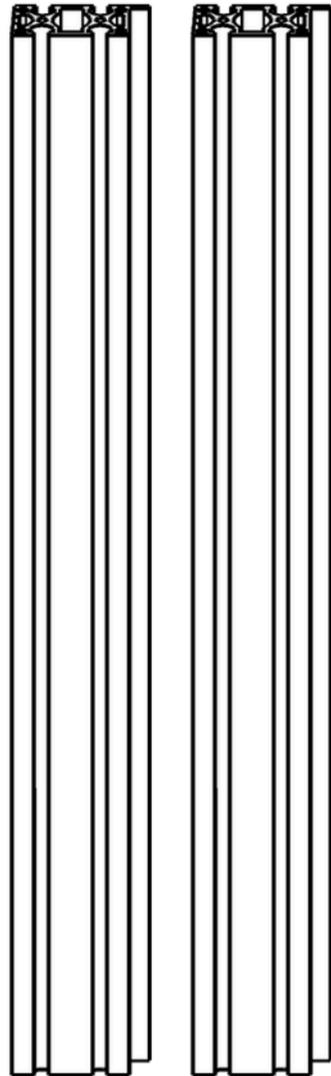

Back
Vertical Bar x 2

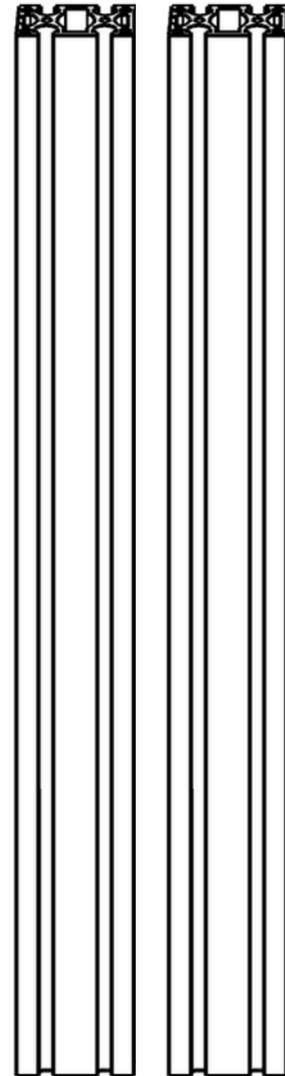

Front Horizontal
Bar x 2

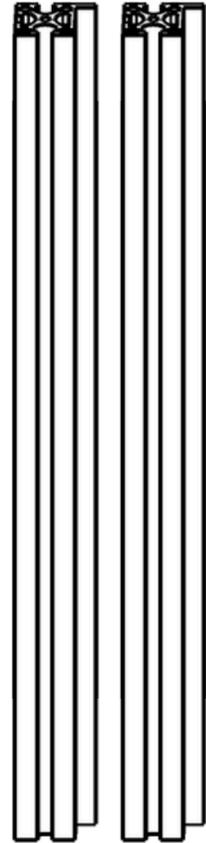


Vertical C-
Channel x 4



Conduit x 1




Adjustable Legs x 4

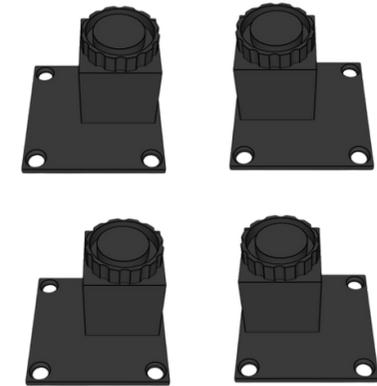




Front Panel
Safety Screw x 1

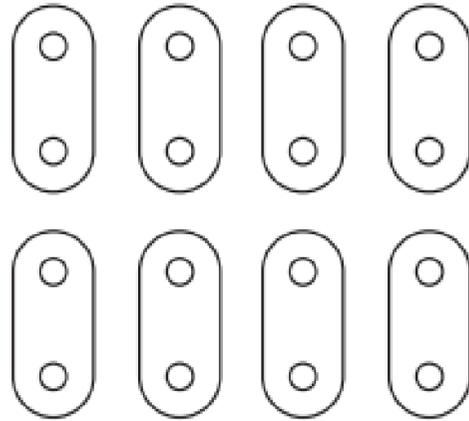


Oval Brackets x 8




M4 Allen Key x 1

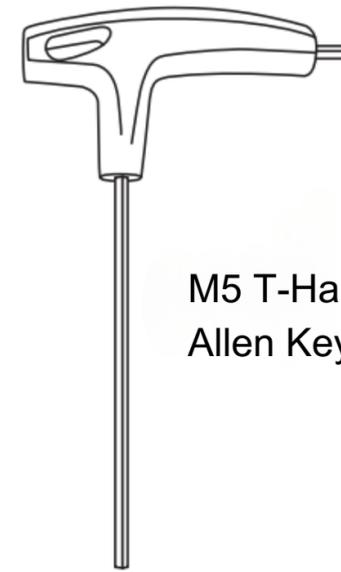

M5 T-Handle
Allen Key x 1

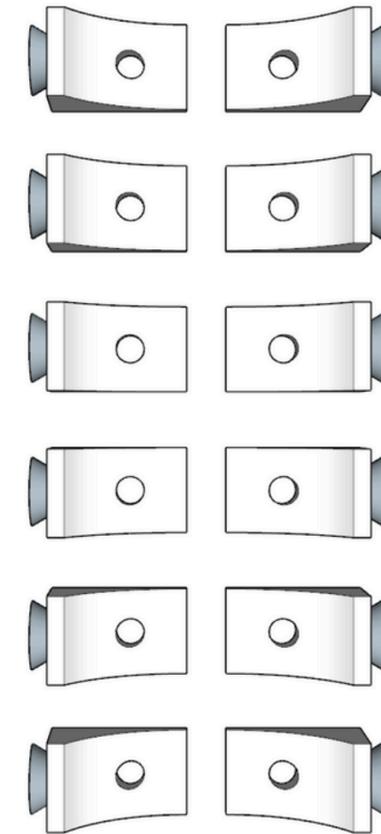

Brackets x 12

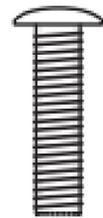

M5-Long
Screw x 20



M5 Washer
x 5



M4-Screw
x 12




M4 Nuts x 12



Wood Screw (For
Legs) x 12


Front Panel x 1

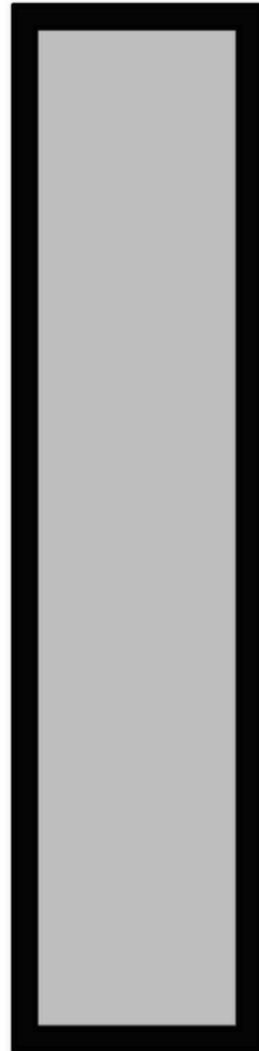


Back Panel x 1



Side Panels x 2

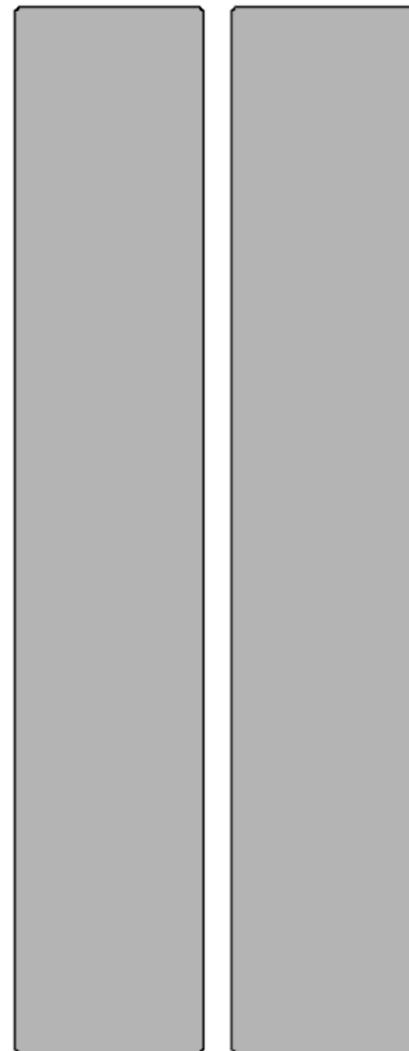

Top Panel x 1

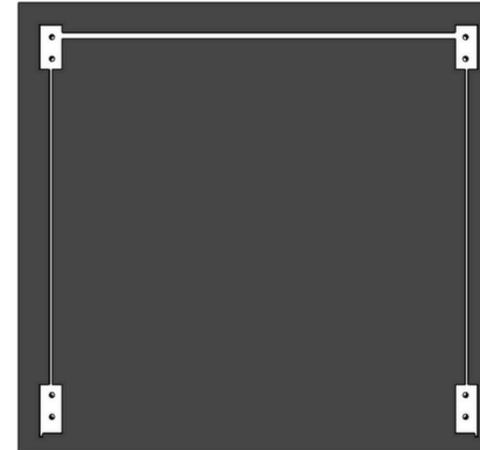


Bottom Panel x 1



Wood Shelves x 3 or Clear Plexi Glass x 3



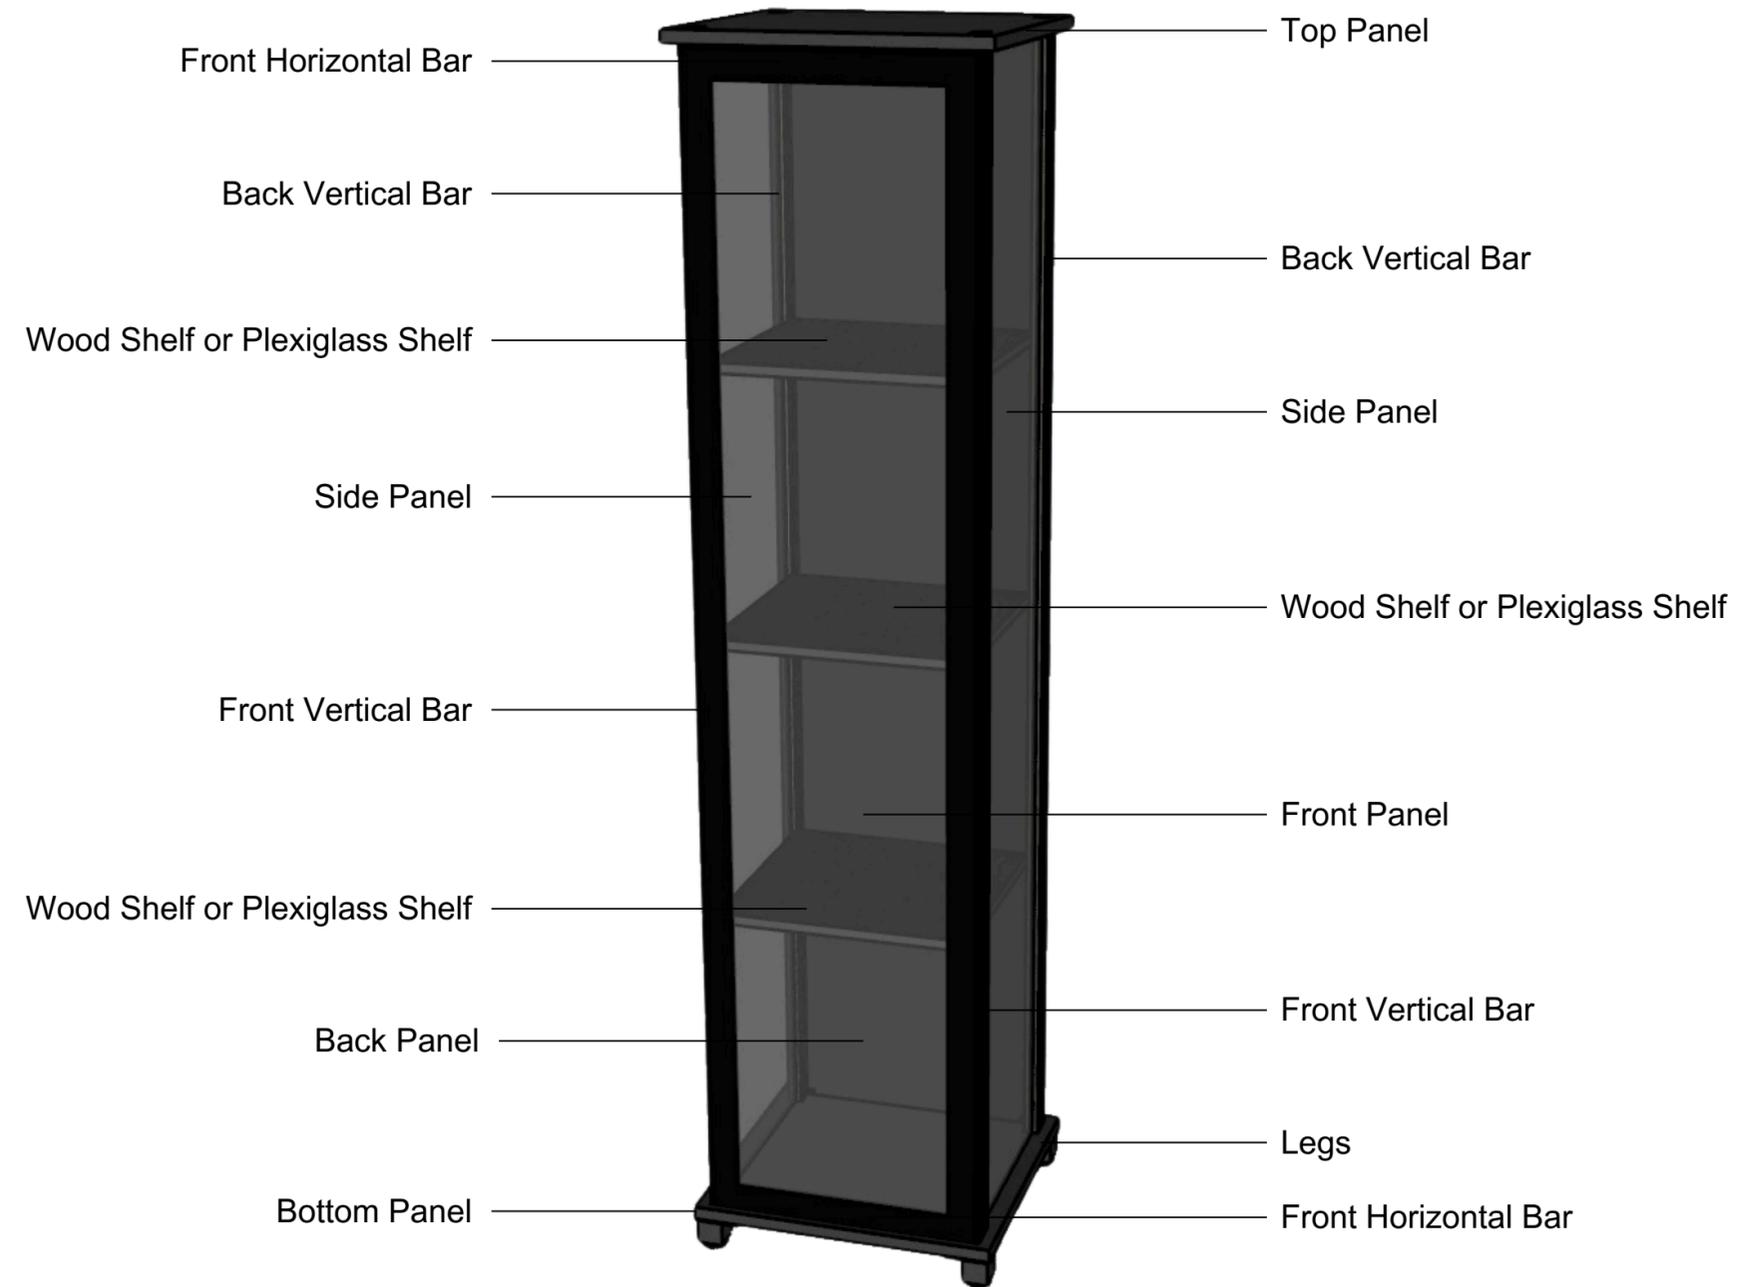


You will need

- Front Vertical Bars x 2
- Back Vertical Bars x 2
- C-channel x 4

Steps to install C-Channel

- Step 1.** Flatten one end of the C-Channel by pressing the open edges together.
- Step 2.** Push the compressed tip into the slit of the bar.
- Step 3.** Press down the rest of the C-Channel along the slit of the bar

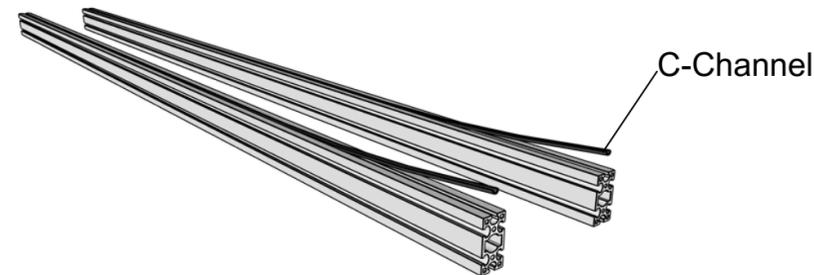

Back Vertical Bar

Position the bar on any side. Install a Vertical C-Channel into the top slit of the bar. Repeat for all bars.

Front Vertical Bar

Position the bar on any side. Install a Vertical C-Channel into the top slit of the bar. Repeat for all bars.






You will need

- M5-Long Screw x 4
- M5-Washer x 4
- Front Horizontal Bars x 2


Steps to insert M5-Long Screw


- Step 1.** Insert the M5-Long Screw fully into the M5-Washer.
- Step 2.** Position the screw with washer into the pilot hole on the left side of the bar. Turn clockwise to tighten the screw. Leave a 15mm gap between the washer and bar.
- Step 3.** Repeat steps 1-2 for the other side of the bar.
- Step 4.** Repeat steps 1-3 for
- Front Horizontal Bars x 2

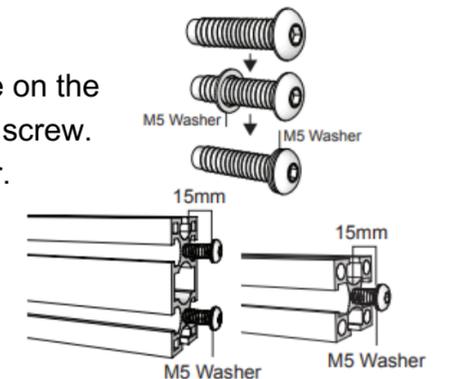

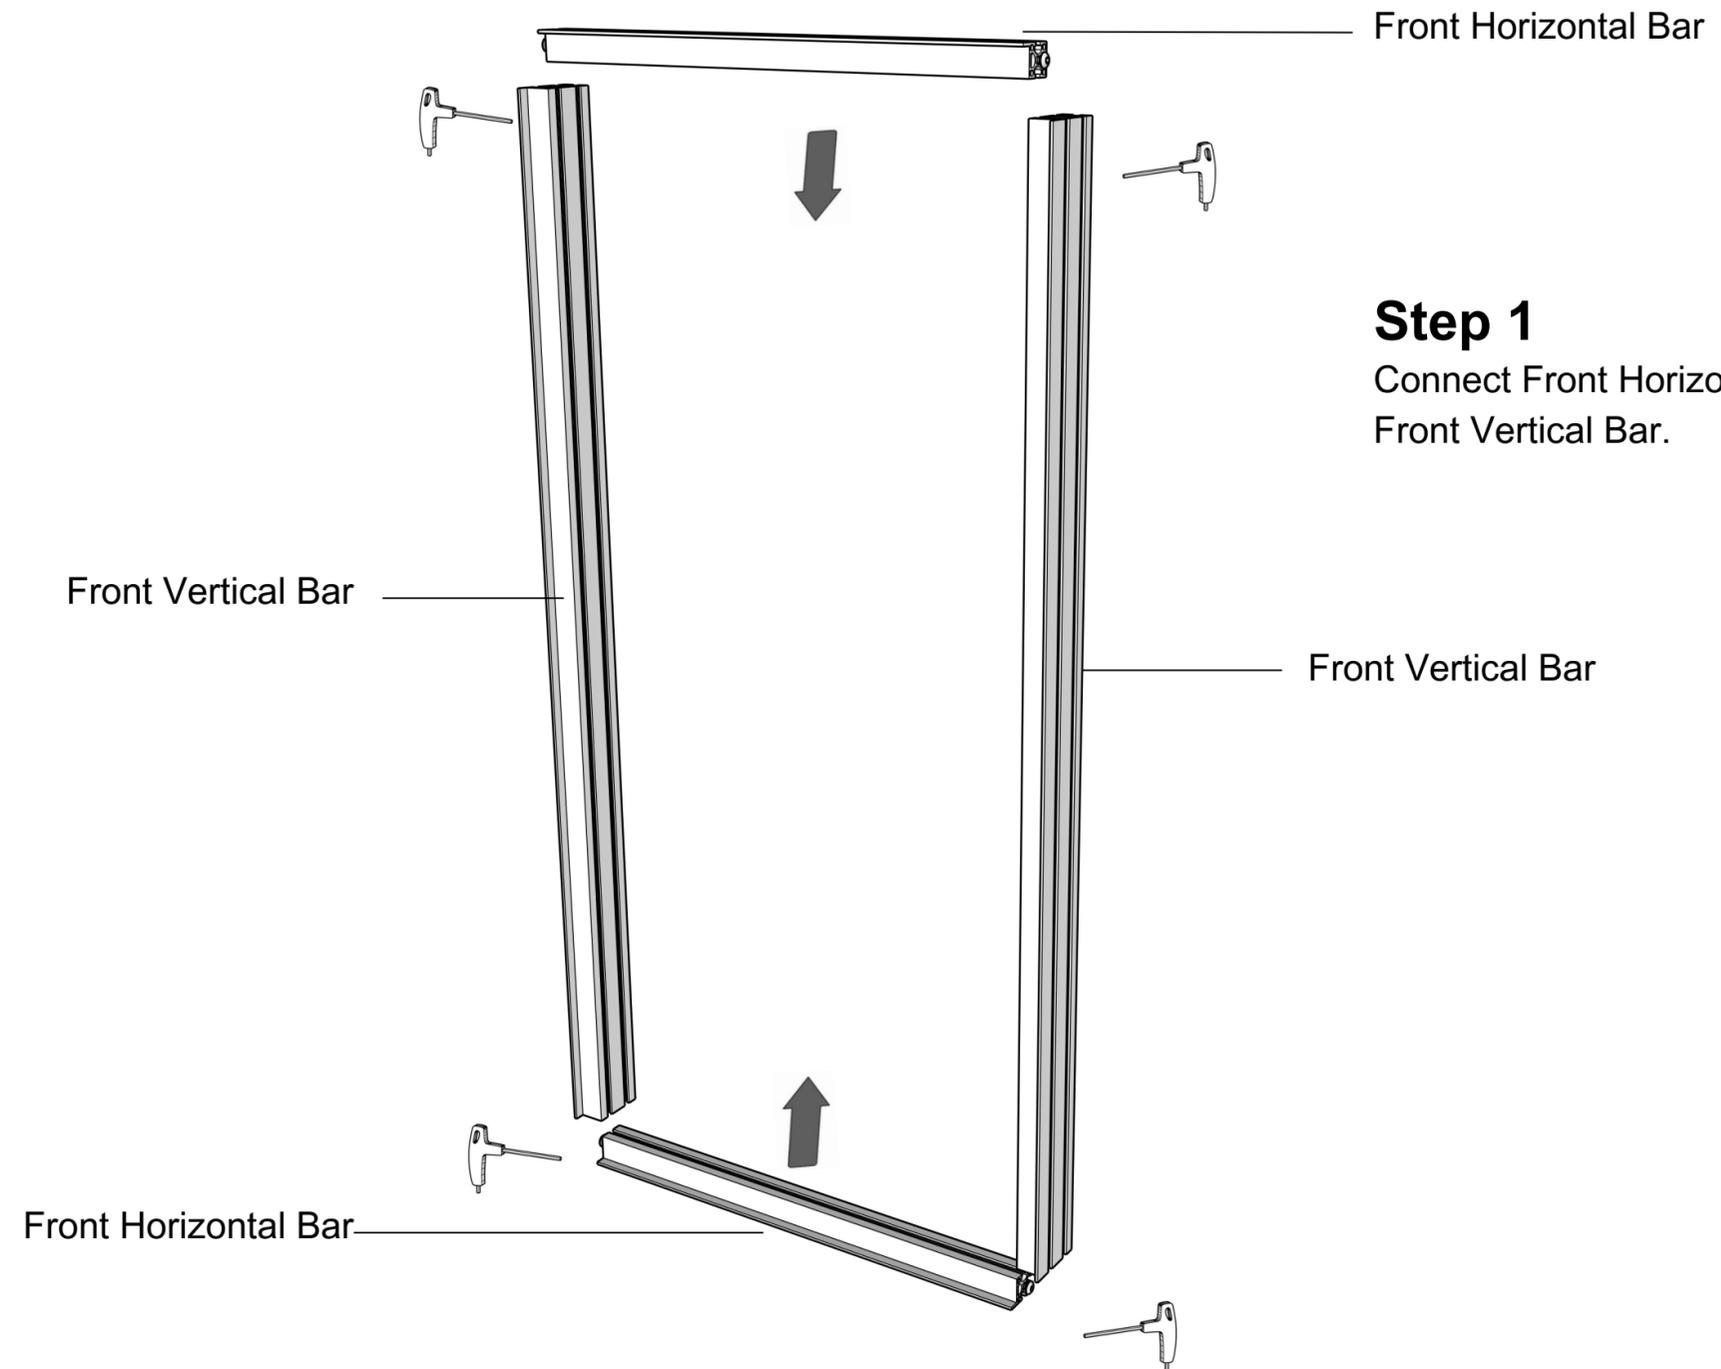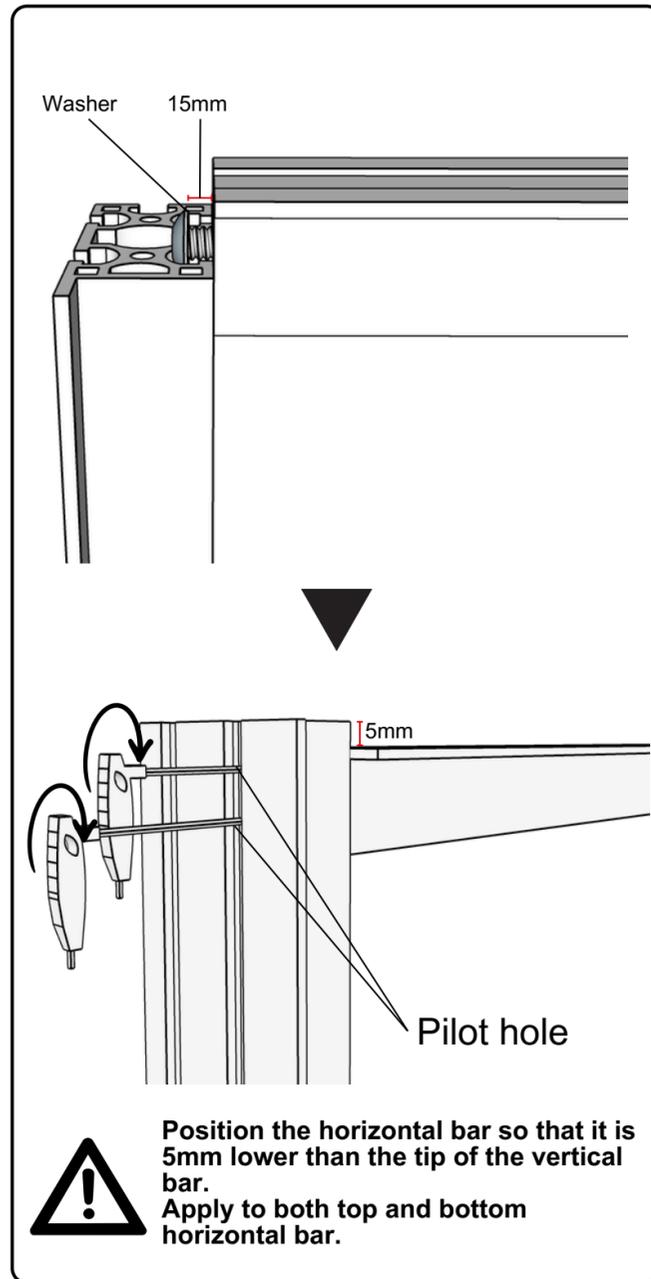


Step 1
Connect Front Horizontal Bar to Front Vertical Bar.

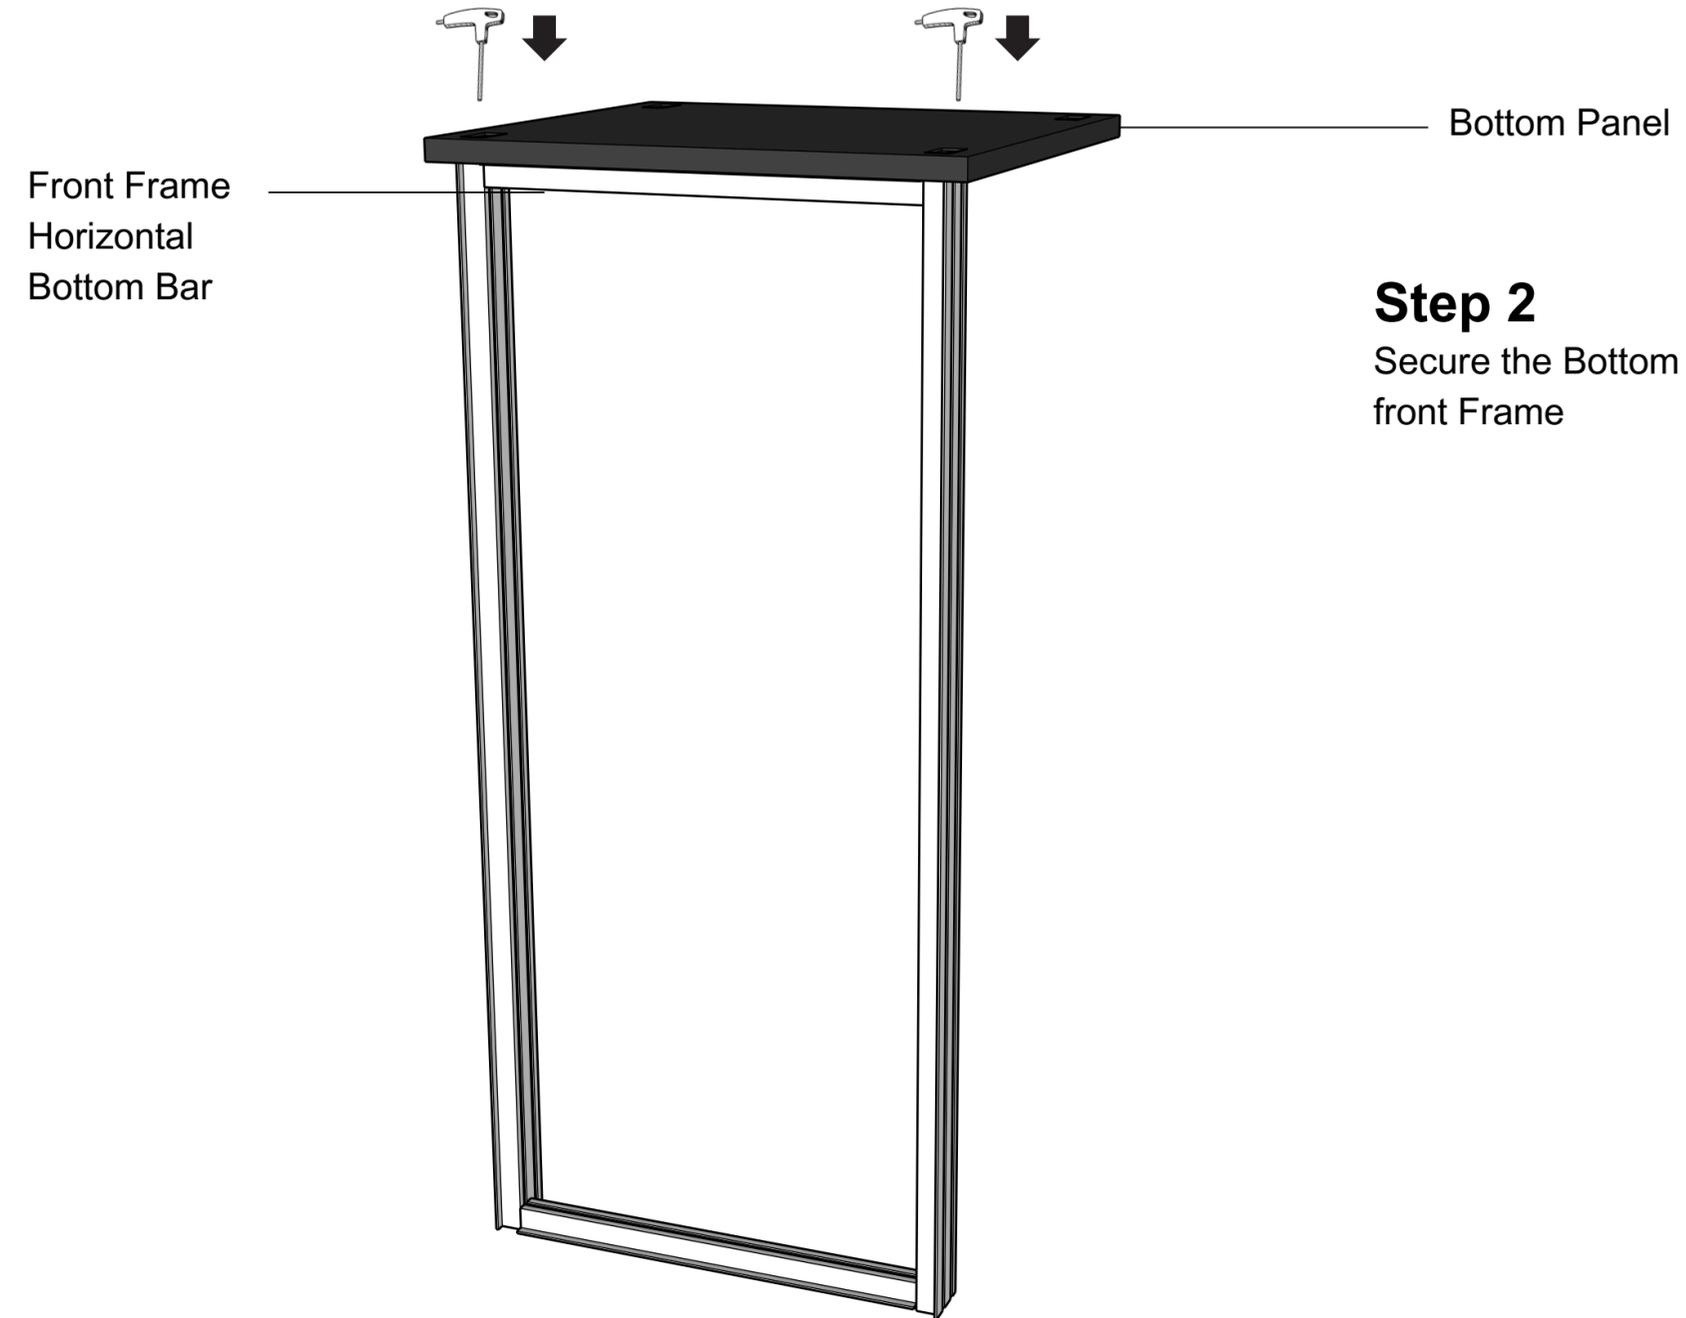

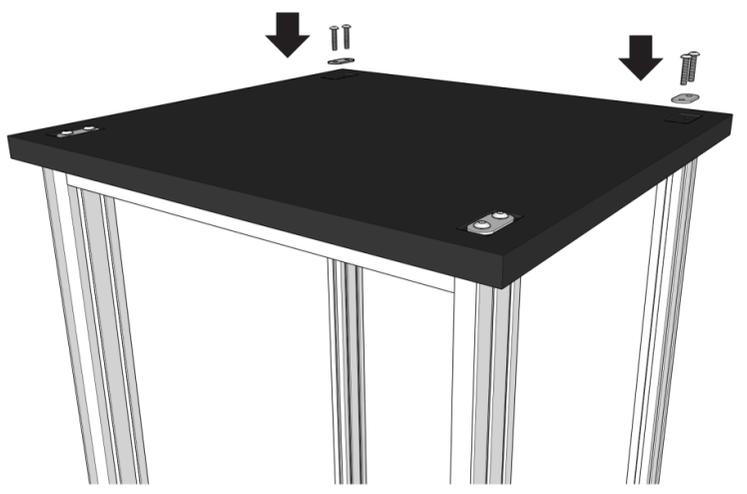

Secure the Bottom panel to the Back Vertical Bar, using Oval brackets and screw

After securing the back vertical bar, rotate 180° so that the bottom panel is seating on the floor. Caution! when rotating.


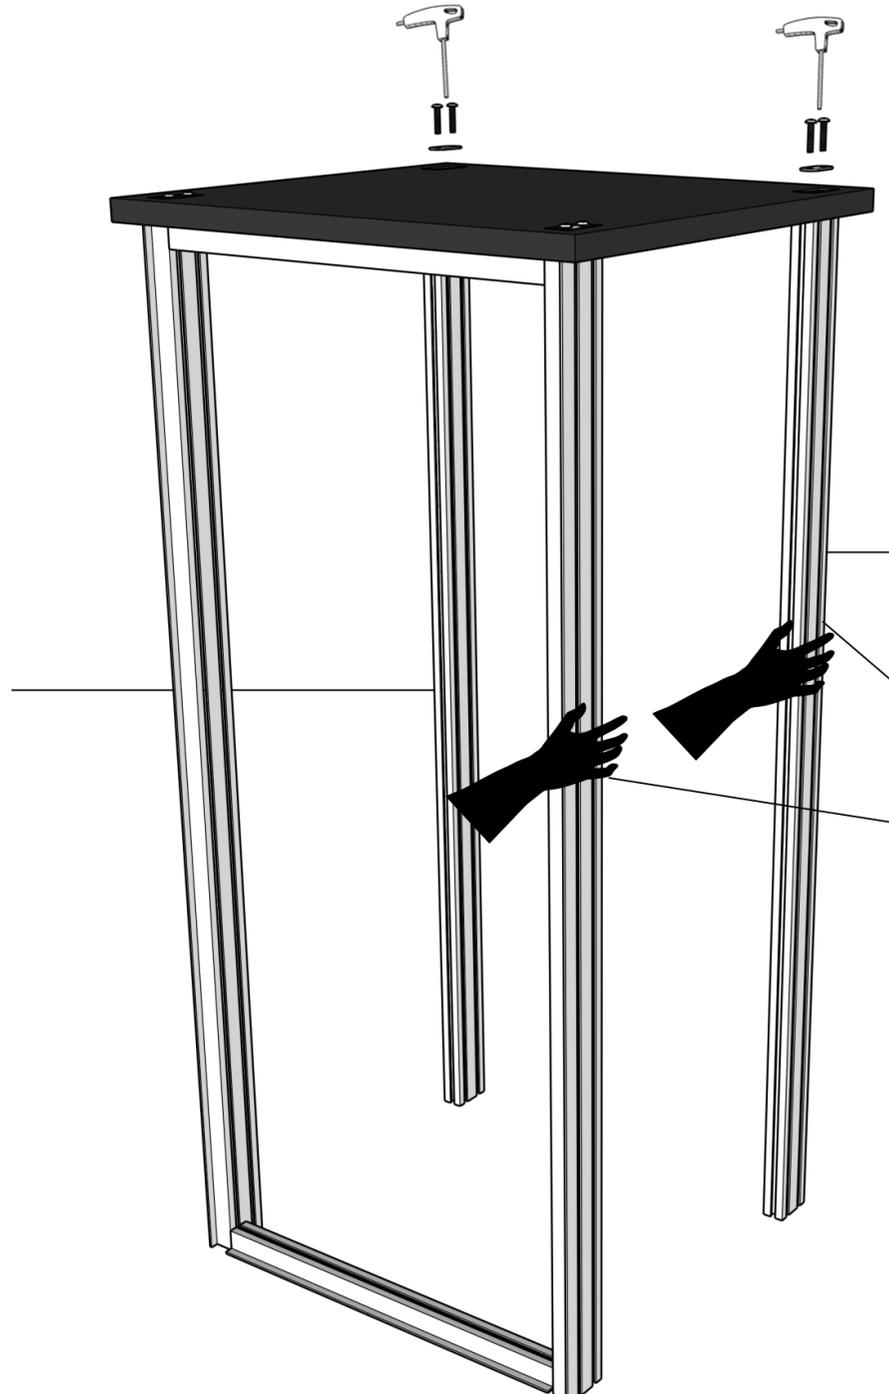



Back Vertical Bar


Back Vertical Bar

Step 3
Secure the Bottom panel

Caution! when rotating. Hand gap on this position to prevent the wood from snapping off.

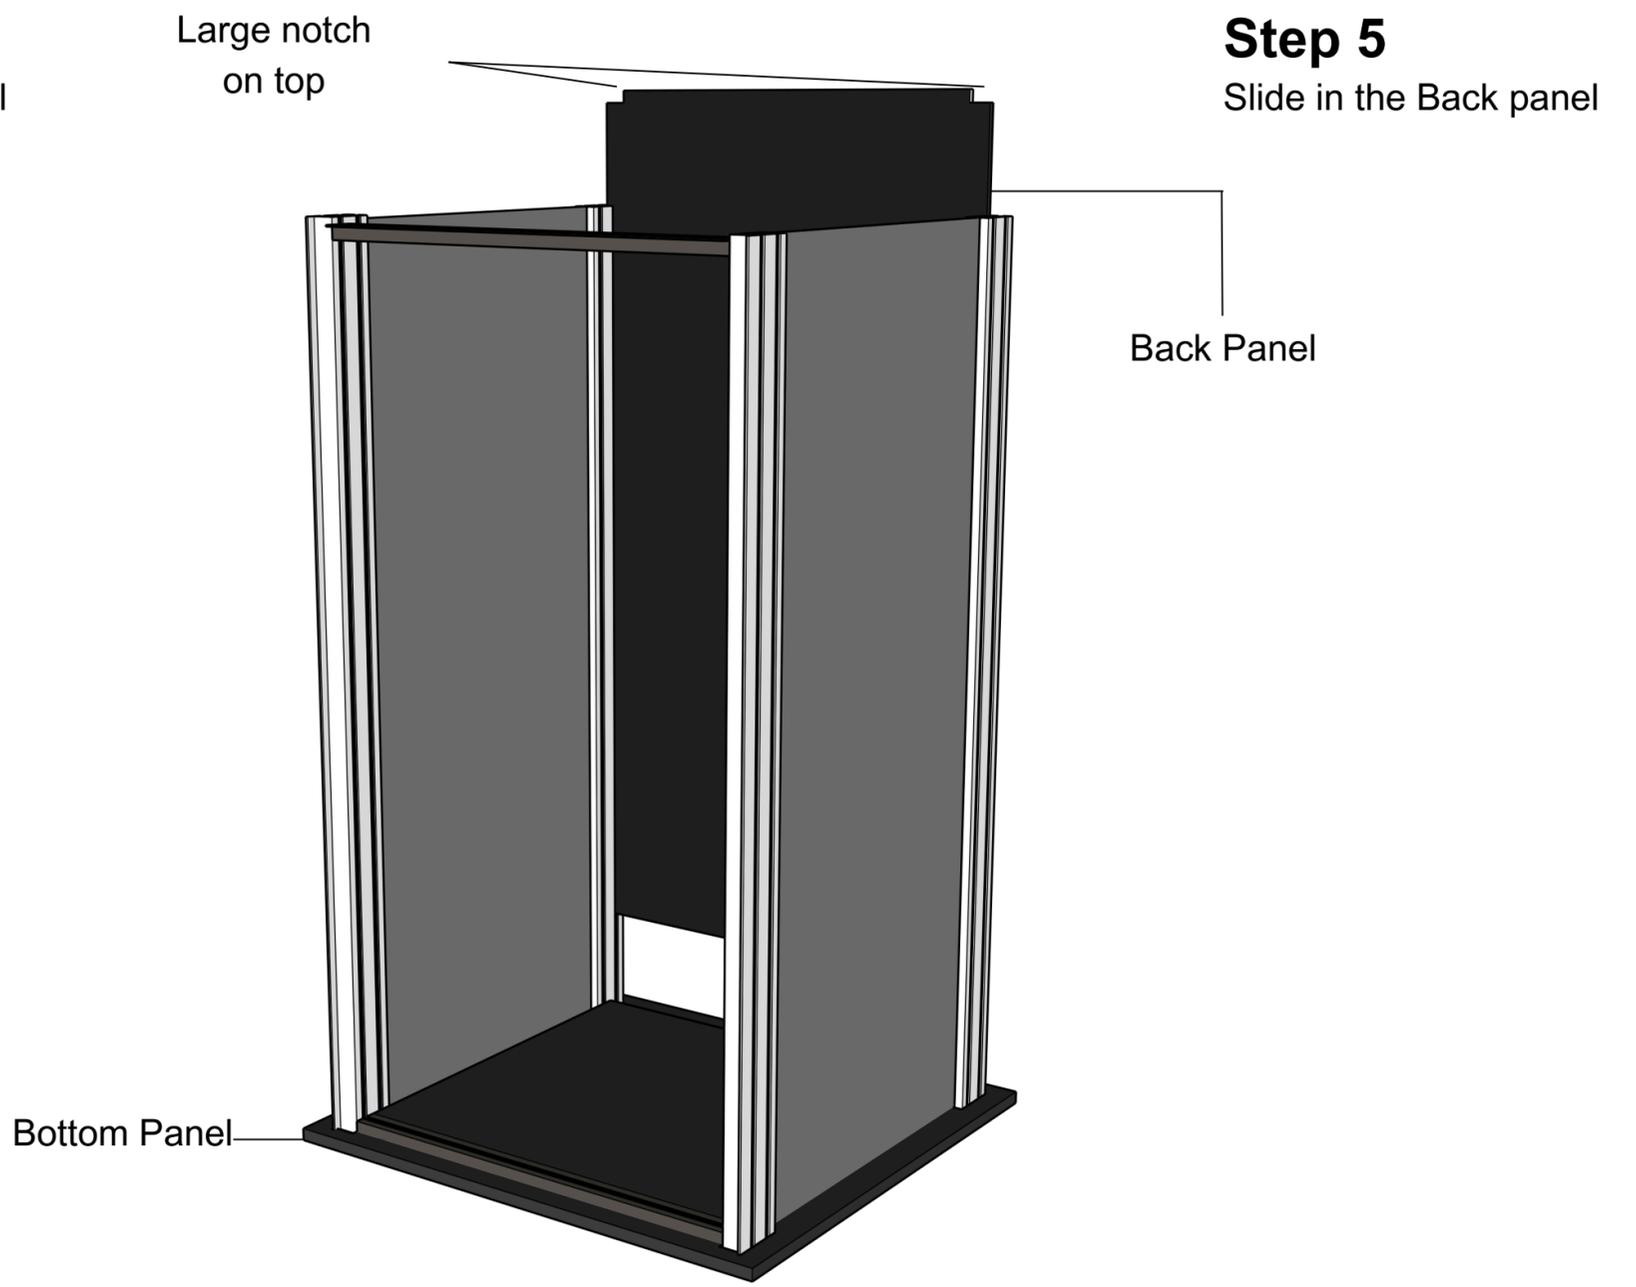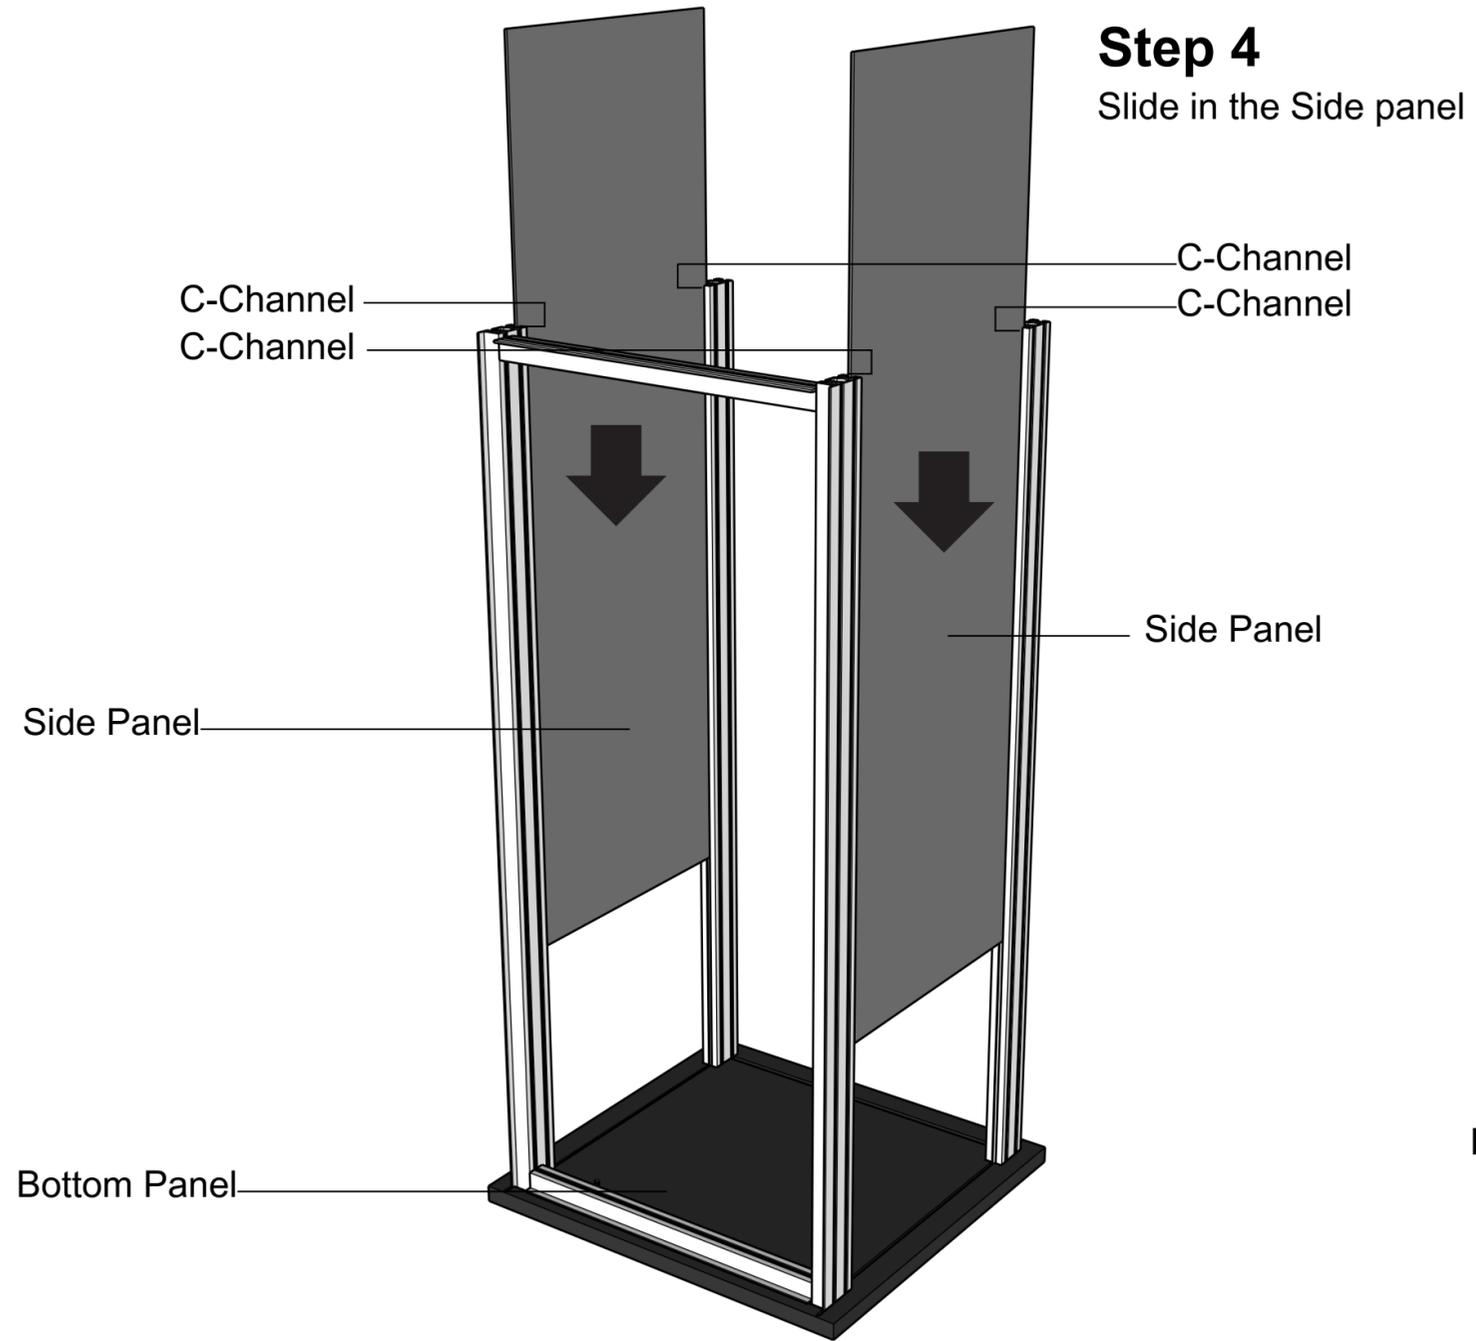

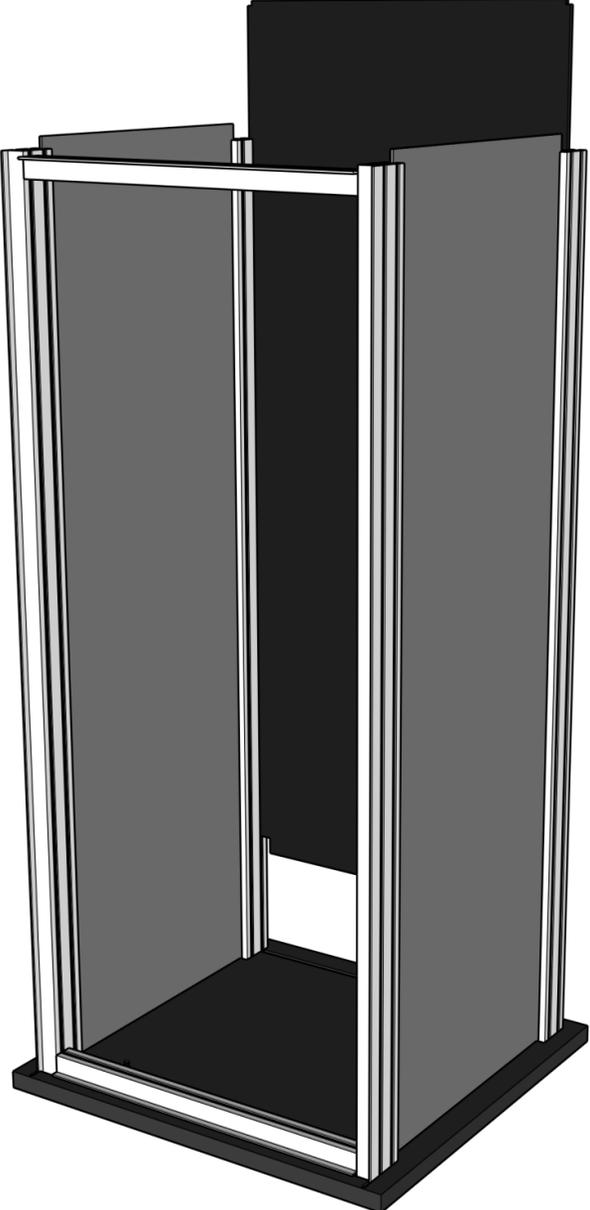


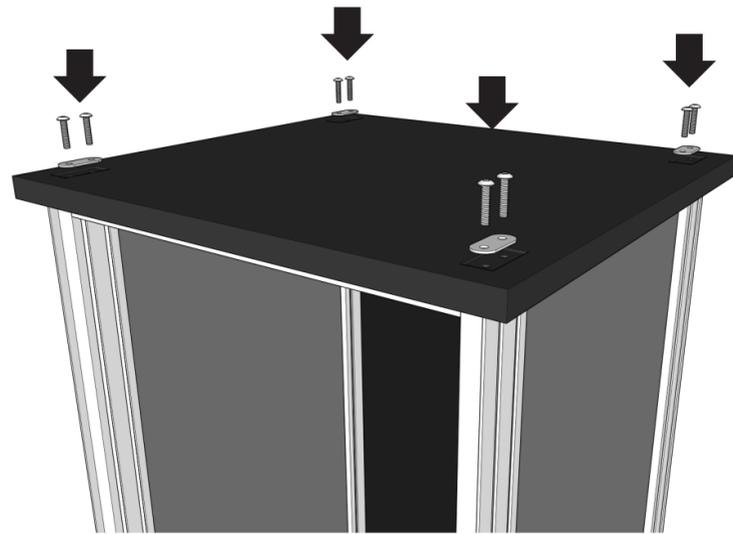

Secure the Top panel to the Back Vertical Bar and Front Vertical Bar using horizontal brackets and screw




Step 6
Secure the Top panel

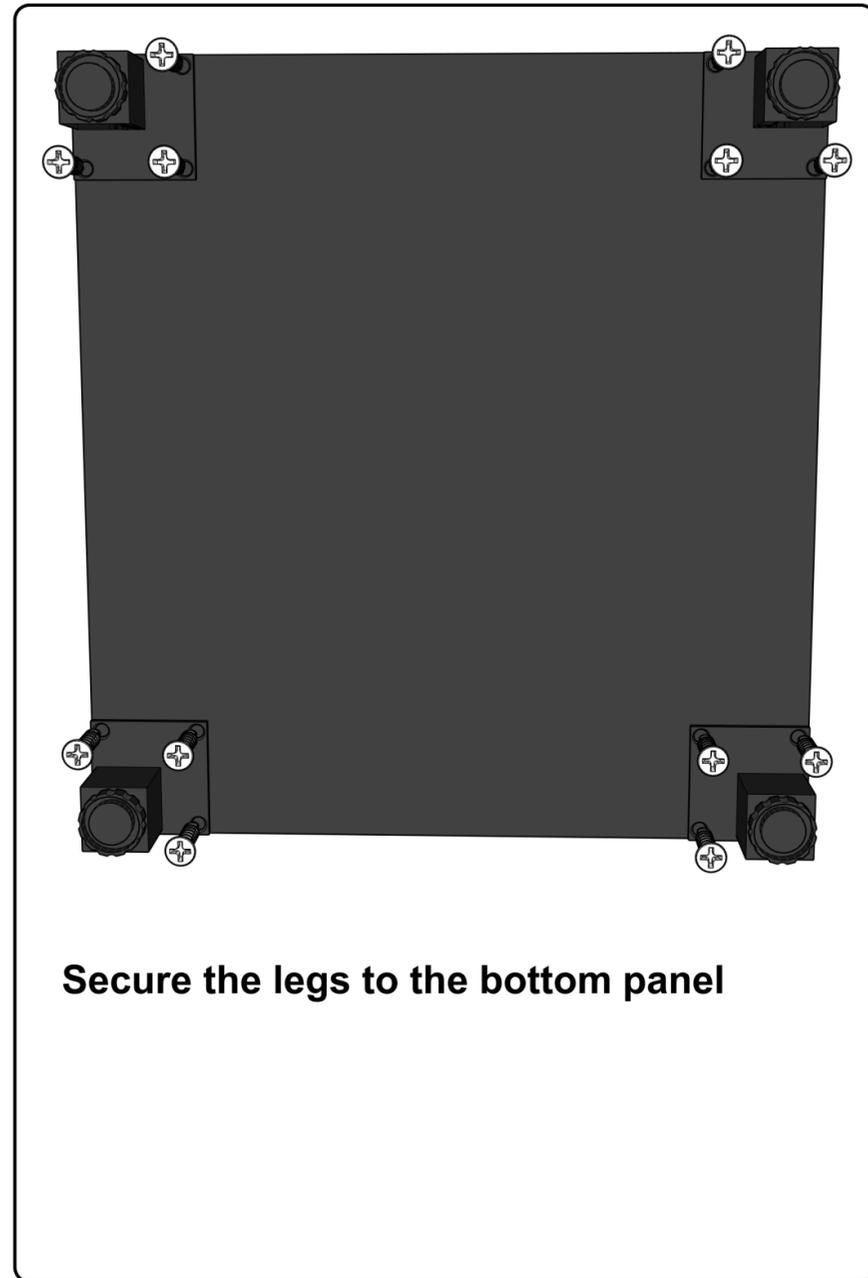


Step 7
Secure the Legs to the
bottom panel




Rotate 90° to install the Legs

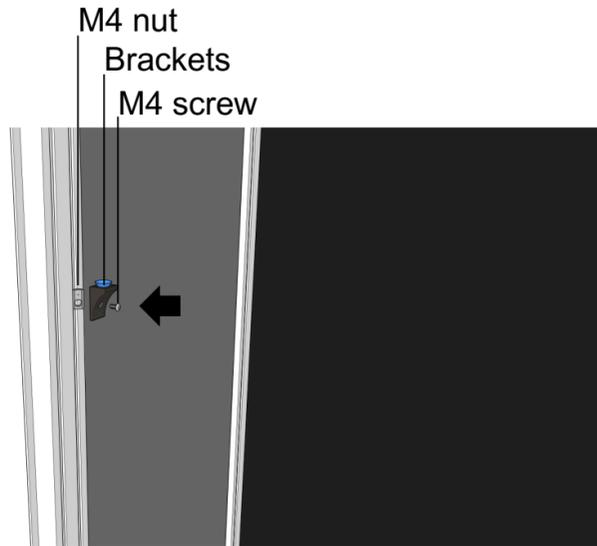

Insert the M4 nuts into the profile, secure the brackets to the vertical bars

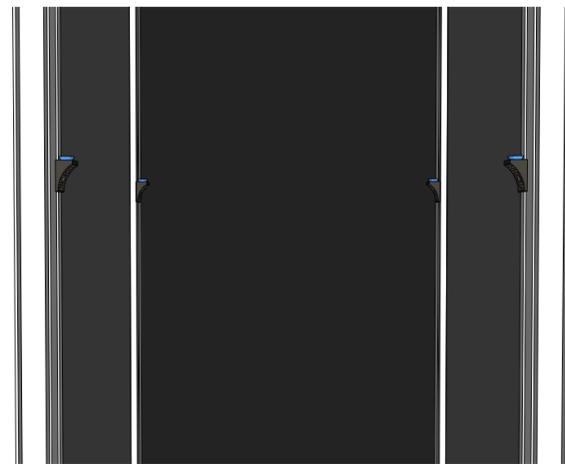


Secure the brackets the vertical bars

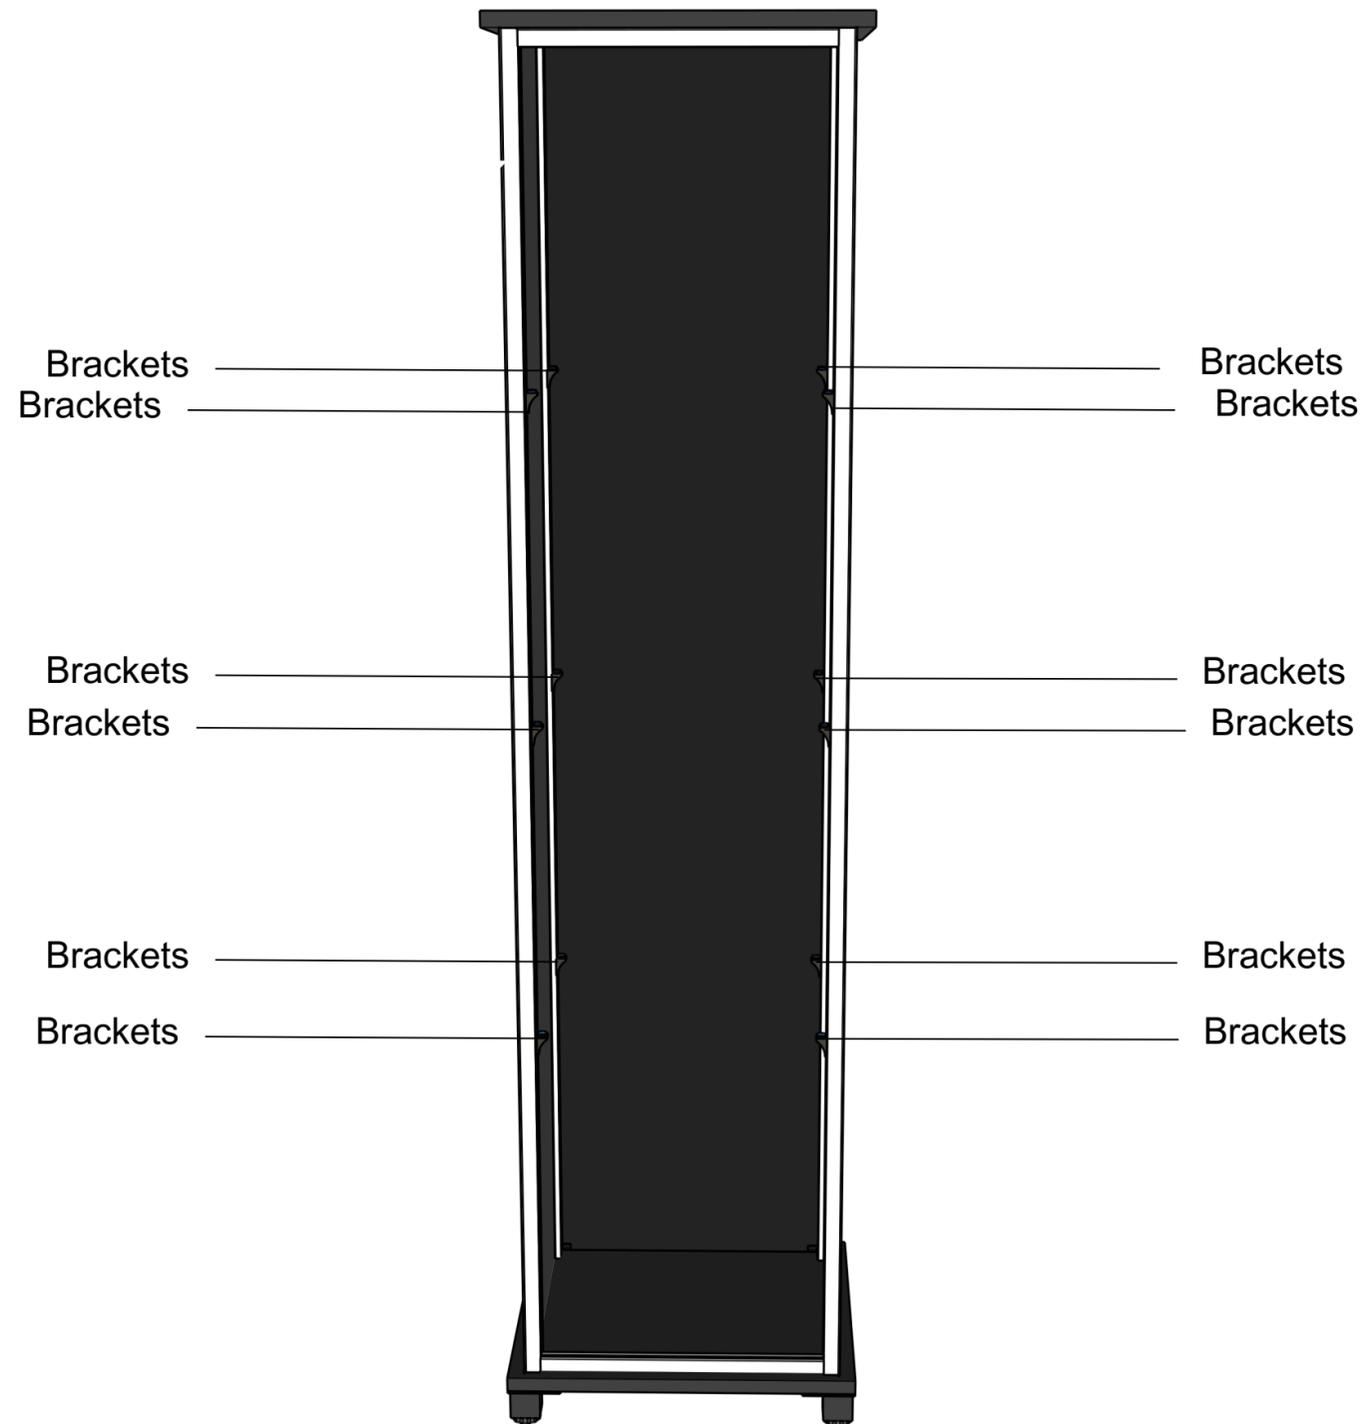


Step 8
Secure the shelf brackets

Wood Version

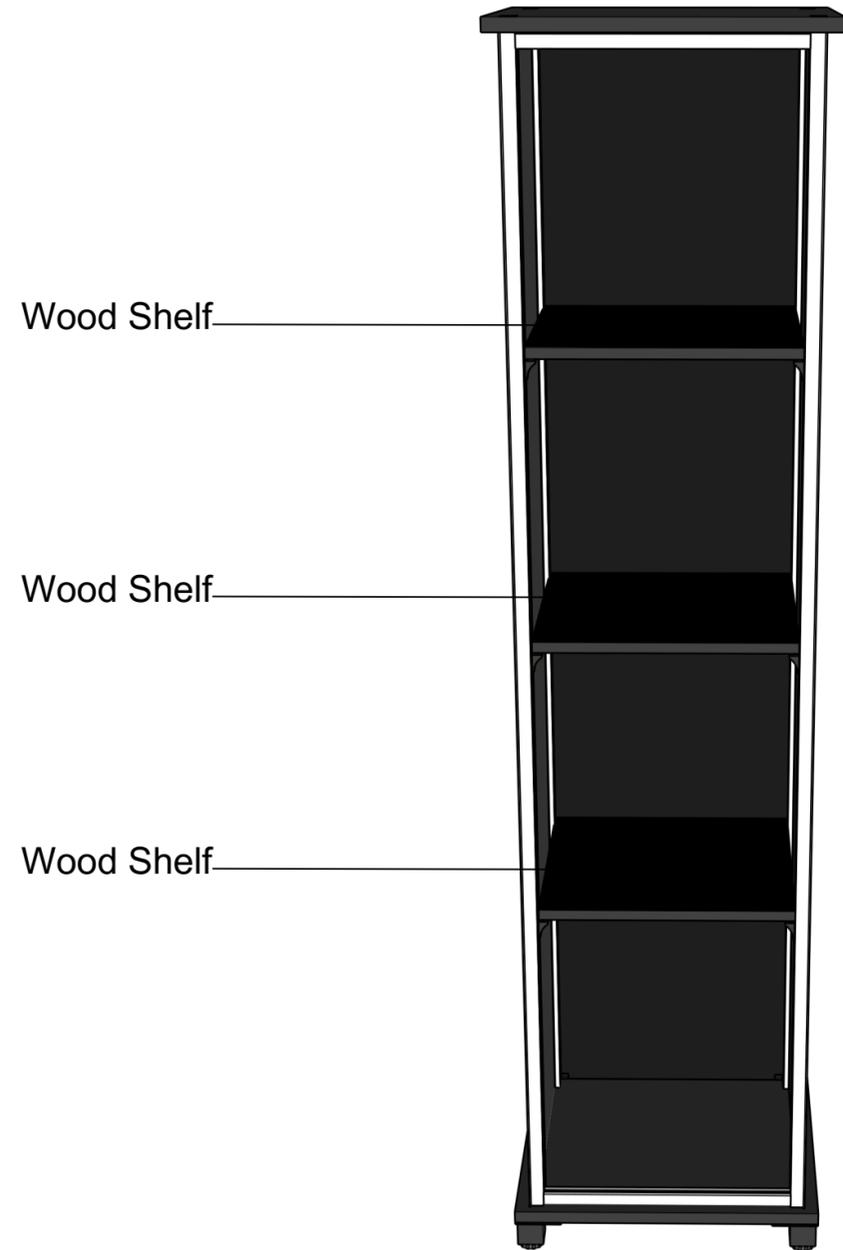


Plexiglass Version

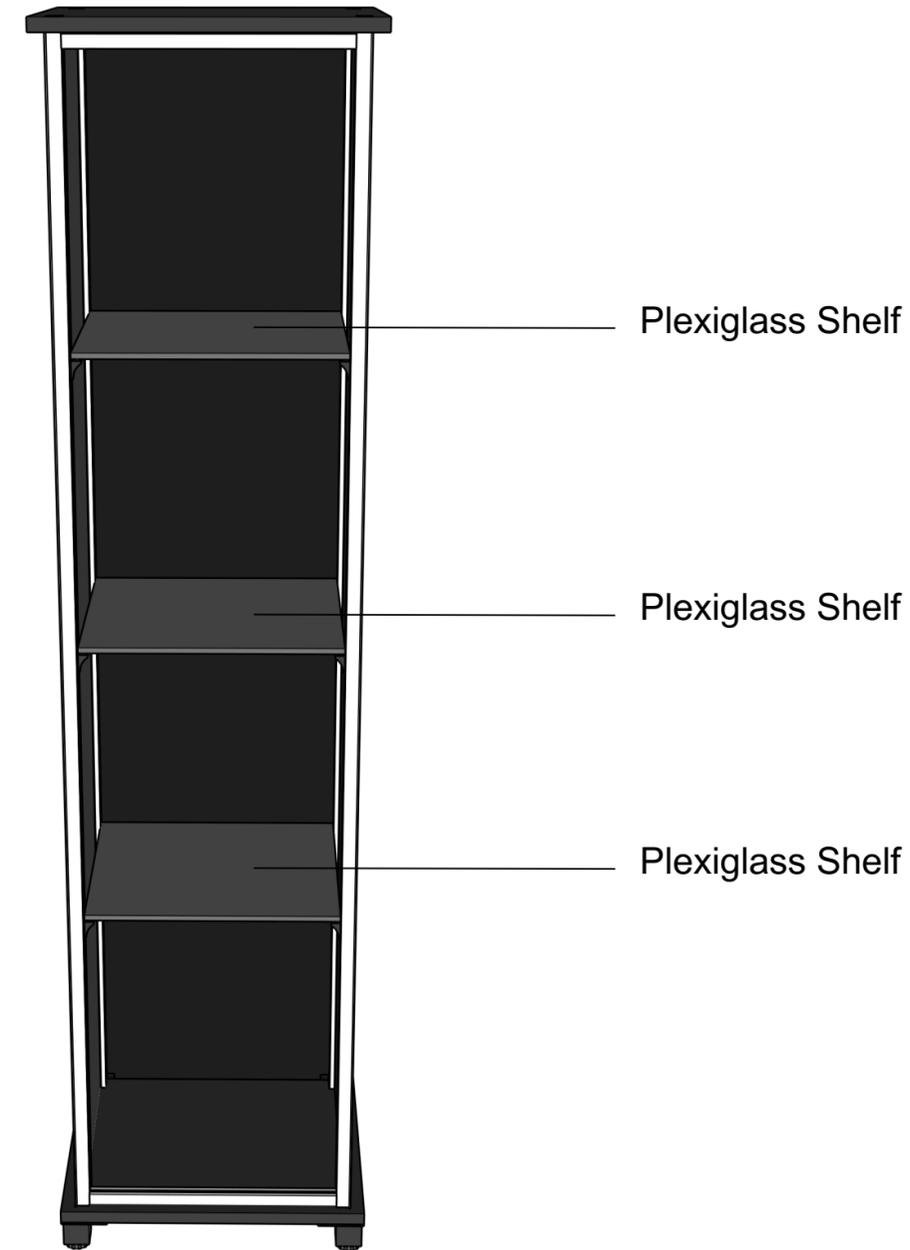


Step 9

Place the shelves on the brackets (Wood or Plexiglass)

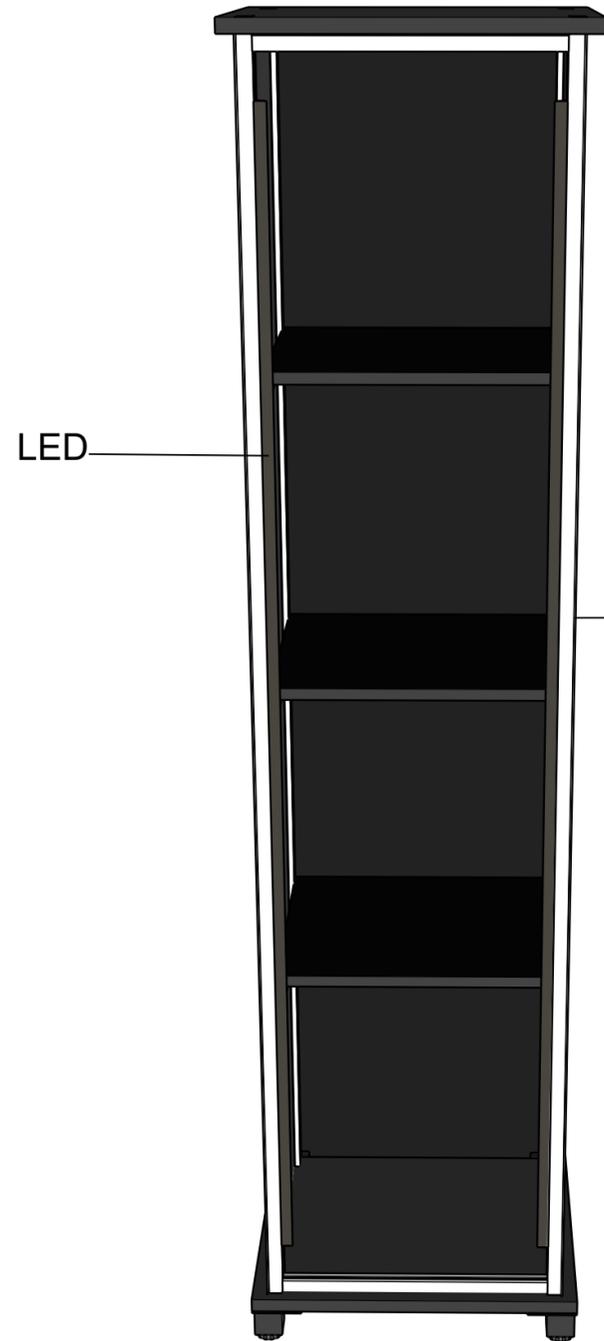

Step 10
Install the LED using the
double sided sticker provided

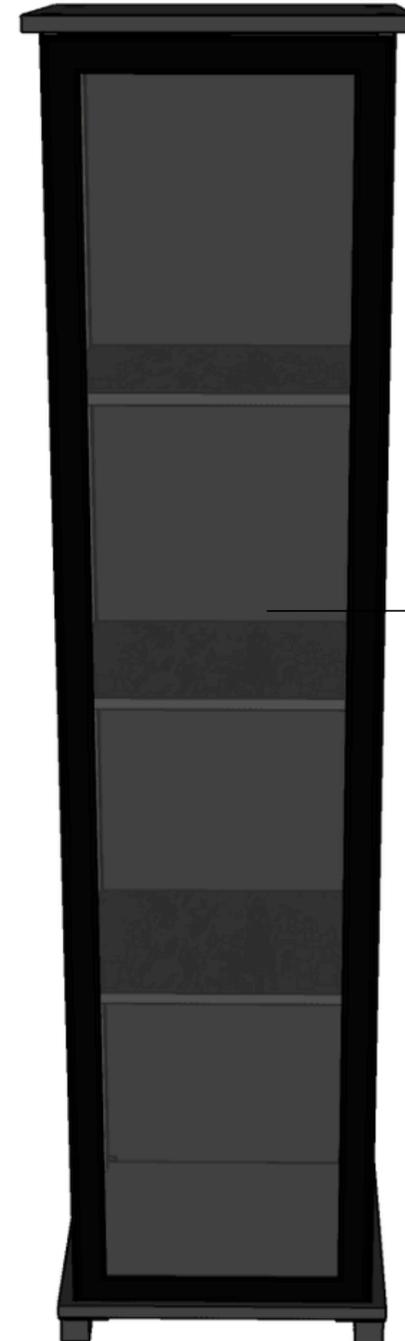

Step 11
Place the front panel